Always there to help you

Register your product and get support at www.philips.com/welcome



HTD5510 HTD5540 HTD5570

User manual



Contents

1	Important Safety Care for your product Care of the environment	2 2 3 3
2	Your home theater Main unit Remote control Connectors	4 4 4 5
3	Connect and set up Connect speakers Connect to TV Connect audio from TV and other	7 7 8
	devices Set up speakers Set up EasyLink (HDMI-CEC control)	9 10 10
4	Use your home theater Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Choose sound	12 12 13 14 14 15 16
5	Change settings Language settings Picture and video settings Audio settings Parental control settings Display settings Energy saving settings Restore default settings	17 17 17 18 18 18 18
6	Update software Check software version Update software through USB	20 20 20
7	Product specifications	21

8	Troubleshooting	23
9	Notice Copyright Compliance Trademarks	25 25 25 25
10	Language code	26
11	Index	27

1 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

 For wall-mountable products, use only the supplied wall mount bracket. Secure the

- wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
 Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

 The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.

- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.



This is CLASS II apparatus with double insulation, and no protective earth provided.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health




Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health

2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.


Main unit



- 1 Disc compartment
- 2 Display panel
- ③ ≜ (Open/Close)
 Open or close the disc compartment.
- (4) ►II (Play/Pause) Start, pause or resume play.
- (5) SOURCE
 Select an audio or video source for the home theater.
- 6 & (Standby-On) Switch the home theater on or to standby.

Remote control

This section includes an overview of the remote control.

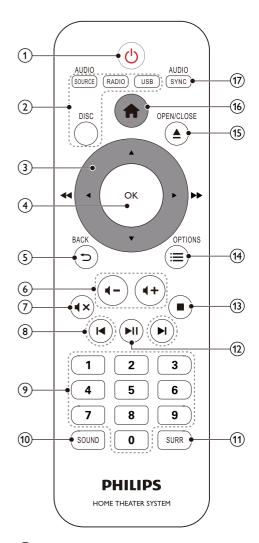

1 (Standby-On)

- Switch the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

(2) Source buttons

 DISC: Switch to disc source. Access or exit the disc menu when you play a disc.

- AUDIO SOURCE: Select an audio input source.
- RADIO: Switch to FM radio.
- USB: Switch to USB storage device.

3 Navigation buttons

- Navigate menus.
- In video mode, press left or right to fast backward or fast forward; press up or down to slow forward or slow backward (for DVD video only).
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.
- (4) **OK**Confirm an entry or selection.
- 5 SACK
 Return to a previous menu screen.
- 6 ◀+/-Increase or decrease volume.
- 7 **4× (Mute)**Mute or restore volume.
- (8) I ✓ / ►I (Previous/Next)
 - Skip to the previous or next track, chapter or file.
 - In radio mode, select a preset radio station.
- 9 Numeric buttons Select an item to play.
- (10) SOUND
 Select a sound mode.
- (1) SURR
 Select surround sound or stereo sound
- (12) ► II (Play/Pause)
 Start, pause or resume play.
- (Stop)
 Stop play.
- (15) ▲ (Open/Close)

Open or close the disc compartment.

16 **♠** (Home)

Access or exit the home menu.


(17) AUDIO SYNC

- Select an audio language or channel.
- Press and hold to access audio delay setting, then press Navigation buttons (left/right) to delay the audio to match the video.

Connectors

This section includes an overview of the connectors available on your home theater.

Front




① •<-- (USB)

Audio, video or picture input from a USB storage device.

2 AUDIO IN

Audio input from an MP3 player (3.5mm iack).

Back connectors



1 AC MAINS

Fixed AC power cable.

(2) SPEAKERS

Connect to the supplied speakers and subwoofer.

(3) VIDEO OUT

Connect to the composite video input on the TV.

(4) AUDIO IN-AUX

Connect to an analog audio output on the TV or an analog device.

(5) DIGITAL IN-OPTICAL

Connect to an optical audio output on the TV or a digital device.

(6) HDMI OUT (ARC)

Connect to the HDMI input on the TV.

(7) FM ANTENNA

Connect the supplied antenna for radio reception.

3 Connect and set up

This section helps you connect your home theater to a TV and other devices, and then set it up.

For information about the basic connections of your home theater and accessories, see the quick start guide.




Note

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

Connect speakers

The speaker cables are color-coded for easy connection. To connect a speaker to your home theater, match the color on the speaker cable to the color on the connector.

Speaker position plays a critical role in setting up a surround sound effect. For best effect, position all the speakers towards the seating position and place them close to your ear level (seated).

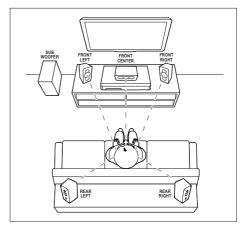

*The actual speaker shapes may vary from the illustration above.



Note

 Surround sound depends on factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics. Experiment with the speaker positions to find the optimum setting for you.

Follow these general guidelines for speakers placement.

- 1 Seating position:
 This is the center of your listening area.
- 2 FRONT CENTER (front center) speaker: Place the center speaker directly in front of the seating position, either above or below your TV.
- FRONT LEFT (front left) and FRONT RIGHT (front right) speakers:

 Place the left and right speakers in the front, and at equal distance from the center speaker. Make sure that the left, right, and the center speakers are at equal distance from your seating position.
- 4 REAR LEFT (rear left) and REAR RIGHT (rear right) speakers:

Place the rear surround speakers to the left and right side of your seating position, either in line with it or slightly behind it.

5 SUBWOOFER (subwoofer):
Place the subwoofer at least one meter
to the left or right of the TV. Leave about
10-centimeter clearance from the wall.

Connect to TV


Connect your home theater to a TV to watch videos. You can listen to the TV audio through your home theater speakers.

Use the best quality connection available on your home theater and TV.

Option 1: Connect to TV through HDMI (ARC)

Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your home theater by using a single HDMI cable.

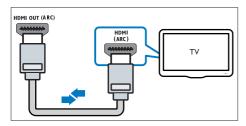


- 1 Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.
 - The HDMI ARC connector on the TV might be labeled differently. For details, see the TV user manual.
- On yourTV, turn on HDMI-CEC operations. For details, see the TV user manual.
 - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control,

- such as volume control for both the TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 10)
- If you cannot hear the TV audio through your home theater, set up the audio manually.

Option 2: Connect to TV through standard HDMI

Best quality video

If yourTV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

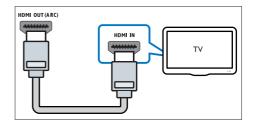

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 9).
- 3 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
 - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 10)

4 If you cannot hear the TV audio through your home theater, set up the audio manually.




Note

 If yourTV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV. However, some of the features may not be available.

Option 3: Connect to the TV through composite video

Basic quality video

If your TV does not have HDMI connectors, use a composite video connection. A composite connection does not support high-definition video.



- Using a composite video cable, connect the VIDEO OUT connector on your home theater to the VIDEO IN connector on the TV.
 - The composite video connector might be labeled AV IN, COMPOSITE, or BASEBAND.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 9).
- When you watch TV programs, press SOURCE on your home theater repeatedly to select the correct audio input.
- 4 When you watch videos, switch your TV to the correct video input. For details, see the TV user manual

Connect audio from TV and other devices

Play audio from TV or other devices through your home theater speakers.
Use the best quality connection available on your TV, home theater, and other devices.




Note

 When your home theater and TV are connected through HDMI ARC, an audio connection is not required (see 'Option 1: Connect to TV through HDMI (ARC)' on page 8).

Option 1: Connect audio through a digital optical cable


Best quality audio



- Using an optical cable, connect the OPTICAL connector on your home theater to the OPTICAL OUT connector on the TV or other device.
 - The digital optical connector might be labeled SPDIF or SPDIF OUT

Option 2: Connect audio through analog audio cables

Basic quality audio

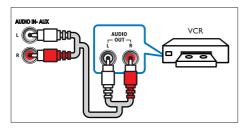

Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device.

Set up speakers

Set up the speakers manually to experience customized surround sound.

Before you start

Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Speaker Setup].
- 4 Press the Navigation buttons and OK to select and change:
 - [Speakers Volume]: Set the volume level of each speaker.
 - [Speakers Delay]: Set the delay time for speakers which are placed closer to the seating position in order to obtain equal audio transmission from all the speakers.

Set up EasyLink (HDMI-CEC control)

This home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control.



Note

- Depending on the manufacturer, HDMI-CEC is known by many names. For information on your device, see the user manual of the device.
- Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

Before you start

- Connect your home theater to the HDMI-CEC compliant device through HDMI connection.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

Enable EasyLink

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video], and then press OK.
- 4 Select [HDMI Setup] > [EasyLink Setup] > [EasyLink] > [On].
- 5 On your TV and other connected devices, turn on HDMI-CEC control. For details, see the user manual of the TV or other devices.
 - On your TV, set the audio output to 'Amplifier' (instead of TV speakers).
 For details, see the TV user manual.

EasyLink controls

With EasyLink, you can control your home theater, TV, and other connected HDMI-CEC compliant devices with a single remote control.

- [One Touch Play] (One-touch play): If one-touch play is enabled, press & (Standby-On) on the remote control of your home theater to wake up the TV from standby.
- [One Touch Standby] (One-touch standby): If one-touch standby is enabled, your home theater can switch to standby with the remote control of the TV or other HDMI-CEC devices.
- [Sys Audio Control] (System audio control): If system audio control is enabled, the audio of the connected device is output through your home theater speakers automatically when you play the device.
- [Audio Mapping] (Audio input mapping):If system audio control does not work, map the connected device to the correct audio input connector on your home theater.



To change the EasyLink control settings, press ↑
 (Home), select [Setup] > [Video] > [HDMI Setup] >
 [EasyLink Setup] > [EasyLink].

Set up the audio

If you cannot hear the audio output of a connected device through your home theater speakers, do the following:

- Check that you have enabled EasyLink on all the devices (see 'Set up EasyLink (HDMI-CEC control)' on page 10) and
- on yourTV, set the audio output to "Amplifier" (instead ofTV speakers). For details, see the TV user manual, and
- setup the EasyLink audio control.
- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.

- 3 Select [Video], and then press OK.
- 4 Select [HDMI Setup] > [EasyLink Setup] > [Sys Audio Control] > [On].
 - To play the audio from the TV speakers, select [Off], and skip the following steps.
- Select [HDMI Setup] > [EasyLink Setup][Audio Mapping].
- 6 Follow the onscreen instructions to map the connected device to the audio inputs on your home theater.
 - If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

4 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

- Make the necessary connections described in the Quick start guide and the user manual.
- Switch the TV to the correct source for the home theater.
- 1 Press **(Home)**.
 - → The home menu is displayed.
- 2 Press the Navigation buttons and OK to select the following:
 - [DISC]: Start disc play.
 - **[USB]**: Access the USB content browser.
 - [Setup]: Access menus to change video, audio and other settings.
- 3 Press ♠ (Home) to exit.

Discs

Your home theater can play DVDs, VCDs, and CDs. It can also play discs that you've made at home, such as CD-R discs of photos and music.

- 1 Insert a disc into the home theater.
- 2 If the disc does not play automatically, press DISC or select [DISC] from the home menu.
- Press the play buttons to control play (see 'Play buttons' on page 12).

Play buttons

Button	Action
Navigation	Navigate menus.
buttons	
OK	Confirm an entry or selection.
► II (Play/	Start, pause or resume play.
Pause)	
	Stop play.
	Skip to the previous or next track, chapter or file.
44/	Fast backwards or fast forwards. Press repeatedly to change the search speed.
Navigation buttons (left/right)	Rotate the picture clockwise or counter-clockwise.
Navigation buttons (up/down)	Flip the picture vertically or horizontally.
DISC	Access or exit the disc menu.
AUDIO SYNC	Select an audio language or channel.
≡ OPTIONS	Access more options when you play your audio, video, or media files. (see 'Audio, video, and picture options' on page 14)

Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 While playing video, press and hold AUDIO SYNC.
 - → Audio sync menu is displayed.
- Press the Navigation buttons (left/right) to synchronize the audio with the video, and then press OK.



 Picture and sound can be synchronized through the setup menu, press (Home), select [Setup] > [Audio] > [Audio Sync].

Display menu for VCD and SVCD

Display the content menu on VCD and SVCD discs.

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Preferences] > [PBC].
 - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

Data files

Your home theater can play pictures, audio and video files contained in a disc or a USB storage device. Before you play a file, check that the file format is supported by your home theater (see 'File formats' on page 21).

- 1 Play the files from a disc or USB storage device.
- 2 To stop play, press ■.
 - To resume the video from where you stopped, press ► (Play).
 - To play the video from the start, press
 OK



Note

 To play DivX DRM protected files, connect your home theater to a TV through an HDMI cable.

Subtitles

If your video has subtitles in multiple languages, select a subtitle language.



Note

- Make sure that the subtitle file has the exact same name as the video file. For example, if the video file is named 'movie.avi', name the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater supports the following file formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. If the subtitles do not appear correctly, change the character set.
- 1 Press **□ OPTIONS**, and select a subtitle language under **SUBTITLE** option.
- 2 For DivX videos, if the subtitles do not appear correctly, continue the following steps to change the character set.
- 3 Press ♠ (Home).
- 4 Select [Setup], and then press OK.
- 5 Select [Preferences] > [DivX Subtitle].
- 6 Select a character set that supports the subtitle.

Character Set	Language
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Eur]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian
[Greek]	Greek

VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.

- 3 Select [General] > [DivX(R) VOD Code].
 - → The DivX VOD registration code for your home theater is displayed.

USB storage devices

Enjoy pictures, audio, and video stored on a USB storage device such as an MP4 player.

What you need

- A USB storage device that is formatted for FAT or NTFS file system, and complies with the Mass Storage Class.
- A media file in one of the supported file formats. (see 'File formats' on page 21)



Note

- If you use a USB extension cable, USB HUB or USB multi-reader, the USB storage device may not be recognized.
- 1 Connect a USB storage device to the (USB) connector on your home theater.
- 2 Press USB.
 - → A content browser is displayed.
- 3 Select a file and then press OK.
- 4 Use the play buttons to control play.

Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

Audio options

1 While playing audio, press **≡ OPTIONS** repeatedly to select a repeat mode.

Video options

- 1 While viewing video, press **≡ OPTIONS**.
 - → The video options menu is displayed. Depending on the video source, some options are not available.
- Press the Navigation buttons buttons and OK to select and change:
 - [Info]: Display the play information.
 - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.
 - [Aspect ratio]: Select a display ratio of picture that matches your TV screen.
 - [Repeat]: Select a repeat play mode.
 - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
 - [Subtitle]: Select subtitle language for video.
 - [Angle]: Select video scenes recorded in different camera angels.

Picture options

- 1 While viewing pictures, press ≡ OPTIONS
- 2 Press the Navigation buttons and OK to select and change:
 - [Color]:Turn on or off the color mode.
 - [Photo preview]: Display the thumbnail of photos.
 - [Repeat]: Select a repeat mode for slideshow.
 - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
- Press I◄/►I to go to previous or next preview page.
- Press the Navigation buttons and OK to select a picture.

Musical slideshow

If the picture and audio files are from the same disc or USB storage device, you can create a musical slideshow.

- 1 Select an audio track and then press **OK**.
- 2 Press SACK and then go to the picture folder.
- 3 Select a picture and then press **OK** to start the slideshow.
- 4 Press to stop slideshow.
- 5 Press again to stop music.

Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.



Note

- · AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- 1 Connect the FM antenna to the FM ANTENNA on your home theater.
 - For the best reception, place the antenna away from your TV or other sources of radiation.
- 2 Press RADIO to switch to radio source.
 - If you have already installed the radio stations, the last channel that you listened to is played.
 - If you have not installed any radio stations, the message AUTO INSTALL...PRESS PLAY appears on the display panel. Press ► (Play).
- 3 Use the remote control to listen or to change radio stations.

Play buttons	
Button	Action
 	Select a preset radio station.
or	
Alphanumeric	
buttons	
Navigation	Left/Right: Search for a radio
buttons	station.
	Up/Down: Fine tune a radio
	frequency.
	Press to stop the installation
	of radio stations.
	Press and hold to erase the
	preset radio station.
RADIO	Manual:
	1) In radio mode, press
	RADIO. 2) When a radio
	frequency blinks, press OK
	to store the radio station. 3)
	Repeat step 1 and 2 to store
	other stations.
	Automatic:
	In radio mode, press and
	hold RADIO for three
	seconds to reinstall all the
	available radio station.

Tuning grid

In some countries, you can toggle the FM tuning grid between 50 kHz and 100 kHz.

- 1 Press RADIO to switch to radio source.
- 2 Press ■.
- 3 Press and hold ► (Play) to toggle between 50 kHz or 100 kHz.

MP3 player

Connect a MP3 player to play audio files.

What you need

- An MP3 player.
- A 3.5mm stereo audio cable.
- Using the 3.5mm stereo audio cable, connect the MP3 player to the AUDIO IN connector on your home theater.
 - If you use 6.5mm stereo audio cable, connect the MP3 player to your home theater using a 3.5mm - 6.5mm converter jack.
- Press AUDIO SOURCE repeatedly until AUDIO IN appears on the display panel.
- 3 Press the buttons on the MP3 player to select and play audio files.

Choose sound

This section helps you choose the ideal sound for your video or music.

Sound mode

Select predefined sound modes to suit your video or music.

- 1 Press **SOUND** repeatedly to select a sound mode
 - MOVIE: Enjoy a cinematic audio experience, specially enhanced for movies.
 - MUSIC: Recreate the original recording environment of your music, in the studio or at a concert.
 - ORIGINAL: Experience the original sound of your movies and music, without added sound effects.
 - NEWS: Hear every word with optimized speech and clear vocals.

 GAMING: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.

Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press SURR repeatedly to select a surround mode.
 - MULTI-CH: Traditional 5.1 channel for a more relaxing cinematic experience.
 - STEREO: Two-channel stereo sound. Ideal for listening to music.



Vote

 If the audio source is a 2.1 channel, multi-channel mode will output 5-channel stereo sound.

Change settings

The home theater settings are already configured for optimal performance. Unless you have a reason to change a setting, we recommend that you keep the default setting.



- · You cannot change a setting that is grayed out.
- To return to the previous menu, press → BACK. To exit the menu, press fr (Home).

Language settings

Onscreen display language

- Press **\Pi** (Home).
- Select [Setup] and then press OK.
- Select [General] and then press OK.
 - [OSD Language]: Select a display language for menu.

Disc language

- Press **(Home)**.
- Select [Setup] and then press OK.
 - Select [Preferences] and then press OK.
 - [Audio]: Select an audio language for
 - [Subtitle]: Select a subtitle language for discs.
 - [Disc Menu]: Select a menu language for discs.



- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 26).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Picture and video settings

- Press **(Home)**.
- Select [Setup] and then press OK.
- Select [Video] and then press OK.
 - [TV System]: Select a video format supported by the TV.
 - [TV Display]: Select a picture format to fit the TV screen.
 - [Picture Setting]: Select animation for the slide show.
 - [HD JPEG]: Enable this feature to view high-definition JPEG pictures through HDMI connection
 - [HDMI Setup]: Access the following setup through HDMI connection.
 - * [Resolution]: Select a resolution for high definition videos.
 - * [HDMI Deep Color]: Recreate the natural world on your TV screen by displaying vivid images using billion colors. Your home theater must be connected to a Deep Color enabled TV through an HDMI cable.
 - * [Wide Screen]: Select a display format for wide screen videos.
 - * [EasyLink Setup]: Set up EasyLink control (see 'Set up EasyLink (HDMI-CEC control)' on page 10).



Note

 If you change a setting, make sure that the TV supports the new setting.

Audio settings

1 Press ♠ (Home).

Select [Setup] and then press OK.

Select [Audio] and then press OK.

- [HDMI Audio]: Set the HDMI audio output from your TV, or disable HDMI audio output from the TV.
- [Audio Sync]: Set audio delay if audio and video cannot be matched.
- [Speaker Setup]: Set up speakers for best surround sound experience.
- [Sound Mode]: Select a predefined sound mode to suit your video and music.
- [Treble/Bass]: Set the high frequency (treble) and low frequency (bass) settings of the home theater.
- [Night Mode]: Select quiet or full dynamic sound. Night mode decreases the volume of loud sounds and increases volume of sounds such as speech. Applicable to Dolby Digital encoded DVD discs only.

Parental control settings

Password and Ratings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] and then press OK.
 - [Password]: Set or change your password for parental control access.
 If you do not have a password or have forgotten your password, enter 000000.
 - [Parental Control]: Enable maturitybased restricted access for playback of DVD-video that are recorded with ratings. To play discs irrespective of the rating, select [8 Adult].

Lock disc

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
 - Select [General] and then press OK.
 - [Disc Lock]: Lock the disc to restrict play. You can lock up to 20 discs on your home theater:



Note

 To play a locked disc, follow the onscreen instructions to enter the password, and then press OK.

Display settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] and then press OK.
 - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

Energy saving settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [General] and then press OK.
 - [Display Dim]: Set the brightness of the home theater front panel display.
 - [Sleep Timer]: Switch the home theater to standby mode after the elapsed time.
 - [Auto Standby]: Switch the home theater to standby mode after 25 minutes of no activity when in disc or USB mode.

Restore default settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] > [Default], and then press OK.
- 4 Follow the onscreen message to restore default setting.
 - Your home theater is reset to its default settings, except for password, parental control and disc lock settings.

6 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/ support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.



Caution

 Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

Check software version

Check the version of the current software installed on your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] > [Version Info].
 - → The software version is displayed.

Update software through USB

What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 75MB of memory.
 Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

Step 1: Download the latest software

- 1 Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips. com/support.
- At the Philips Support website, find your product and locate the **Software and drivers**.
 - → The software update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
- **6** Disconnect the USB flash drive from your computer.

Step 2: Update the software



Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
 - Make sure that the disc compartment is closed and there is no disc inside.
- 2 Switch your TV to the correct source for your home theater.
- Follow the onscreen instructions to confirm the update.
 - → Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

7 Product specifications



Note

 Specifications and design are subject to change without notice.

Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD
Europe, United Kingdom	
Asia Pacific, Taiwan, Korea	
Latin America	
Australia, New Zealand	
Russia, India	
China	

Media formats

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX media, USB storage device

File formats

Audio: .mp3, .wma

- Video: .avi, .divx, .mpg, .mpeg,
- Picture: .jpg, .jpeg

Amplifier

- Total output power: 1000W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
 - AUX: 2 V
 - AUDIO IN: 1 V

Video

- Signal system: PAL / NTSC/Multi
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p

Audio

- S/PDIF Digital audio input:
 - Optical:TOSLINK
- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz. 48 kHz
- Constant bit rate:
 - MP3: 32 kbps 320 kbps
 - WMA: 64 kbps 192 kbps

Radio

- Tuning range:
 - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
 - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 200 Hz-12.5 kHz / ±6 dB

USB

• Compatibility: Hi-Speed USB (2.0)

- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS
- USB port: 5V ==, 500mA

Main unit

- Power supply:
 - Europe/China/Russia/India: 220-240V~,
 50 Hz
 - Latin America/Asia Pacific: 110-240V~, 50-60 Hz
- Power consumption: 140 W
- Standby power consumption: ≤ 0.5 W
- Dimensions (WxHxD): 360 x 58 x 325 mm
- Weight: 2.3 kg

Subwoofer

- Output power: 166 W RMS (30% THD)
- Impedance: 4 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Dimensions (WxHxD):
 178 x 300 x 343 mm
- Weight: 3.66 kg
- Cable length: 3.3 m

Speakers

Center speaker:

- Output power: 166 W RMS (30% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 78 mm (3") full range
- Dimensions (WxHxD):
 223 x 100 x 80 mm
- Weight: 0.65 kg
- Cable length: 2.25 m

Front/Rear speaker:

- Output power: 4 x 166 W RMS (30% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 78 mm (3") full range
- Dimensions (WxHxD):
 - HTD5510: 90 × 185 × 82 mm (front/rear)

- HTD5540: 90 x 185 x 82 mm (front); 247 x 1090 x 242 mm (rear)
- **HTD5570**: 247 × 1090 × 242 mm (front/rear)
- Weight (front):
 - HTD5510: 0.53 kg/each
 - HTD5540: 0.53 kg/each
 - HTD5570: 2,66 kg/each
- Weight (rear):
 - HTD5510: 0.56 kg/each
 - HTD5540/HTD5570: 2.72 kg/each
- Cable length (front): 3.25 m
- Cable length (rear): 10.25 m

Remote control batteries

1 x AAA-R03-1.5 V

Laser

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 650-662 nm (DVD), 785-795 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

8 Troubleshooting

A

Warning

 Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www. philips.com/support.

Main unit

The buttons on the home theater do not work.

 Disconnect the home theater from the power supply for a few minutes, then reconnect.

Picture

No picture.

 Make sure that the TV is switched to the correct source for the home theater.

No picture on a TV connected through HDMI.

- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable
- Wait for 10 seconds for auto recovery, or change the HDMI video setting (see 'Picture and video settings' on page 17).

Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

Sound

No sound from home theater speakers.

- Connect the audio cable from your home theater to yourTV or other devices (see 'Connect audio from TV and other devices' on page 9).
- Reset your home theater to its factory settings (see 'Restore default settings' on page 19), then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted.

Audio and video are not synchronized.

 1) Press and hold AUDIO SYNC. 2) Press the Navigation buttons (left/right) within five seconds to synchronize the audio with the video.

Play

Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 21).
- Make sure that the home theater supports the region code of the disc.
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

DivX subtitles do not display correctly.

 Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 13). • Select the correct character set (see 'Subtitles' on page 13).

Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater.

'input invalid' or 'x' sign appears on the TV.

• The operation is not possible.

EasyLink does not work.

- Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is turned on (see 'Set up EasyLink (HDMI-CEC control)' on page 10).
- For TVs from different manufacturers, the HDMI CEC could be called differently. Check the TV user manual on how to enable it

When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

9 Notice

This section contains the legal and trademark notices.

Copyright



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Compliance



This product complies with the radio interference requirements of the European Community.

Trademarks



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX °, DivX Ultra °, DivX Certified ° and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Ultra ® Certified to play DivX ® video with advanced features and premium content. ABOUT DIVX VIDEO: DivX * is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified * device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified * device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivXVOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

HDMI^{TI}

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



25

10 Language code

Abhtazian 6566 Inupiaq 7375 Pushto 8083 Afar 6565 Irish 7165 Russian 8285 Afrikaans 6570 Islenska 7383 Quechua 8185 Amharic 6577 Italiano 7384 Racto-Romance 8277 Arabic 6581 Jayanese 7465 Rundi 8278 Armenia 6583 Jayanese 7486 Rundi 8278 Avestan 6589 Kahallisut 7576 Sango 8371 Ayerhajani 6590 Kashmiri 7583 Sardinian 8365 Azerhajani 6590 Kashmiri 7583 Sardinian 8367 Bahkir 6666 Khmer 7577 Shap Sardinian 8387 Belarusia 6667 Kimyarwanda 8287 Sindhi 8388 Bilama 6672 Kirjarvanda 8287 Sindhi 8378 Bokmäli 6678 Komi						
Afrikaans 6570 Islenska 7383 Quechua 8185 Arnharic 6577 Italiano 7384 Raeto-Romance 8277 Arrabic 6582 Ivrit 7259 Romanian 8279 Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7486 Samoan 8377 Avestan 6569 Kalallisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaljani 6590 Kashmiri 7583 Sardinian 83878 Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6678 Kirghiz 7589 Sinhalese 8373 Bilani 6672 Kirghiz 7589 Sinhalese 8373 Bosanski 6683 Kuanyama; Kwanyama 7579 Slovensky 8373 Brezhoneg 66812 Kurdish	Abkhazian	6566	Inupiaq	7375	Pushto	8083
Arnharic 6572 Italiano 7384 Raeto-Romance 8277 Arabic 6582 Ivrit 7269 Romanian 8278 Armenian 7289 Japanese 7486 Samoan 8377 Assamese 6589 Kalalisut 7576 Sango 8371 Aymara 6589 Kashmiri 7583 Sardinian 8365 Azerhajini 6590 Kashmiri 7583 Sardinian 8365 Bahsa Melayu 7783 Kazakh 7575 Serbian 8382 Belarusian 6665 Kernewek 7587 Shona 8378 Belarusian 6678 Kimyarwanda 8287 Sindhi 8381 Belarusian 6673 Kiriyarwanda 8287 Sindhi 8388 Bilarian 6672 Kirghiz 7589 Slovenish 3373 Bokmål, Norwegian 7866 Korean 7579 Slovenish 3373 Bokmål, Norwegian 7866	Afar	6565	Irish	7165	Russian	8285
Arabic 6582 Ivrit 72.69 Romanian 82.79 Armenian 7289 Japanese 7465 Rundi 92.78 Assamese 6583 Javanese 7465 Samoan 83.77 Avestan 6589 Kalaalilisut 7576 Sango 83.71 Aymara 6589 Kananda 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shqip 8381 Belarusian 6672 Kirghiz 7586 Slovensky 8373 Bishari 6672 Kirghiz 7586 Slovensky 8373 Bosanski 6683 Kuaryama; Kwanyama 7574 Somali 8376 Brezhoneg 6671 Lao 7679 Slovenian 8373 Brezhoneg 6682 Kurdish <td< td=""><td>Afrikaans</td><td>6570</td><td>Íslenska</td><td>7383</td><td>Quechua</td><td>8185</td></td<>	Afrikaans	6570	Íslenska	7383	Quechua	8185
Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7486 Samoan 8377 Averstan 6589 Kalaallisut 7576 Sango 8371 Aymara 6589 Kahmiri 7578 Sanskrit 8365 Sambalisa 7578 Sanskrit 8365 Sambalisa 7578 Sanskrit 8365 Sambalisa 7583 Sardinian 8367 Sansakrit 8365 Sambalisa Sansakrit 8365 Sansakrit 8365 Sansakrit 8365 Sansakrit 8365 Sansakrit 8367 Sansakrit 8367 Sansakrit 8367 Sansakrit 8367 Sansakrit 8368 Sansakrit 8368 Sansakrit 8378 S	Amharic	6577	Italiano	7384	Raeto-Romance	8277
Assamese 6589 Kalaalisut 7576 Samoon 8377 Avestan 6589 Kalaalisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashas Melayu 7783 Kazakh 7575 Scrbian 8382 Bashkir 6669 Khene 7587 Shona 8378 Belarusian 6678 Kirghiz 7589 Sindhi 3368 Bihari 6673 Komi 7586 Slovensky 3373 Bishama 6673 Komi 7586 Slovensky 3373 Bosanski 6683 Kuaryama: Kwanyama 7579 Slovenian 3376 Brezhoneg 6681 Kurdish Sundianese 3385 Brezhoneg 6682 Kurdish Sundianese 3385 Carelalano, Español 6983 Latvian 7686 Suomi	Arabic	6582	lvrit	7269	Romanian	8279
Avestan 6569 Kalaallisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhajjani 6590 Kashmiri 7383 Sardinian 3367 Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bahasa Melayu 7686 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Ship 8381 Belarusian 6672 Kirghiz 7589 Sindhi 8368 Bihari 6673 Komi 7586 Slovensky 8373 Bosanski 6681 Kurdish 7589 Slovensky 8373 Bosanski 6682 Kurdish 7585 Sovensky 8378 Burmese 7789 Latina 7665 South Ndebele 7882 Burmese 7789 Latina 7665 Suomi 7073 Castellano, Español 6981 Latvian	Armenian	7289	Japanese	7465	Rundi	8278
Aymara 6589 Kannada 7578 Sanskrit 3365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashkir 6665 Kernewek 7587 Serbian 8382 Bashkir 6665 Kernewek 7587 Shqip 8381 Bengali 6678 Kinyarwanda 8287 Sindhi 8368 Bishari 6672 Kirghiz 7589 Sinhalese 3373 Bishari 6672 Kirghiz 7589 Sinhalese 3373 Bokmali, Norwegian 7866 Korean 7579 Slovensky 8373 Bosanski 6681 Kuanyama: Kwanyama 7574 Sombilanese 8387 Brezhoneg 6682 Kurdish 7585 Sonto: Southern 8384 Bulgarian 6671 Lao 7679 South Mdebele 7882 Burmese 7789 Latvian 7665 Suomi 7073 Castellano, Español 6983	Assamese	6583	Javanese	7486	Samoan	8377
Azerhaijani 65 90 Kashmiri 7583 Sardinian 8367 Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bahasa Melayu 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shop 8381 Bihari 6678 Kinyarwanda 8287 Sindhi 8368 Bihari 6673 Komi 7589 Sinhalese 8373 Bokmali, Norwegian 7866 Korean 7589 Sinhalese 8373 Bosanski 6681 Kurdish 7589 Slovensky 8373 Bosanski 6682 Kurdish 7585 Sototho; Southern 8384 Bulgarian 6671 Lao 7679 South Mebele 7882 Burmese 7789 Latina 7665 Sundanese 3385 Castalano, Español 6983 Latvian 7686 Suomi 7073 Swati 8383 Ch	Avestan	6569	Kalaallisut	7576	Sango	8371
Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bashkir 6665 Kernewek 7587 Shona 8378 Bengali 6678 Kimyarwanda 8287 Shqip 8381 Bengali 6672 Kirghiz 7589 Sinhalese 8373 Bislama 6673 Komi 7586 Slovensky 8373 Bokmali, Norwegian 7866 Korean 7579 Slovensky 8373 Bosanski 6683 Kuanyama: Kwanyama 7574 Sombil 8379 Brezhoneg 6682 Kurdish 7585 South: Notebele 8385 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7686 Swati 8383 Chekene: Chicheva: Nyanja 7889 Lithuanian 7686 Swati 8383 Chekeni, Chicheva: Nyanja 7889 <t< td=""><td>Aymara</td><td>6589</td><td>Kannada</td><td>7578</td><td>Sanskrit</td><td>8365</td></t<>	Aymara	6589	Kannada	7578	Sanskrit	8365
Bahsas Melayu 7783 Kazakh 7575 Serbian 8382 Bashkir 6665 Kernewek 7587 Shona 8378 Bengali 6678 Kinyarwanda 8287 Shaip 8381 Bengali 6672 Kirghiz 7589 Sinhalese 8373 Bislama 6673 Korni 7586 Slovensky 8373 Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Brezhoneg 6680 Kurdish 7585 Sovenian 8376 Bugraria 6671 Lao 7679 South Mebele 7882 Burmese 7789 Latina 7665 Suadinaese 3385 Castellano, Español 6983 Latvian 7666 Swahili 8387 Charlán 6765 Letzeburgesch; 7666 Swahili 8387 Cheken 6769 L	Azerhaijani	6590	Kashmiri	7583	Sardinian	8367
Bashkir 6665 Kenrewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shqip 8381 Bihari 6678 Kinyarvanda 8287 Sindhie 83373 Bislama 6673 Komi 7586 Slovensky 8373 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Bosanski 6681 Kuanyama; Kwanyama 7574 Somali 8379 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Suchanese 8385 Castalán 6765 Letzeburgesch; 7666 Suomi 7073 Cheden 6772 Limburgan; Limburger 7673 Swati 8385 Chewa; Chichewa; Nyanja; 7889 Lithuanian 7684 Tagalog 8476 Chuard, Zhuang 9065 Luxembourgish; 7666 Tahitian 8489 Chuard, Siavei; Slavonic <t< td=""><td></td><td>7783</td><td>Kazakh</td><td>7575</td><td>Serbian</td><td>8382</td></t<>		7783	Kazakh	7575	Serbian	8382
Bengali 6672 Kirghiz 7589 Sindhi 8368 83173 83175 83173 83175 83173 83175 8		6665	Kernewek	7587	Shona	8378
Bengali 6672	Belarusian	6669	Khmer	7577	Shaip	8381
Bislama 6673 Komi 7586 Slovensky 8373 Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 83779 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7665 Suomi 7073 Castellano 6765 Larvian 7666 Suomi 7073 Castellano 6767 Limburgan; Limburger 7673 Swati 8383 Chewa; Chichewa; Nyanja 7889 Lingala 7678 Svenska 8386 Pt 文 9072 Luxembourgish; 7666 Tabritian 8489 Pt X 9072 Luxembourgish; 7666 Tabritian 8489 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Marathi 7782 Tonga Tonga Tonga Ray Deutsch 6890 Marathi 7782 Tonga Turkmen 8473 Dzongkha 6890 Marathi 7782 Tonga Turkmen 8478 Esperanto 6979 Moldavian 7779 Tigrinya 8473 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Euskara 6985 Nauru 7865 Turkmen 8475 Euskara 6998 Navaho; Navajo 7886 Turkmen 8475 Erosee 7079 Ndebele, North 7882 Ukrainian 8571 Français 7082 Ndebele, South 7882 Weish 6789 Gaelic; Scottish Gaelic 7168 Norther Sami 8369 Welsh 6789 Gaelic; Scottish Gaelic 7168 Norther Sami 8369 Welsh 6789 Gaelic; Scottish Gaelic 7178 Northernami 7879 Volapuk 8582 Gaelic; Scottish Gaelic 7178 Northernami 7185 Occitan; Provencal 7967 7982 7900 Hird Motu 7273 Oromo 7977 7982 7900 7917 Hird Motu 7273 Oromo 7977 7982 7900 7917 Hird Motu 7273 Polski 8005 8076 8076 807	Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Borezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Summi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Tajalog 8477 Tajalog 8478 Tajalog 8478	Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuaryama; Kwanyama 7574 Somali 8379 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundianese 8385 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Cheken 6769 Lingala T678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lirbuanian 7684 Tagalog 8476 Chewa; Chichewa; Slavonic 6785 Macedonian 7775 Tajik 8471 Churash Slavic; Slavonic 6785 Malagasy 7721 Tamil 8465 Churash Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465	Bislama	6673	Komi	7586	Slovensky	8373
Bosanski 6682 Kuanyama; Kwanyama 7574 Somali 8379 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Burmese 7789 Latina 7665 South Ndebele 7882 Burmese 7789 Latina 7665 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahil 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Chechen 6769 Lingala 7678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 chwż 9072 Luxembourgish; 7666 Tahitian 8489 Churdonian 7775 Tajik 8471 141 Churagi Zhuang 9065 Macedonian 7775 Tajik 8471 Churash 6786 Magyar 7285 Tatar 8484 Chursh 6869 Maltese <td>Bokmål, Norwegian</td> <td>7866</td> <td>Korean</td> <td>7579</td> <td></td> <td>8376</td>	Bokmål, Norwegian	7866	Korean	7579		8376
Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384		6683	Kuanyama: Kwanyama	7574	Somali	8379
Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7686 Sumin 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Tahitian 8489 Third 1889 Third 1		6682		7585	Sotho: Southern	8384
Burmese 7789		6671	Lao	7679	South Ndebele	7882
Castellano, Español 6983 Latvian 7686 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7666 Swahili 8383 Chevan; Chichewa; Nyanja 7889 Lingala 7678 Svenska 8386 Chevan; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 ф 文 9072 Luxembourgish; 7666 Tahititan 8489 Churash 6785 Maredonian 7775 Tajik 8471 Churash 6785 Macedonian 7775 Tajik 8471 Churash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malagasy 7771 Tamil 8465 Casky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Marshilese <td< td=""><td>•</td><td>7789</td><td>Latina</td><td>7665</td><td>Sundanese</td><td>8385</td></td<>	•	7789	Latina	7665	Sundanese	8385
Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Chechen 6769 Lingala 7678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 th x 9072 Luxembourgish; 7666 Tahitian 8489 Chunds Church Slavic; Slavonic 6785 Macedonian 7775 Tajiik 8471 Churds 6786 Magyar 7285 Tatar 8465 Chuvash 6786 Magyar 7285 Tatar 8464 Corsican 6779 Malayalam 7776 Telugu 8469 Cesky 6783 Martese 7784 Thai 8472 Dansk 6865 Manx 7186 Tiperina 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 English 6978 Ma		6983	Latvian	7686	Suomi	7073
Chamorro 6772		6765			Swahili	
Chechen			•		Swati	8383
Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 中文 9072 Luxembourgish; 7666 Tahitian 8489 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Corsican 6779 Malayalam 7776 Telugu 8469 Corsican 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8472 Deutsch 6869 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian	Chechen	6769		7678	Svenska	8386
中文 9072 Luxembourgish; 7666 Tahittian 8489 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Exbληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Gaurani 7178 North Nedele 7868 Welsh 6789 Guarani 7178 North Nedele 7868 Welsh 6789 Guarani 7178 North Norsk 7879 Volapuk 8679 Guijarati 7185 Occitan; Provencal 7967 Xhosa 8872 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Interlingue 7365 Polski 8076				7684		8476
Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 77778 Tisvana 8478 Estonian 6984 Mongolian 7778 Tivkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho: Navajo						
Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6869 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 9478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 9475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, South						
Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6978 Marshallese 7772 Tsonga 8483 Esperanto 6978 Mongolian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Eukara 6985 Nauru 7865 Turkmen 8475 Eachira 6985 Nauru 7865 Twitkmen 8475 Faroese 7079 Ndebele, North 7888		6785		7771		8465
Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Esperanto 6985 Nauru 7865 Turkmen 8475 Euskara 6985 Nauru 7865 Turkmen 8475 EAhyuká 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Fracais 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871<			0 ,			
Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7778 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Türkmen 8475 Eληγικά 6976 Navaho; Navajo 7886 Twi 9487 Faroese 7079 Ndebele, North 7886 Twi 9487 Faroese 7079 Ndebele, South 7882 Ukrainian 9575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876		6779				8469
Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho: Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Frjijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Guijarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Interlingua (International) 7365 Persian 7065 Interlingua (International) 7365 Persian 7065 Interlingua (International) 7365 Polski 8076		6783				8472
Deutsch			Manx	7186	Tibetan	6679
Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 EAληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7888 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 No		6869	Maori	7773		8473
English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estenian 6984 Mongolian 7778 Tirkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hirri Motu 7279 Ossetian; Ossetic 7983 Herwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingue 7365 Polski 8076						
Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 9482 Euskara 6985 Nauru 7865 Türkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 9487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7118 Nor						
Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, South 7882 Ukrainian 8571 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Gujarati 7185 Occi	•	6979	Moldavian			8478
Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7888 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265	•					
Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Frysk 7089 Ndonga 7871 Urdu 8582 Frysk 7089 Ndonga 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingue (International) 7365 Persian 7065 Interlingue 7365 Polski 8076						
Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Hiridi 7273 Oromo 7977 Zulu 9085 Hiri Motu	Ελληνικά	6976	Navaho: Navaio	7886	Twi	8487
Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Hiridi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Prolishi 8073 Interlingua (Interna		7079		7868	Uighur	8571
Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Valu 9085 Hrwatski 6779 Pali 8073 North Malesele 8073 North Malesele 7065		7082		7882		8575
Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Pariabi 8065 Interlingue (International)7365 Persian 7065 Norwegian Nynorsk; 8076	Frysk	7089	Ndonga	7871	Urdu	8582
Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Yoruba 879 Hrwatski 6779 Pali 8073 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076 8076 8076	Fijian	7074	•	7876	Uzbek	8590
Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International) 7365 Persian 7065 Interlingue 7365 Polski 8076	Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076		7176		7879	Volapuk	8679
Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingue (International)7365 Persian 7065 Interlingue 7365 Polski 8076			Northern Sami	8369	Walloon	8765
Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Tulu 9085 Hrwatski 6779 Pali 8073 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076 8076 8076		7573	North Ndebele	7868	Welsh	6789
Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Yoruba 708 Hrwatski 6779 Pali 8073 8065 108 Interlingua (International)7365 Persian 7065 7065 108 Interlingue 7365 Polski 8076 7065 7065	, ,				Wolof	
Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Video Vide		7185		7967	Xhosa	8872
Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076		7265		6785	Yiddish	8973
Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076	Herero	7290	•		Yoruba	8979
Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076	Hindi	7273			Zulu	
Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Interlingue 7365 Polski 8076				7065		
			Polski	8076		
	0					
			· ·			

11 Index

		main unit	
		overview	4
A		specifications	22
amplifier	21	troubleshooting	23
audio	۷1	media formats	21
	16	MP3	
predefined modes	21	connector	5
specifications	14		
audio options	17	0	
C		options	
care		picture	14
environment	3	overview	
product	3	main unit	4
connectors		remote control	4
front connectors	5		
control		Р	
disc play	12	picture	
main unit	4	options	14
		troubleshooting	23
<u> </u>		picture options	14
D		play	
discs		discs	12
audio options	14	radio	21
control buttons	12	troubleshooting	23
options	14	product specifications	21
play	12	product specifications	21
synchronize picture and sound	12	_	
time search	14	R	
titles	14	radio	
display		FM antenna	5
VCD/SVCD menu	13	specifications	21
display panel	4	tuning grid	15
		recycling	3
F		region codes	21
FM antenna	5	remote control	
TTT affectina	5	batteries	22
		overview	4
H		repeat	14
HDMI			
I.		S	
L		safety	_
language		disposal	3
language code	26	use of the product	2
		sound	

Μ

synchronize picture and sound troubleshooting	23
sound mode	16
speakers	
specifications	22
surround sound	16
subwoofer	
specifications	22
synchronize picture and sound	12
time search	14
titles	14
trademarks	25
troubleshooting	
connection	23
main unit	23
picture	23
play	23
sound	23
tuning grid	15
U	
USB	
format	21
USB storage device	
options	14
specifications	21
V	
video	
synchronize picture and sound	12
video formats	21
video options	14



Specifications are subject to change without notice © 2013 Koninklijke Philips Electronics N.V. All rights reserved.

