

Philips
DVD player

DVP3126X



Simply plays it all

With 5.1 channel audio output

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

Brings audio and video to life

- 12-bit/108MHz video processing for sharp, natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- 5.1 channel audio output for surround sound
- High quality outputs for analog and digital audio
- Progressive Scan component video for optimized image quality

Plays all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos


Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

PHILIPS
sense and simplicity


Highlights

192kHz/24 bit audio DAC

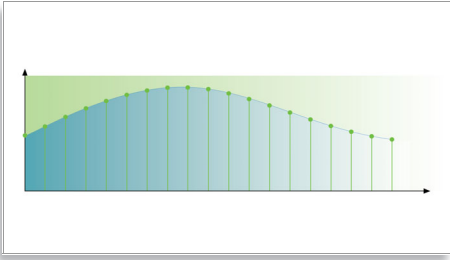

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

5.1 channel audio output

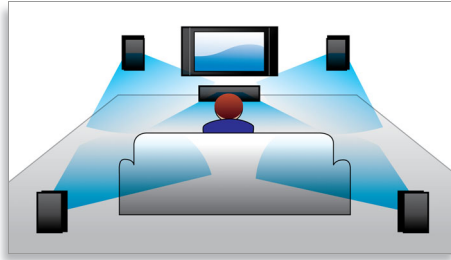


5.1 channel audio output for surround sound

Plays it all

Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theater system - in the comfort of your living room.

Progressive Scan

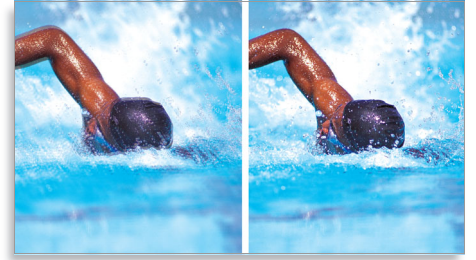

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.



**12-bit
Video DAC**



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 65 dB
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: PCM, MP3, Dolby Digital, WMA

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-

- R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Zoom

Connectivity

- Rear Connections: Composite video (CVBS) output, Digital coaxial out, ComponentVideo out Progressive, Analog audio Multi-channel out

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English

Power

- Power consumption: < 10 W
- Standby power consumption: < 0.8 W
- Power supply: 50/60 Hz, 110-240V

Accessories

- Included Accessories: Audio/Video cable, World Wide Warranty leaflet, Remote Control, 2 x AAA Batteries, User Manual

Dimensions

- Set dimensions (W x H x D): 360 x 37 x 209 mm
- Packaging dimensions (W x H x D): 415 x 82 x 282 mm



Issue date 2009-11-06

Version: 1.0.3

12 NC: 8670 000 31285
EAN: 87 12581 34386 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com