

Philips
DVD Micro Theater



MCD700

Rich movie and great sound experience

With a mirror-finished center-unit that adds a touch of stylishness to any interior. The wood-finished speakers deliver high quality sound and with DVD playability, you can now satisfy both your audio and video needs on one micro system.

Enrich your movie experience

- Play DVD, (S)VCD, MP3-CD, WMA-CD, CD(RW) & Picture CD
- 12-bit/108MHz video processing for sharp, natural images
- Progressive Scan component video for optimized image quality
- Dolby Digital for ultimate movie experience
- Dolby Digital, DTS Digital Out

Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Loudness for bass and treble enhancement
- 2x25W RMS/50W Total Power

Design that blends into your interior(s)

- High-end component design with stand
- Elegant wood-finished speakers
- High quality remote control for comfortable use

PHILIPS
sense and simplicity


Highlights

12-bit/108MHz video DAC



12-bit video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

Progressive Scan

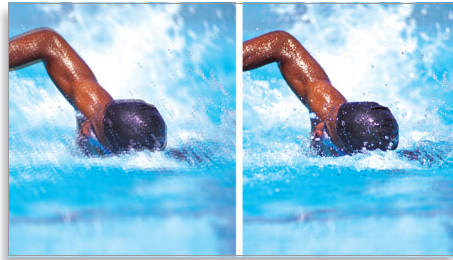

Progressive scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Loudness for bass and treble

In the sound spectrum, high and low frequencies are relatively less audible to human ears - especially at low volumes. By activating the Loudness feature, the bass and treble will be amplified so you can savor a more balanced sound perception overall.

High-end component design



The component-designed DVD micro system comes with a stand that features four triangular feet. It can prevent any audio frequency distortion due to vibration, overheating and electromagnetic interference generated from the amplifier and DVD loader. The result is smooth and excellent sound reproduction.

High quality remote Control

The remote control is a perfect balance of dimensions and weight. Sleek and ergonomically designed, the bottom cover of remote control features a soft rubber-paint finish to ensure comfort in usage.



Specifications

Sound

- Output Power: 50 watts Total power
- Sound Enhancement: Loudness, Digital Sound Control 4 modes, Dynamic Bass Boost, Reverb Mode
- Sound System: Dolby Digital

Loudspeakers

- Main Speaker: 2 way, 4" woofer, Bass Reflex Speaker System, Speaker grilles detachable

Video Playback

- Playback Media: DVD+RW, DVD-Video, Video CD/SVCD, Picture CD
- Video Enhancement: Progressive Scan
- Disc Playback Modes: Parental control, Angle, Zoom, Slow Motion, Dynamic Range Compression, PBC, A-B Repeat
- DVD Region.: 1

Audio Playback

- Playback Media: WMA-CD, MP3-CD, CD-RW, CD-R, CD
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/program, Shuffle Play
- Loader Type: Motorised, Top

Tuner/Reception/Transmission

- Auto digital tuning
- Station presets: 40
- Tuner Bands: FM Stereo, AM

Connectivity

- Video Output - Analog: Component Y Pb Pr (cinch), Composite CVBS (yellow cinch), S-Video (on Hosiden)
- Other connections: Active subwoofer Pre-out, Digital audio coaxial out, Digital optical out, FM Antenna, AM Antenna
- Aux in: 2x(L/R)/ RCA
- Headphone: 3.5 mm

Convenience

- Alarms: CD Alarm, Sleep timer
- Clock: On main display
- Display Type: White FTD
- OSD Languages: English, French, Spanish

Accessories

- Included Accessories: Control cable, Composite video cable (Y), FM/MW Antenna
- Remote control: 49-key with 2xAAA batteries

Dimensions

- Set dimensions (W x H x D): 208 x 156 x 268 mm
- Main speaker dimensions (W x H x D): 145 x 230 x 210 mm
- Packaging dimensions (W x H x D): 475 x 275 x 335 mm
- Weight incl. Packaging: 11 kg



Issue date 2009-06-24

Version: 6.2.10

12 NC: 9073 100 13003
UPC: 0 37849 96572 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com