

PHILIPS




Soundbar 2.1 with wireless subwoofer

520 W Max

2.1 CH wireless subwoofer

Dolby Digital Plus

HDMI ARC

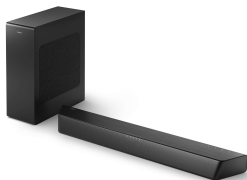

TAB7207

Rich sound for every detail

This fantastic 2.1 channel soundbar with a wirelessly connecting subwoofer brings true cinema sound into your living room. Dolby Digital Plus delivers incredible surround sound and two extra tweeters let you widen the soundstage even further.

Immersive cinema experience

- 2.1 channels. 8" wireless subwoofer for deeper bass
- Dolby Digital Plus delivers cinema surround sound
- Two angled speakers for wider sound

Distinctive looks. Easy control

- Distinctive geometric design. Easy placement
- Operate via touch controls on soundbar
- Philips Easylink for convenient control
- Place on your TV table, the wall or any flat surface

Connectivity and convenience

- Stadium EQ Mode. Bring the stadium home
- Conveniently connect all of your favourite sources
- Connect via HDMI ARC, Optical in, BT, Audio in or USB
- HDMI ARC. Control the soundbar with your TV remote


Highlights

2.1 channels. 8" subwoofer



This soundbar's 2.1 channels and wirelessly connecting 8" subwoofer put you in the centre of the action, surrounding you in rich and virtual surround sound no matter what you're watching or listening to. Pick out every detail and lose yourself in the mix!

Dolby Digital Plus

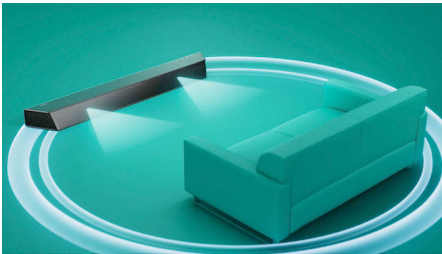

Virtualise the cinema experience in your home. This soundbar utilises Dolby Digital Plus technology to immerse you in waves of virtual

surround sound. Crystal clarity and great detail mean you can engage with your media like never before.

Wider soundstage



Widen the sound! Two extra tweeter speakers at either end of the soundbar broaden the audio to give you a clear separation of instruments. Pick them out easily and hear every instrument in the orchestra like you're really in the hall!

Stadium EQ Mode

Experience the excitement of live sports, right there in your living room. Stadium EQ Mode immerses you in ambient crowd noise, as if you were sitting in the stadium! Be thrilled by every crucial moment and still hear crystal-clear commentary.

Connect your favourite sources

Stream playlists from your mobile device via Bluetooth. Your media sounds richer, deeper and clearer through this phenomenal soundbar and subwoofer. You can also connect via Audio in, Optical in, HDMI ARC or use a USB drive for music.

Philips Easylink

This fantastic soundbar features Philips Easylink technology for maximum ease and convenience. Whether you want to adjust the EQ modes, bass, treble or volume settings on your device or soundbar, only one remote control is needed!

Specifications

Sound

Sound Enhancement: Treble and Bass Control
Equalizer settings: Movie, Music, Voice, Stadium
Total harmonic distortion: <math>\leq 10\%
Speaker system output power: 520 W
max/260 W RMS

Loudspeakers

Subwoofer freq range: 35–150 Hz
Subwoofer type: Active, Wireless subwoofer
Subwoofer impedance: 3 ohm
Number of sound channels: 2.1
Number of woofers: 1
Woofer diameter: 8"
Soundbar freq range: 150–20k Hz
Soundbar impedance: 8 ohm
Front drivers: 2 full range (L+R), 2 tweeters (L+R)
External subwoofer enclosure: Bass reflex

Connectivity

Bluetooth: Receiver
Bluetooth version: 5.0
Bluetooth profiles: A2DP, AVRCP, Streaming
Format: SBC, Multipoint (Multipair) support
EasyLink (HDMI-CEC)
USB playback
Audio in: 1 x 3.5 mm
Optical input x 1
HDMI Out (ARC) x 1
DLNA Standard: No
Smart Home: None
Wireless speaker connection: Subwoofer

Supported Audio Formats

Bluetooth: SBC
HDMI ARC: Dolby Digital, Dolby Digital plus, LPCM 2ch
USB: MP3, WAV, FLAC
Optical: Dolby Digital, LPCM 2ch

Outer Carton

Length: 105 cm
Number of consumer packages: 2
Width: 62 cm

Gross weight: 18.56 kg
Height: 21 cm
GTIN: 1 48 95229 12649 4
Net weight: 14.278 kg
Tare weight: 4.282 kg

Convenience

EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby
Remote Control
Night mode: No

Power

Main unit power supply: 100–240 V AC, 50/60 Hz
Subwoofer power supply: 100–240 V AC, 50/60 Hz
Subwoofer standby power: $\leq 0.5\text{ W}$
Main unit standby power: $\leq 0.5\text{ W}$
Auto standby

Packaging dimensions

Height: 18.5 cm
Packaging type: Carton
Type of shelf placement: Laying
Width: 46 cm
Depth: 97 cm
Number of products included: 1
EAN: 48 95229 12649 7
Gross weight: 8.64 kg
Net weight: 7.139 kg
Tare weight: 1.501 kg

Accessories

Included accessories: Remote Control (with battery), Power cord, Wall mount bracket, Quick start guide, World Wide Warranty leaflet

Design

Colour: Black
Wall mountable

Dimensions

Main Unit (W x H x D): 800 x 65 x 106 mm
Main Unit Weight: 2.1 kg
Subwoofer (W x H x D): 150 x 400 x 300 mm
Subwoofer Weight: 4.74 kg

