

Philips
In.Sight wireless HD baby
monitor

Watch from anywhere

Hear and speak, Night vision
For iPhone, iPad
Powered by Ivideon



B120N



Always close to your baby

Watch from anywhere on your iPhone/iPad

The Philips In.Sight wireless HD baby monitor lets you watch and listen to your baby from your iPhone/iPad. Watch in crystal clear HD quality, and with night vision you can even watch your baby in the dark.

Stay close to your baby wherever you are

- Wi-Fi baby monitor for placement anywhere in your home
- Unlimited live viewing via Wi-Fi/3G/4G LTE
- Night vision mode to see baby clearly in the dark

Stay reassured with alerts and notifications

- Hear your baby continuously even when phone is locked
- Phone alerts when monitor detects noise/motion
- Parents talk to baby via iPhone/iPad
- Real-time monitoring with temperature and humidity sensor
- Parents to share monitors

Easy, safe and secure

- Easy set-up of Wi-Fi baby monitor via QR code
- Video encrypted for secure connection
- PVC-BFR-free power cables and monitor
- Powered by Ivideon, a leading firm in video cloud solutions

PHILIPS

Highlights


Continuous audio streaming

The In.Sight wireless HD baby monitor streams audio continuously, even when your iPhone or iPad is locked or when you are docking or charging your iPhone or iPad.

Easy set-up via QR code

Set-up is simple with the app. The app will generate a QR code for your home Wi-Fi settings. With the QR code, the monitor will automatically pair with your Wi-Fi network, easily and instantly.

Encrypted direct networking

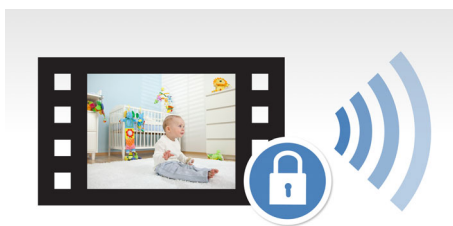

The In.Sight wireless monitor uses highly secure encryption to provide you with privacy at all times. The In.Sight wireless monitor uses a unique encryption key each time it makes a connection, providing you with a highly secure connection each time you look at your loved ones.

Parents talk via iPhone/iPad




With the In.Sight wireless HD baby monitor, you can talk to your baby any time you want. Simply press "talk" on your iPhone or iPad and sing her a nursery rhyme. Watch as she falls asleep to your soothing voice.

Multi-user mode

Share monitors with your spouse, family, friends and even your baby sitters. The app lets you share each monitor with two other users so that they also have access to live videos and sound via their smartphones. You can even upgrade the app to share the monitor with up to 10 users.

Night vision mode

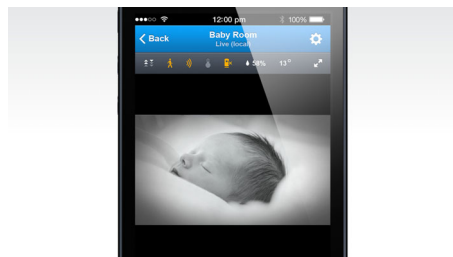

Night vision mode allows you to see your baby's lovely face in the dark. Infrared light goes on for the monitor to capture clear black-and-white video when it is dark. Night vision

mode switches on and off automatically, or you can adjust it manually.

Noise and motion alerts

It's impossible to predict when something might happen to your baby. The In.Sight wireless HD baby monitor keeps watching with adjustable noise and motion detection. You will be alerted any time noise or motion is detected. Automatically receive push notifications on your iPhone or iPad when the monitor detects motion or noise.

Temperature and humidity sensor

Temperature and humidity sensors on the In.Sight wireless HD baby monitor show temperature and humidity levels on your iPhone or iPad. The humidity sensor measures the humidity level, detecting dry air that may irritate baby's throat, for instance. The app will even alert you when the temperature is too high/low.

PVC and BFR-free

The In.Sight wireless HD baby monitor is free from brominated flame retardant (BFR) and polyvinyl chloride (PVC). It adheres to the stringent safety standards for infant utensils and is absolutely baby-proof, safe and eco-friendly.

Wi-Fi-enabled baby monitor

Have ultimate peace of mind with the In.Sight wireless baby monitor. It connects to Wi-Fi 802.11 bgn networks. Place the monitor in your baby's room and you can watch and hear your baby directly from your iPhone or iPad wherever you are.



Specifications

Lens and Sensor

- Sensor: 720p HD video image sensor
- Aperture: F2.8
- Focus mode: Fixed
- Ambient light sensor: Yes, day/night mode
- Night mode: Infra-Red
- IR control: via App
- IR range: 4 metres

Video Quality

- HD/VGA/QVGA streaming
- Resolution: HD (1280 x 720p) at 30 fps
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Features

- Wi-Fi: 802.11 b/ g/ n (2.4 GHz)
- Motion detection
- Noise detection
- Direction adjustable base
- Night Vision
- LED indicator
- Temperature measurement: -10 – 50°C
- Humidity measurement: 20 – 90%

Software

- App name: InSightHD
- Installation: via App

- Automatic App update
- System supported: iOS4.3 or above
- iPad compatibility: iPad 2 and later
- iPhone compatibility: iPhone 4S and later
- iPod compatibility: iPod Touch 4th gen and later

Accessories included

- Extra wall mount
- USB power adapter
- USB cable: Yes, 2.5 m
- Screws/wall anchors: 1
- Quick Start Guide

Input and Output

- Audio: 2-way, parent talk back
- Microphone: Highly sensitive, Mono
- Built-in speaker
- USB: Mini-USB port

Minimum Requirements

- Internet: Wi-Fi connection, minimum 2 Mbit/sec upload speed

Dimensions

- Packaging dimensions (W x H x D):
158 x 160 x 78 mm
- Product dimensions (W x H x D):
66.2 x 104 x 66.2 mm



Issue date 2014-11-18

Version: 7.0.10

12 NC: 8670 001 08179
EAN: 08 71258 17009 59

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Viewing live video over your home Wi-Fi network using the In.Sight wireless home monitor is free and unrestricted. Viewing live video remotely (either over an external Wi-Fi network or 3G network) is also free for unlimited sessions, but subject to a limit of 5 minutes per session.

* Longer remote viewing session times and other premium features are available for purchase from the App. These conditions are subject to change.