

Philips
DVD Micro Theatre



MCD119

Enjoy a great movie experience

Now you can truly experience the audio-visual thrill of the cinema in your living room! The stylish MCD119 DVD Micro Theatre features Progressive Scan for optimised images, plus Dynamic Bass Boost for deep and rich bass sound.

Enjoy your favourite movies, photos and music

- Play DVD, DivX®, (S)VCD, MP3-CD, WMA-CD, CD(RW) & Picture CD
- Dolby Digital for ultimate movie experience
- Progressive Scan component video for optimised image quality

Enrich your sound experience

- Digital Sound Control for optimised music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Aux-in to enhance TV sound
- 2x10 W RMS total output power


Start the day your way

- Alarm Time Display shows you the wake-up call time
- Sleep timer helps you to drop off to your favourite music

PHILIPS
sense and simplicity

Highlights

Digital Sound Control

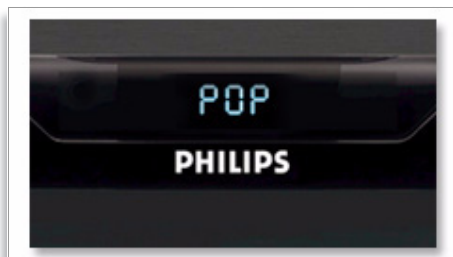


Digital Sound Control offers you a choice of preset Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Progressive Scan

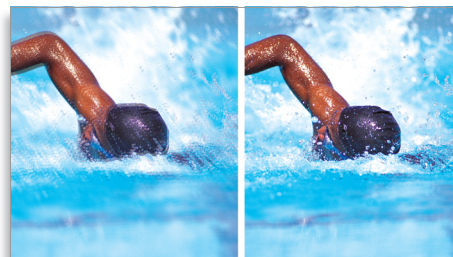

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.



Specifications

Sound

- Output Power: 2 x 10 W RMS
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost
- Sound System: Dolby Digital

Loudspeakers

- Main Speaker: 4" woofer

Video Playback

- Playback Media: DVD-Video, DivX, DVD+RW, Picture CD, Video CD/SVCD, DVD
- Disc Playback Modes: A-B Repeat, Angle, PBC, Slow Motion, Zoom, OSD, Parental control, Resume Playback from Stop
- DVD Region: 2
- Video Enhancement: Progressive Scan

Audio Playback

- Playback Media: WMA-CD, MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/program, Shuffle Play
- Loader Type: Top

Connectivity

- Video Output - Analogue: Component Y Pb Pr

- (cinch), Composite CVBS (yellow cinch)
- Aux in: 1x(L/R)/RCA
- Other connections: Line out, FM Antenna

Convenience

- Display Type: White FTD
- OSD Languages: English, Portuguese, Spanish, French, German, Italian
- Alarms: CD Alarm, Radio Alarm, Sleep timer
- Clock: On main display
- Eco Power Standby: 1 watt

Accessories

- Included Accessories: Composite video cable (Y), FM antenna
- Remote control: 38-key with Lithium batteries

Dimensions

- Set dimensions (W x H x D):
218 x 90 x 221.5 mm
- Main speaker dimensions (W x H x D):
125 x 250 x 232 mm

Tuner/reception/transmission

- Station presets: 40
- Tuner Bands: FM Stereo
- Auto digital tuning



Issue date 2009-05-03

Version: 1.0.6

12 NC: 8670 000 32904
EAN: 87 12581 35625 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com