

Philips  
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback  
DivX Plus HD

BDP2180K



## Enjoy the 3D experience at home

### With Blu-ray 3D

This Philips Blu-ray DVD player has stunning 3D effect and 1080p up-conversion provide the picture depth and action that leap off the screen and draw you deep into the viewing experience, even on DVD!

#### Engage more

- Enjoy all your movies and music from CD and DVD
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- EasyLink to control all HDMI CEC devices via a single remote
- SimplyShare to connect & stream all entertainment wirelessly
- Turn your Smartphone into a remote for Philips AV products
- USB 2.0 plays video/music from USB flash/hard disk drive

#### Hear more

- Dolby TrueHD for high fidelity sound

#### See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles

# PHILIPS

Blu-ray Disc/ DVD player  
3D Blu-ray Disc playback DivX Plus HD

BDP2180K/98

# Highlights

## Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.


## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous

versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Dolby TrueHD

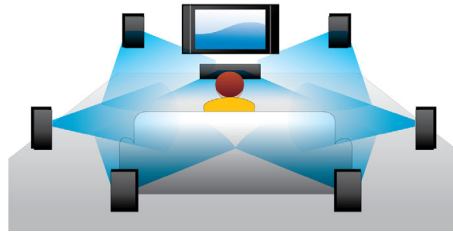

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection

that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Enjoy movies and music



Enjoy all your movies and music from CD and DVD



# Specifications

## Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12Bit/148MHz

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

## Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 3
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, Ethernet, HDMI output
- Front / Side connections: Microphone In

## Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Power

- Power consumption: 11 W
- Power supply: 220-240V, 50/60 Hz
- Standby power consumption: < 1W

## Dimensions

- Product (W x H x D): 310 x 40 x 203 mm
- Product weight: 1.25 kg
- Packaging (W x H x D): 420 x 90 x 303 mm
- Weight incl. Packaging: 2.0 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Remote Control, User Manual

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 35,5 x 27,9 x 8,7 cm
- Gross weight: 1,56 kg
- Nett weight: 1,2 kg
- Tare weight: 0,36 kg
- EAN: 87 12581 67392 5

## Packaging dimensions

- Packaging type: Dummy
- Number of products included: 1
- Type of shelf placement: Dummy
- Packaging dimensions (W x H x D): 35,5 x 27,9 x 8,7 cm
- Gross weight: 1,56 kg
- Nett weight: 1,2 kg
- Tare weight: 0,36 kg
- EAN: 87 12581 67392 5

## Product dimensions

- Product dimensions (W x H x D): 31 x 3,95 x 21,7 cm
- Weight: 1,02 kg



Issue date 2015-08-07

Version: 2.0.5

12 NC: 8670 000 99219  
EAN: 87 12581 67392 5

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)