

Philips
Blu-ray Disc player



BDP9100



True cinema experience in 21:9 ultra-widescreen

The perfect companion for the Cinema 21:9 TV. Unlike normal Blu-ray players, the BDP9100 is the only Blu-ray player allowing you to shift subtitles in the 21:9 screen aspect ratio, to retain the subtitles without the black bars.

See more

- Subtitle Shift for widescreen without any missing subtitles
- Blu-ray Disc playback for sharp images in full HD 1080p
- 1080p at 24 fps for cinema-like images
- DVD video upscaling to 1080p via HDMI for near-HD images
- DivX Ultra for enhanced playback of DivX media files

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

Engage more


- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- Enjoy all your movies and music from CDs and DVDs
- EasyLink to control all HDMI CEC devices via a single remote
- AVCHD enables you to enjoy HD camcorder videos on your TV



PHILIPS

Highlights

Blu-ray Disc playback

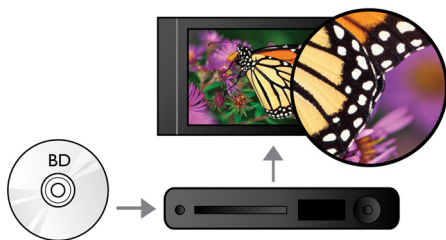

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound — so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allows a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features such as pop-up menus bring a whole new dimension to home entertainment.

BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the Internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

1080p at 24 fps



Bring a true cinema experience into your living room, with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs — giving you sensational cinema-like high definition images that will astound you.

DVD video upscaling

HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

EasyLink

EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, home cinema systems and TVs with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable.


With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

DivX Ultra



DivX Ultra merges DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Dolby TrueHD and DTS-HD MA

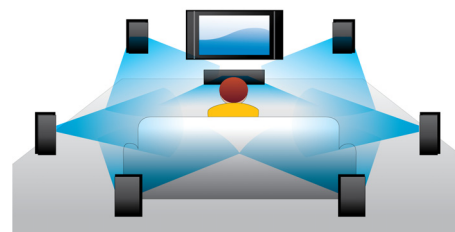

DTS-HD Master Audio and Dolby TrueHD deliver 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

Specifications

Picture/Display

- Aspect ratio: 21:9, 16:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Progressive scan
- D/A converter: 12 bit/150 MHz

Video Playback

- Playback Media: BD Video, BD-R/RE 2.0, DVD-Video, DVD, DVD+R/+RW, DVD-R/-RW, DivX, Video CD, CD, CD-R/CD-RW, USB flash drive
- Compression formats: H.264, VC-1, MPEG2, DivX Ultra, AVCHD, WMV, XviD
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Slow Forward, Resume Playback from Stop, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- Video Enhancement: Deep Color, x.v. Colour, Video Upscaling, Progressive Scan
- BD Region Code: B
- DVD Region.: 2

Sound

- Sound System: DTS-HD Master Audio Essential, Dolby True HD, Dolby Digital Plus, DTS, Dolby Digital
- Signal to noise ratio: 110 dB
- Dynamic Range (1 kHz): 100 dB
- Frequency response: 100 Hz
- D/A converter: 24-bit, 192 kHz

Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, USB flash drive
- Compression format: DTS, Dolby Digital, MP3, WMA, PCM

Digital Photo Playback

- Playback Media: USB flash drive, CD-R/RW, DVD+R/+RW, DVD-R/-RW
- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution,

Slideshow, Rotate, Zoom

Connectivity

- Rear Connections: HDMI output, Component Video output, Digital coaxial out, Composite video (CVBS) output, Analogue audio 5.1 channel out, Analogue audio Left/Right out, Ethernet, Digital optical out
- Front/Side connections: USB 2.0

Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby
- Child Protection: Parental Control
- On-Screen Display languages: English, German, French, Dutch, Italian, Portuguese, Spanish, Danish, Finnish, Polish, Swedish, Norwegian, Turkish
- BD-Live (Internal 1 GB memory)

Accessories

- Included accessories: HDMI cable, Audio/Video cable, User Manual, CD-R (User Manual), Quick start guide, Product Registration Card, Remote Control, 2 x AAA Batteries
- User Manual: English, German, French, Dutch, Italian, Spanish, Portuguese, Danish/Norwegian, Finnish, Swedish, Turkish

Power

- Power supply: 220-240 V, 50/60 Hz
- Standby power consumption: 0.25 W
- Power consumption: 18 W

Dimensions

- Packaging dimensions (W x H x D): 543 x 178 x 458 mm
- Set dimensions (W x H x D): 0 x 0 x 0 mm
- Weight incl. Packaging: 7 kg
- Product dimensions (W x H x D): 435 x 58 x 308 mm
- Product weight: 4.1 kg



Issue date 2015-09-03

Version: 5.0.7

12 NC: 8670 000 55311
EAN: 87 12581 49650 0

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com