

Philips  
wireless portable speaker

**10W, 10hr**

Long Bluetooth range  
Waterproof, dustproof  
Quick charge option



**BT6900A**

## Music never stops

My music never stops. Everplay wireless portable speaker keeps playing all the time without interruption thanks to the strong Bluetooth connection and intuitive charging options. Its custom fabric makes it beautiful as well as super durable

### Intuitive charging

- Quick-charge recharges speaker 3 times faster
- Battery indicator to easily view power level
- USB cable doubles as a strap

### Strong Bluetooth connection

- Wireless music streaming via Bluetooth
- Strong Bluetooth connection up to 30m or 100ft
- Built-in microphone for hands-free phone calls

### Powerful sound

- Bass radiators for extra bass boost and extension
- Big sound from front-firing neodymium speaker
- Anti-clipping function for loud, distortion free music

### Super durability

- Durable build – shockproof, dustproof and waterproof (IP57)
- High performance DuraFit fabric

**PHILIPS**

wireless portable speaker  
10W, 10hr Long Bluetooth range, Waterproof, dustproof, Quick charge option

# Highlights


## Front-firing speaker

EverPlay speaker makes no compromises when it comes to quality sound. With front-firing neodymium driver, it delivers clear, natural, powerful sound with deep and rich bass. Perfect for any style of music, whether you're playing it outdoor or indoor

## Bass radiators


EverPlay speaker gives powerful sound from a compact form factor, with the help of a large bass radiating area. It delivers extra bass boost and extension.

## Anti-clipping function

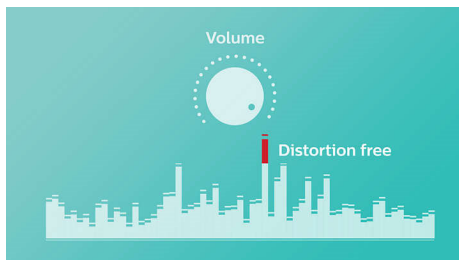


Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

## Wireless music streaming

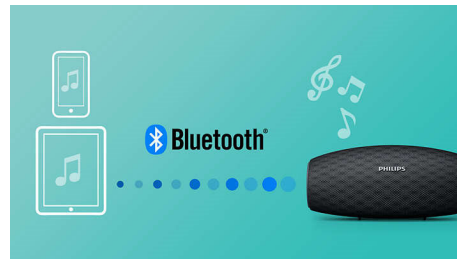

Bluetooth is a wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## 30m Bluetooth range

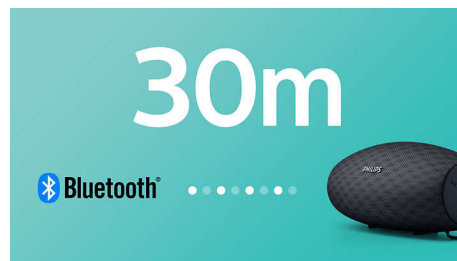

Move freely around with your smart phone, without worrying about dropping your music. EverPlay speaker offers an incredibly stable and long-range Bluetooth connection up to 30 metres or 100 feet, three times faster than industry standards. The speakers are equipped with a sensitivity antenna and radio frequency filter to minimize background interference.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the

BT6900A/37


speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

## Quick charging



Charging the speaker takes quite some time usually. EverPlay offers a quick charge option that can recharge the speaker three times faster than normal USB adapter. By using Qualcomm Quick-Charge adapter (not included), that is commonly used in new Android phones, to charge the speaker, the charging time is much faster.

## Battery indicator

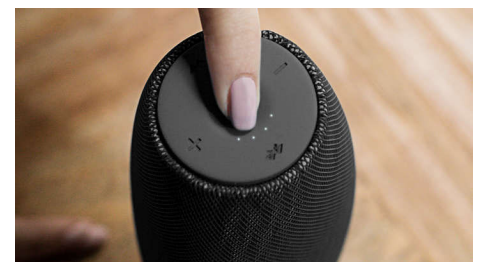

Finally, a Bluetooth speaker that provides a simple, clear way to see how much remaining power you have! With EverPlay, simply push the power button to see how much battery is left.

## USB strap

Recharging has never been so easy. When the power starts to run low, use the handy two-in-one strap-USB charging cable. Plug it in for power, or use it to attach the speaker to a bag for easy portability.

wireless portable speaker  
10W, 10hr Long Bluetooth range, Waterproof, dustproof, Quick charge option

BT6900A/37

# Specifications

## Sound

- Output power (RMS): 10W
- Sound System: Mono

## Design and finishing

- Color: Blue

## Loudspeakers

- Speaker driver: 1 x 2" full range driver and 1 x 2" passive radiator

## Connectivity

- Audio Connections: 3.5mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 30m or 100ft

## Convenience

- Water resistance: IPX7
- Built-in microphone: for speaker conference
- Dustproof

## Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini 4, iPad Pro
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone 7, iPhone 7 Plus
- other Bluetooth-enabled device

## Power

- Battery type: Lithium-ion (built-in)
- Operating time on battery: 10 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, Quick install guide

## Dimensions

- Weight incl. Packaging: 0.488 kg
- Product dimensions (WxDxH): 160 x 71 x 72 mm
- Packaging dimensions (WxDxH): 175 x 122 x 94 mm
- Product weight: 0.313 kg



Issue date 2024-03-25

Version: 8.6.8

UPC: 8 40063 20071 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)