

Philips  
Micro music system

**Bluetooth**  
CD, MP3-CD, USB, FM

**BTM1560**



## Bring power to your tunes

Listen to digital music from your Smartphone via Bluetooth, or play MP3-CDs and CD-R/RW on this Philips micro system. Bass Reflex speakers and 30W maximum output power deliver booming bass and room filling sound.

### **Enrich your sound experience**

- 30W RMS Maximum output power
- Digital Sound Control
- Bass Reflex Speaker System delivers a powerful, deeper bass

### **Enjoy your music from multiple sources**

- Stream music wirelessly via Bluetooth™ from your smartphone
- USB Direct for easy MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- Audio-in for portable music playback

### **Easy to use**

- Bluetooth standby mode always on for easy reconnection
- Fast and efficient USB charging for your smart device
- Motorized CD loader for convenience access
- Digital tuning with preset stations for extra convenience

**PHILIPS**

## Highlights

### Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

### USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

### Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the

low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

### Digital Sound Control


Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

### Bluetooth standby



After your smart device has been connected once, your Philips music system can be woken from standby mode by your smart device's Bluetooth function. This will also activate the Bluetooth source, making it quick and easy to stream music, any time.

### USB fast charging

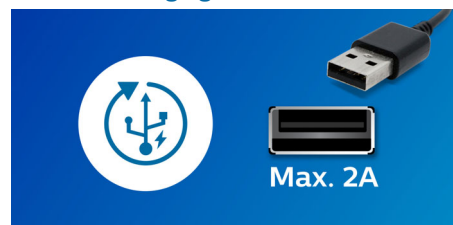

The USB port isn't just for music playback. The intelligent USB power management system enables a 2A fast charging current to rapidly charge your smart device when the music system is in standby mode.

## Specifications

### Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, stop, previous/next, repeat, shuffle, program play

### Tuner/Reception/Transmission

- Tuner bands: FM stereo
- Station presets: 20
- Tuner enhancement: auto digital tuning

### Sound

- Maximum output power (RMS): 30W
- Sound enhancement: digital sound control

### Loudspeakers

- Speaker types: bass reflex speaker system
- Speaker drivers: 3.5" woofer, dome tweeter

### Connectivity

- Bluetooth
- Bluetooth profiles: A2DP, AVRCP
- Audio in (3.5mm)
- USB: USB host, Max. 2A Charging

### Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: tray

### Accessories

- Included accessories: FM antenna
- Remote control: 21-key remote
- Quick start guide

### Power

- Power supply: 100-240VAC, 50/60Hz

### Dimensions

- Main unit width: 220 mm
- Main unit height: 104 mm
- Main unit depth: 231 mm
- Main speaker dimensions (W x D): 127 x 160 mm
- Main speaker height: 170 mm
- Packaging width: 353 mm
- Packaging height: 306 mm
- Packaging depth: 320 mm
- Gross weight: 5.1 kg
- Net weight: 3.1 kg



Issue date 2017-09-29

Version: 2.0.7

12 NC: 8670 001 46553  
EAN: 48 95185 63022 9

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)