



Philips Fidelio
SoundSphere wireless
speakers

with AirPlay



DS9830W

Feel the emotions of a live performance

with this sound system

Bring music to life with deep, natural audio delivered by acoustic SoundSphere technologies. Equipped with AirPlay, these elegant Philips DS9830W wireless speakers let you stream songs from iPod, iPhone, iPad and also iTunes.

Peerless sound quality

- SoundSphere for a natural, deeper and wider sound impression
- FullSound enhances sound detail for rich and powerful sound
- SoundCurve for superb sound reproduction
- Bass-reflex design for deep, tight bass reproduction
- 2 x 50 W RMS total output power

Advanced versatility

- Stream music with AirPlay wireless technology
- Audio-in for easy connection to almost any electronic device

Intuitive control

- SoundStudio app for complete control of audio settings
- Stream millions of songs to your speakers with Spotify

PHILIPS
Fidelio


Highlights

SoundSphere




Bask in the glory and energy of music as SoundSphere gives you each note as the artist intended. Delivering clear and natural audio, SoundSphere creates a sound impression that is deeper and wider. The result is life-like audio that will make you believe the artists are performing in front of you. Each SoundSphere speaker features a tweeter that hangs above the speaker box. The tweeter is able to emit sound more clearly and in all directions. Precise audio crossover engineering and careful positioning of the woofer to embrace the tweeter ensures minimised interference and even more natural sound.

FullSound™

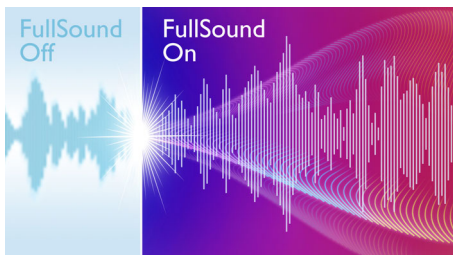


Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analysed and optimised to let you experience music with great detail and warmth.

SoundCurve

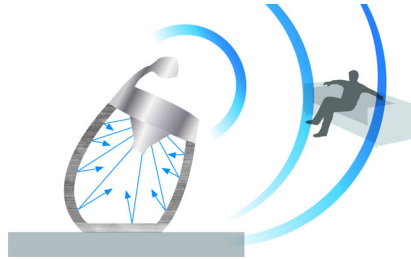

The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning-looking speakers.

Bass-reflex design

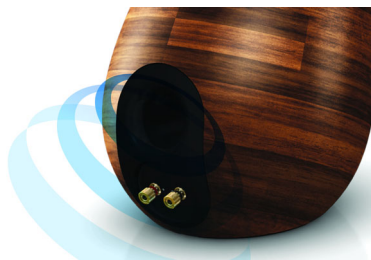

Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimising air turbulence that may cause distortion.


AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes


program on your computer, iPhone, iPad or iPod Touch to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Make your favourite tunes follow you into whichever room you go.

Spotify

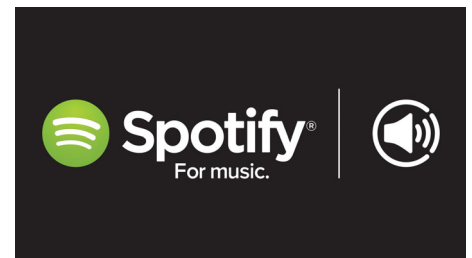

Spotify is a better way to listen to music. Instant access to millions of songs on the speakers. Just hit play to stream anything you like. The premium Spotify account on iOS devices comes with a Connect feature that lets you choose music on your Spotify app and listen on the speakers with no interruption from any activities on your mobile devices and also without draining their batteries.

SoundStudio App

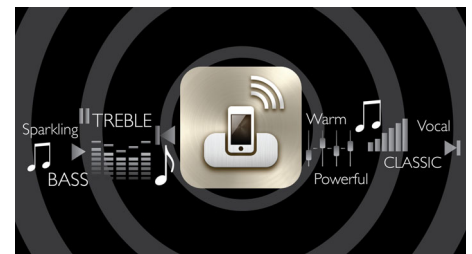

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favourite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.



Specifications

Compatibility

- Compatible with: all iPod, iPhone and iPad

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iOS 4.3 to iOS 10.3
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

Loudspeakers

- Speaker drivers: 2 x 3/4" / 20 mm tweeter, 2 x 5" / 12.5cm midwoofer
- Output power (RMS): 2 x 50 W

Accessories

- Included accessories: Remote Control, 3.5 mm stereo line-in cable, AC Power Cord, Quick start

guide, Warranty certificate, World Wide Warranty leaflet

Connectivity

- AirPlay
- Audio in (3.5 mm)

Dimensions

- Product dimensions: [speakers] 265 (diameter) x 410 mm
- Packaging dimensions (WxDxH): 760 x 338 x 485 mm
- Product weight: (main unit) 12 kg
- Weight incl. Packaging: 14.5 kg

Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2017-12-29

Version: 1.0.6

12 NC: 8670 001 02847
EAN: 08 71258 16873 80

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com