

Philips
MP3 Mini Hi-Fi System

• 40 W

FWM154



Obsessed with sound

Hi-Fi system with Bass Reflex

Get the most out of your music with the Philips Mini hi-fi system featuring 2-way Bass Reflex Speaker System for rich sound. Optimise your sound settings by adjusting the balance for different music genres with Digital Sound Control.

Enrich your sound experience

- Dynamic Bass Boost for deep and dramatic sound
- Bass Reflex Speaker System delivers a powerful, deeper bass
- 40 W RMS total output power
- Digital Sound Control for optimised music style settings

Continuous enjoyment of your favourite music

- Play MP3-CD, CD and CD-R/RW
- Autostop cassette deck
- Digital tuning with preset stations for extra convenience
- MP3 Link for portable music playback

PHILIPS


Highlights

Play MP3-CD, CD and CD-R/RW



MP3 stands for "MPEG 1 Audio layer-7.6 cm (3)". .MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

Autostop cassette deck

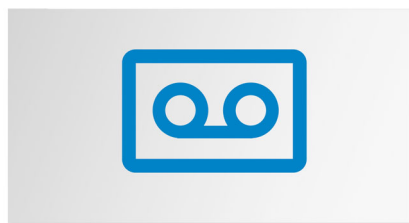

Autostop cassette deck

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a


button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

40 W RMS

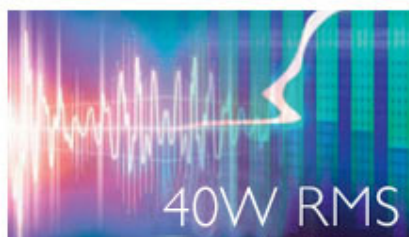

This Philips speaker has 40 W RMS total output power. RMS refers to Root Mean Square, which is a typical measurement of

audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determine the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

Digital tuning with presets



Simply tune into the station that you want to preset, then press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.



Specifications

Sound

- Sound enhancement: Dynamic Bass Boost, digital sound control
- Total Sound Power (RMS): 40 W

Loudspeakers

- Number of speaker boxes: 2
- Speaker drivers: 4" woofer
- Loudspeaker enhancement: 2-way

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: next/previous track search, fast forward/reverse, repeat/shuffle/programme
- Cassette deck technology: mechanical
- Number of decks: 1

Audio recording

- Recording media: tape

Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: FM, FM stereo, MW
- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- Aux in: 2 x RCA (Audio)
- MP3 Link: 3.5 mm stereo line in

Convenience

- Clock: on main display, sleep timer
- Number of discs: 1
- Display type: LCD display
- Alarms: CD alarm, radio alarm
- Loader type: tray

Accessories

- Remote control
- Others: Quick start guide
- User Manual: multi-lingual
- Warranty: Worldwide Guarantee booklet

Dimensions

- Gross weight: 8.5 kg
- Main speaker dimensions (W x D): 189 x 175 mm
- Main speaker height: 292 mm
- Main unit depth: 271 mm
- Packaging depth: 270 mm
- Main unit height: 292 mm
- Packaging height: 354 mm
- Main unit width: 220 mm
- Packaging width: 740 mm

Power

- Power supply: 220 - 240 V

Green

- Standby power consumption: 1 W



Issue date 2013-05-29

Version: 1.0.7

12 NC: 8670 000 55198
EAN: 87 12581 49581 7

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com