

Philips
Portable DVD Player

23 cm/9" digital LCD
6-hr playtime

PD9060



Superior picture quality

with high-density (800 × 480) pixel LCD

Enjoy movies and more on the go with the Philips Portable DVD player. The 22.9 cm (9") digital colour LCD display brings images to life. Display and share your digital photos easily. Lightweight and compact with up to 6 hours' playback time.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- Play MP3/WMA-CD, CD and CD-RW
- View JPEG images from picture disc

Easily display your digital photos

- 22.9 cm (9") high-density (800 × 480 pixel) LCD display
- 180-degree swivel screen for improved viewing flexibility
- Display photos and photo slideshows
- View photos directly from memory cards, DVDs and CDs

Extra touches for your convenience

- Enjoy up to 6 hours continuous playback*
- SD/SDHC card slot for music, photo and video playback
- Smart Car Mount for ease of use
- Full Resume on Power Loss



PHILIPS

Highlights

180-degree swivel screen

The screen swivels 180°s to give you the optimum viewing angle for watching movies and photos. Rotate the screen or adjust it up and down to cut down on glare and get the best viewing angle possible.

22.9 cm (9") HD LCD display

The high resolution (800 x 480 pixel) colour LCD display brings images to life, showing off your treasured photos, favourite movies and music with the same 'real life' rich detail and vibrant colours as high quality prints.


Display photos

Simply insert your disc or memory card into the player and your digital photos will be played directly on the device.

Play MP3/WMA-CD, CD and CD-RW

Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorised music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

SD/SDHC card slot

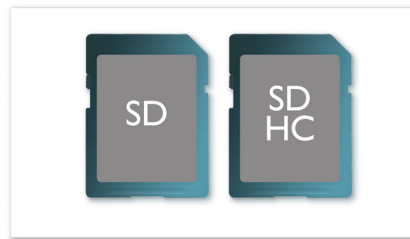

View and share your video clips, photos and music easily and instantly. For the ultimate in convenience, this Philips player features a built-in card slot for SD/SDHC memory cards. Simply insert the memory card into the slot located on the side of the player to access your multimedia files stored on the card and enjoy your favourite music, photos and movies anywhere.

Smart Car Mount

To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.

Up to 6 hrs movies playback

This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 6 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

SmartBright

SmartBright is an exclusive Philips feature that employs a built-in sensor to automatically adjust display settings, delivering the very best viewing experience, reduced energy consumption and prolonged monitor life while eliminating bright-screen-dark-room and dark-screen-bright-room eye strain fatigue - all without the bother of manually adjusting display brightness as room lighting conditions change.



Specifications

Picture/Display

- Diagonal screen size: 9 inch / 23 cm
- Resolution: 800(w) x 480 (H) x 3 (RGB)
- Display screen type: LCD TFT
- LCD panel type: Anti-glare polariser

Sound

- Output Power: 600 mW RMS (built-in speakers)
- Output power (RMS): 5 mW RMS (earphone)
- Signal to noise ratio: >80 dB (earphone), >62 dB (built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD, WMA
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Zoom, Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3, WMA
- WMA bit rates: 32 - 192 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R, WMA-CD
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9 V, 1.5 A

- Headphone jack: 3.5 mm Stereo Headphone x 2
- AV output: Composite (CVBS) x 1
- SD/MMC card slot: SD/SDHC card slot

Convenience

- Battery charging indication
- Shock proof

Accessories

- AC/DC Adapter: DC 9 V, 1.5 A, 110–240 v, 50/60 Hz
- Car kit: cigarette outlet adapter, 12vDC
- Remote control: AY5509 slim remote
- Cables: 1 x AV adaptor
- User Manual: English
- Smart car mount

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 6 hours*

Dimensions

- Master carton dimensions: 225 x 295 x 280 mm
- Master carton quantity: 3
- Master carton weight: 5.9 kg
- Packaging dimensions (W x H x D): 272 x 285 x 70 mm
- Product dimensions (W x H x D): 238 x 32 x 175 mm
- Product weight: 1.2 kg
- Packaging type: D-box



Issue date 2017-04-06

Version: 2.1.4

12 NC: 8670 000 60999
EAN: 87 12581 53086 0

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.
* Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.
* Battery life varies by use and settings.
* Battery life of playtime is approximate and may vary depending on application condition. To optimise battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level and use the product at room temperature.