

PHILIPS



True Wireless Headphones

Detailed, natural sound

Noise Cancelling Pro

Conversation Hearing mode

Clearer calls on the go



TAT6908BK

The earbuds that love to socialise

Enjoy your music. Love your podcasts. Do lunch. These noise-cancelling true wireless earbuds give you great sound and customisable hearing modes that can help you hear face-to-face conversations better. Plus, they're super comfy.

Always ready to go

- No worries. Up to 28 hours play time with the case
- Charge for 5 minutes, get an extra hour
- Philips Headphones app. Customise hearing modes and more

Great sound and customisable hearing modes

- Warm, detailed, natural. Philips sound signature
- Immerse with Noise Cancelling Pro
- Conversation Hearing mode for face-to-face chats
- Personal My Hearing mode. Take the in-app hearing test!

For your daily life

- Clearer calls on the go. They'll hear you, not the noise
- IPX4 splash and sweat resistant
- Snug, comfy fit that's right for your ears

Highlights

Noise Cancelling Pro



Enjoy a more immersive experience with noise cancelling that blocks external noise for distraction-free listening. To hear what's going on around you, tap an earbud to activate Awareness Mode. You can adjust noise-cancelling levels or turn on wind noise reduction via the Philips Headphones app.

Conversation Hearing mode




For face-to-face conversations, these earbuds can help you hear the other person better! Simply press the left earbud to activate Conversation Hearing mode or use the Philips Headphones app. Beamforming mics pick up the voice of the person in front of you while noise cancelling filters out ambient sounds.

In-app hearing test




A simple hearing test in the Philips Headphones app lets you create a personal hearing mode that's tuned to the way you hear different frequencies in each ear. You can then use the app to tweak your custom profile or adjust the left and right earbuds individually at any time.

Philips Headphones app

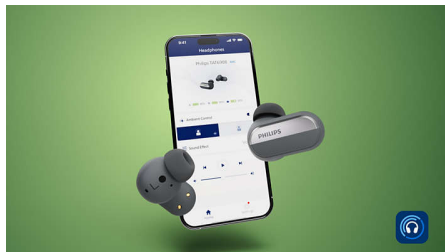

You can use the app to customise any of the hearing modes by tweaking the low, mid or high sound frequencies for individual earbuds. Or use it to reduce how much of your own voice you hear during conversations. Time for music? Choose from four preset sound modes to suit your mood.

Clearer calls on the go

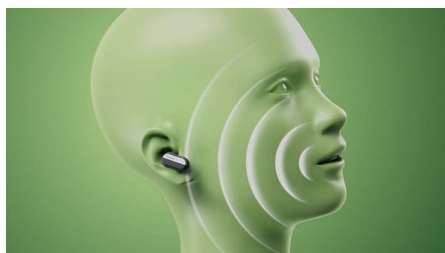

When you're on a call, beamforming mics accurately pick up the sound of your voice while an AI algorithm removes background noise from

the world around you. The person you're speaking to will hear you, not the noise — and with sidetone turned on, you can clearly hear your voice in the call too.

Comfy and secure



These earbuds fit snugly and are wrapped in comfy soft-touch silicone. Because no two ears are the same, you get four interchangeable sizes of flexible silicone eartips: mix and match to get a fit that's just right for you.

Philips sound signature

From music to podcasts, you'll enjoy detailed, natural sound with rich bass as the graphene-coated drivers reproduce every sparkling high and weighty low. Multipoint lets you connect to two Bluetooth devices (iOS or Android) at the same time.

28 hours play time with case

You get 7 hours of play time and an extra 21 hours from the small charging case. Pop the earbuds back in and they'll recharge fully in 2 hours. If you need a quick boost, just 5 minutes gives you an extra hour. The case can be charged via USB-C.

IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means that these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick workout or on a particularly hot day? They won't mind a little sweat either.

Specifications

Sound

Frequency range: 20–20,000 Hz
Speaker diameter: 10 mm
Impedance: 16 Ohm
Maximum power input: 10 mW
Sensitivity: 97 dB (1k Hz)
Driver type: Graphene coated

Connectivity

Bluetooth version: 5.3
Wireless
Bluetooth profiles: A2DP, AVRCP, HFP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: AAC, SBC
Type of wireless transmission: Bluetooth

Outer Carton

Length: 34.1 cm
Number of consumer packages: 24
Width: 29.9 cm
Gross weight: 4.832 kg
Height: 30.1 cm
GTIN: 1 48 95229 13168 9
Net weight: 1.728 kg
Tare weight: 3.104 kg

Convenience

Water resistance: IPX4
Philips Headphones app support
Google Fast Pair
Mono mode for TWS
Firmware updates possible
Type of controls: Button

Inner Carton

Length: 16 cm
Number of consumer packages: 3
Width: 14 cm
Height: 13.3 cm
Net weight: 0.216 kg
Gross weight: 0.53 kg
Tare weight: 0.314 kg
GTIN: 2 48 95229 13168 6

Power

Number of batteries: 3 pcs
Charging time: 2 hour(s)
Fast charging time: 5 mins for 1 hr
Battery type (Charging case): Lithium Polymer (built-in)

Battery type (Earbud): Lithium Polymer (built-in)
Battery weight (Total): 16.66 g
Battery capacity (Case): 740 mAh
Battery capacity (Earbud): 63 mAh
Battery life standby time: 200 hr
Music play time: 7 + 21 hr

Packaging dimensions

Height: 13 cm
Packaging type: Carton
Type of shelf placement: Hanging
Width: 11 cm
Depth: 4.9 cm
Number of products included: 1
EAN: 48 95229 13168 2
Gross weight: 0.14 kg
Net weight: 0.072 kg
Tare weight: 0.068 kg

Accessories

Quick Start Guide
Eartips: 4 pairs
Charging case
Charging cable: USB-C cable, 200 mm

Design

Colour: Black
Ear coupling material: Silicone
Ear fitting: In-ear
In-ear fitting type: Silicone ear-tip

Telecommunication

Microphone for call: 2 mics (AI+NR)

Dimensions

Charging case dimension (W x D x H): 6.50 x 3.00 x 4.00 cm
Earbud dimension (W x D x H): 2.40 x 2.90 x 2.20 cm
Total weight: 0.052 kg

UPC

UPC: 8 40063 20312 9

ANC features

ANC technology: Hybrid, ANC Pro
Awareness mode
ANC (Active Noise Cancelling)

Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant
Voice assistant activation: Manual
Voice assistant support

