



Philips
5.1 Home theater with 3D
Angled speakers

3D Blu-ray

dock iPod/iPhone



HTB7590KD

Enjoy powerful home cinema with 3D Angled Speakers

Obsessed with sound

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play all your favorite entertainment content including 3D Blu-ray on this innovative Philips 7000 series home theater system.

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- 3D Angled Speakers disperse sound evenly around the room
- DynamicSurround for a more immersive surround experience

Simply enjoy all your entertainment

- CinemaPerfect HD for clearer and sharper video playback
- Dock included for convenient playback from your iPod/iPhone
- Smart TV Plus to enjoy online services & multimedia on TV
- Built-in WiFi to enjoy your connected media wirelessly
- Karaoke for fun and exciting song contests at home
- Skype™ ready to make high quality video call easily
- Instant 2D to 3D conversion for a lifelike movie experience
- Internet radio to enjoy the world of online radio channels
- Turn your Smartphone into a remote for Philips AV products

PHILIPS

sense and simplicity


Highlights

CinemaPerfect HD



Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved color processing, the engine produces sharp, deep images on screen.

3D Angled speakers

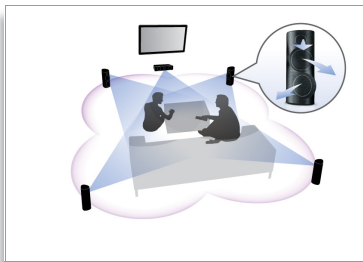

3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.


Smart TV Plus



Philips home theater & Blu-ray player with Smart TV Plus offer you an array of enhanced features, including Net TV, SimplyShare &

MyRemote. Net TV brings a wide range of online information & entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music & movies stored on your PC from the comfort of your couch. You can also use your smartphone/tablet to control your home theater via Philips MyRemote app.

Wireless rear speakers option

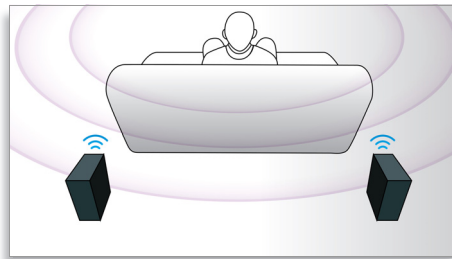

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections. You could buy the Philips wireless rear speakers separately.

Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

Skype™ ready

Add a new dimension to your calls and contact your friends and relatives as if you are there.


Simply plug in a selected* Skype™ camera to your home theater or Blu-ray player and enjoy HD video and excellent sound quality from the comfort of your couch. Use your familiar list of Skype™ contacts from your current Skype™ account and start calling! Skype™ camera is sold separately.

Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; MySound to customize your listening preferences; and SurroundMe to calibrate the best surround sound.

DynamicSurround

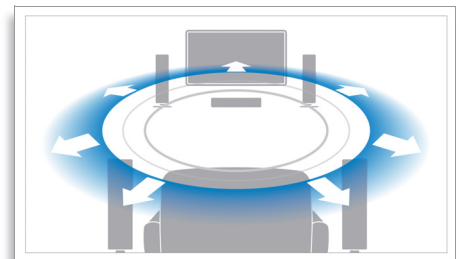

DynamicSurround employs highly advanced sound algorithms that faithfully replicate the sonic characteristics of the ideal full surround environment. This rewards listeners with an immersive, 7.1 system listening experience and by making the most of fewer speakers, the user's rooms are spared the clutter that comes with a 7.1 system - without sacrificing the surround sound experience.



Specifications

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dolby Digital Prologic II, Double Bass Sound, FullSound, Night Mode, Surround Plus, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Center speaker output power: 230 W
- Tallboy speaker output power: 4 x 135 W
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 1000 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Tallboy speakers
- Center speaker drivers: 2 x 2.5" woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 3 ohm
- Drivers per Tallboy speaker: 2 x 3" woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 5 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- Front Connections: Microphone In, Music iLINK, USB
- Integrated Connections: Wi-Fi
- Rear Connections: AUX in, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2, iPod/iPhone Dock Jack, SD/SDHC Card slot, Wireless Rear Audio
- Smart TV Plus: MyRemote App, Net TV, SimplyShare
- MyRemote App: MySound, SimplyShare, SurroundMe, Virtual Remote

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Tuner/Reception/Transmission

- Internet Radio
- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma

- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, flv, mkv, mp4, mpeg, mp3

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 105 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: 0.2 - 0.25 W

Sustainability

- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 435 x 56 x 344 mm
- Main Unit Weight: 3.35 kg
- Center Speaker (W x H x D): 266 x 87 x 99 mm
- Center Speaker Weight: 0.98 kg
- Centre Speaker cable length: 2 m
- Front Tallboy Speaker (WxHxD): 247 x 242 x 1100 mm
- Front Speaker Weight: 1.17 kg
- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 247 x 242 x 1100 mm
- Rear Speaker Weight: 1.17 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 178 x 353 x 302 mm
- Subwoofer cable length: 4 m
- Subwoofer Weight: 3.9 kg
- Packaging (W x H x D): 675 x 388 x 548 mm
- Weight incl. Packaging: 25.25 kg

Accessories

- Compatible accessories: Designated Skype Camera*, RWSS5512 Wireless Rear module
- Included accessories: 2 x AAA Batteries, DCK3061 iPod/iPhone dock, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet



Issue date 2013-03-21

Version: 5.1.1

12 NC: 8670 000 94076
EAN: 87 12581 65719 2

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Designated FreeTalk Skype camera <TALK-7191>, for details, please visit www.freetalk.me/philips