



Philips
Soundbar speaker

2.1 CH wired subwoofer
Bluetooth®
HDMI ARC
120W

HTL2163B



Powerful sound for any TV

with subwoofer

Enjoy your movies and music with Virtual Surround Sound and deep bass via just one cable! This Philips Soundbar with dedicated subwoofer enriches your home entertainment when used with TVs, BD/DVD players, gaming consoles and MP3 players

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action

Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS

Soundbar speaker
2.1 CH wired subwoofer Bluetooth®, HDMI ARC, 120W

HTL2163B/79


Highlights

Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Virtual Surround Sound

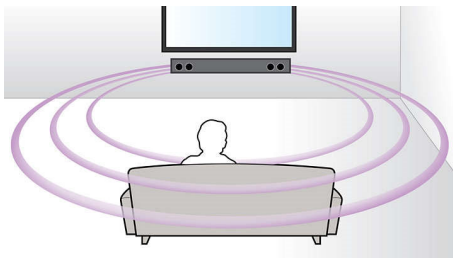

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

External subwoofer




External subwoofer adds thrill to the action

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Dolby Digital

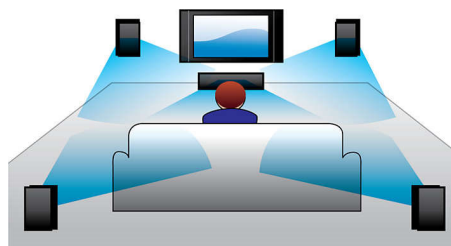

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Low-rise profile



Low-rise profile for the perfect fit in front of your TV

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Twin tweeters (HC 2012)

Twin tweeters for optimum clarity performance

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



Specifications

Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode
- Sound System: Dolby Digital
- Subwoofer output power: 60 W
- Speaker output power: 30W x 2
- Total Power RMS @ 10% THD: 120 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 3.6 ohm
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 8 ohm
- Tweeter Impedance: 16 ohm

Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Top connections: Audio In (3.5mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel,

Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passsthrough, System standby

Power

- Power consumption: 30 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AAA Battery (x1), AC Adapter

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 843x 52x 60 mm
- Weight incl. Packaging: 6.3 kg
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 400 x 292 x 349 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.5 kg
- Subwoofer cable length: 3 m

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-04-13

Version: 4.0.5

EAN: 87 12581 71742 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com