


What's in the box




Handset




Two 750mAh AAA NiMH batteries

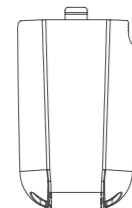


Battery door

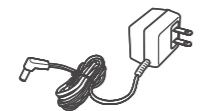


Power supply for charger

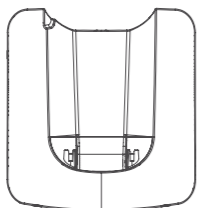


Charger

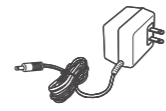


Power supply for base

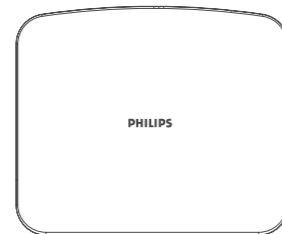


Base station

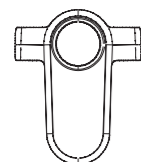

Belt clip

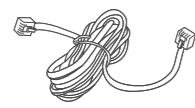


Line cord

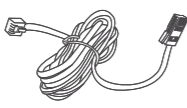

Ethernet cable (blue cable)



Quick start guide

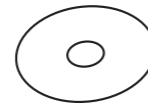


User manual on CD

What else will you need




A telephone line

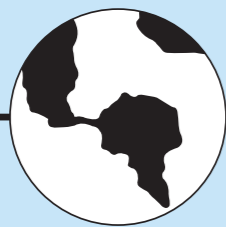

- Internet connection (high speed Internet connection)
- A Skype account
- Internet connection with an ADSL/Cable modem router or a router connected to an ADSL/Cable modem. Need at least one Ethernet LAN plug available.


1 Connect

A Connect to main supply

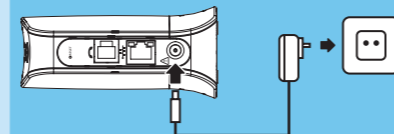


- Insert the plug of the base power adapter into the socket on the side of the base unit.
- Plug the base power adapter into your power outlet.

B Connect the Ethernet cable

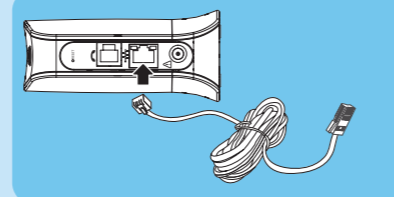

- Connect one end of the Ethernet cable to the Ethernet socket on the side of the base unit.
- Connect the other end of the ethernet cable to an available ethernet LAN plug of your ADSL/modem (or a router connected to Internet).


C Connect the line

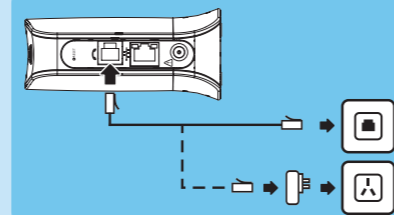

- Connect the telephone line cord to the phone socket on the side of the base unit and the wall phone socket.

If using ADSL subscription, an ADSL filter should be inserted between the phone plug and the wall socket.


D Connect the charger

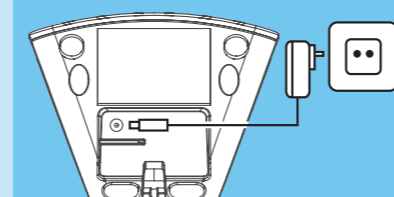

- Insert the plug of the charger power adapter into the socket on the bottom of the charger.
- Plug the power adapter into your power outlet.

2 Install

A Insert batteries

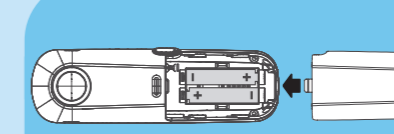

- Place the 2 rechargeable NiMH AAA batteries, observing their polarities, into the battery compartment on the handset.
- Slide the battery door firmly into place.

C Settings before first use

At first start up, you will be asked to set the language, accept an agreement, select the country where the phone is to be used and set the area code.


Set the display language:

- Scroll to the language you want.
- Press **Select** to confirm.

Review the agreement

- Press (Up or Down) to scroll through the agreement.
- Press **Accept** to accept the agreement and proceed.

B Charge handset

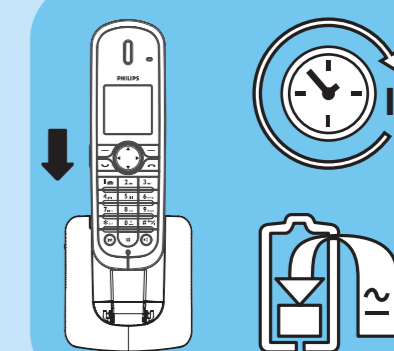

- Before first use, put the handset on the charger and charge batteries for 14 hours.

Select your country:

- Scroll to your country name. If you don't see your country name, select "OTHERS" on the bottom of the list and enter your international calling code (i.e. "1" for Canada or "61" for Australia), see section "8.10 Country codes list" in the user manual.
- Press **Select** to confirm.

Set your area code:


- Enter the area code. Area code is depending of the country, if you are not using area code press **OK**.
- Use **Clear** to correct typing errors.
- Press **OK** to confirm.

3

Enjoy

Skype calls

A Make and answer calls

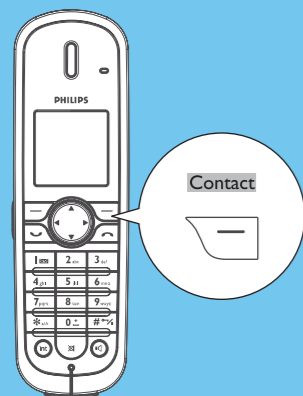


- Press the softkey **Contact** to access your Skype Contacts list.
- Press (Up or Down) to select the Skype contact.
- Press to call the selected contact.

When an incoming call arrives, the phone will ring and the LED on the phone will flash quickly.

- To answer the call press .

To end a call press or place the phone on the charger.


B Use the contact list

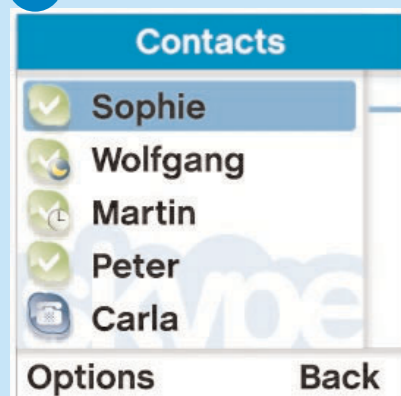

The contacts list shows the Skype contacts and the online status.

- Press the softkey **Contact** to access your Skype Contacts list.
 - Press (Up or Down) to select the contact you want to call.
- OR**
- **Search by letter:** Enter the first letter of the contact using the keypad, e.g. to search for "Sam", press four times.

C Call a SkypeOut number

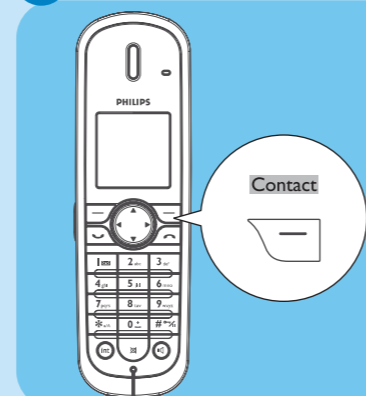

*Warning: to make a SkypeOut call you must dial the country prefix first (ex: 0033 or +33 for France).
Tip: Long press on key to dial "+".

Landline calls

A Make and answer calls



For details about how to get a SkypeOut account, please visit: <http://www.skype.com/products/skypeout>

- Press the softkey **Contact** to access your Skype Contacts list.
 - Press (Up or Down) to select the SkypeOut contact you want to call.
 - Press **Select** to call the contact.
- OR**
- Use the keypad to dial the number you want to call.*
 - Press **Options** and scroll to **SkypeOut**.
 - Press **Select**.

- Enter the phone number.
 - Press **Options** and scroll to **Landline**.
 - Press **Select**.
- To answer a call press .

To end a call press or place the phone on the charger.

Welcome

Quick start guide

1

Connect

2

Install

3

Enjoy



WARNING Never use non-rechargeable batteries.

PHILIPS