




Philips BeNear
Additional handset for
cordless phone

2000-series

Glossy White

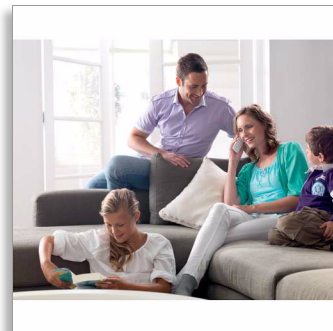

CD2850W

Bringing people closer

through superior sound

The 2000 series provides you superior sound to bring you closer to your loved ones even when you can't be together. With Philips, using cordless phones has never been so easy!

Experience superior sound quality

- MySound: Personal Sound Profiles
- Handset speakerphone allows you to talk hands-free

Benefit from pure convenience

- 4.57 cm (1.8") display with amber backlight
- Caller ID - see who is calling
- 100-name phonebook
- Up to 17 hrs talk time

Save Energy

- Low power consumption: < 0.65 W in standby mode
- EcoMode: reduced transmission power between handset and base

PHILIPS
sense and simplicity

Highlights

MySound



Sound perception is subjective and everyone has their individual listening preference, therefore MySound provides you with three distinctly different profiles in your choice of sound to give you the ultimate listening experience: Clear - for making the voices very crisp and clear Soft - for a more friendly and soft voice Warm - for making the voice sound welcoming and warm.

Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Low power consumption: < 0.65 W




Philips phones are energy efficient and are designed to be respectful to the environment. Now the power consumed in standby mode is less than < 0.65 W.

100-name phonebook



Always have the phone numbers of your loved ones available: Save up to 100 names in your phonebook.

Caller ID - see who is calling

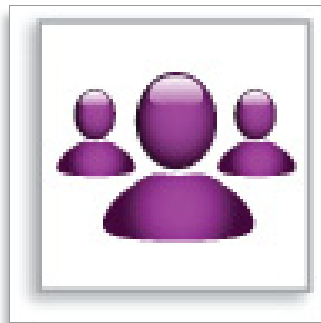


Caller ID - see who is calling

Up to 17 hrs talk time

Up to 17 hrs talk time

4.6 cm (1.8") amber-lit display

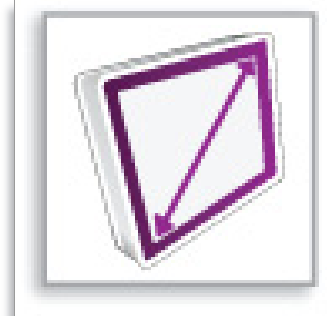

4.57 cm (1.8") display with amber backlight

EcoMode: reduced transmission



Since the base station recognises when the handset is docked on its base, an intelligent embedded system ensures transmitted power is permanently controlled and optimised according to the distance between handset and base unit. It means power emission is automatically reduced by up to 93% when the handset is near its base. When used in Eco Mode, you'll also enjoy a 60% manual reduction of emitted power.

Specifications

Sound

- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 polyphonic
- Speakerphone

Picture/Display

- Display size: 4.6 cm
- Backlight: Yes
- Backlight colour: Amber
- Display Type: FSTN

Convenience

- Date/Time display
- Alarm Clock
- Up to 15 hrs talk time
- Up to 220 hrs standby time
- Base Station keys: Paging key
- Battery charge indication
- Charge time: 8 hours
- Signal strength indication
- Call Management: Call Waiting, Caller ID, Microphone mute, Missed Calls, Received Calls
- Illuminated keypad
- Key tone on/off
- Auto Registration
- Multi-base capability: 1
- Multi-handset capability: Up to 5

Memory Capacity

- Phonebook: 100 names and numbers
- Redial List Capacity: 20
- Call log entries: 50 names

Power

- Battery capacity: 650 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V~50/60 Hz
- Power Consumption: < 0.7 W

Security

- Transmission encryption: Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: < 0.1 W/kg

Eco Design

- EcoMode: automatic and manual

Dimensions

- Base dimensions: 102 x 79.5 x 108.4
- Handset dimensions: 164.5 x 27.5 x 46.1



Issue date 2012-07-10

Version: 2.2.3

12 NC: 8670 000 81267
EAN: 87 12581 61846 9

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com

* Please note that this is an extra handset.