



Philips
In-ear true wireless
headphones

13mm drivers/closed-back
Bluetooth®
Black



TAT8505BK

Love what you hear. Love how they look

Sink into rich, detailed sound-or tune into the world around you. These refined true wireless headphones boast Active Noise Canceling and Awareness Mode for control over what you hear. The sophisticated circular design makes a statement.

Hear what you want

- Hybrid Active Noise Canceling. Focus where you want it
- Awareness Mode. Let the world in when you need to
- IR sensor. Music pauses when you take an earphone out
- Philips Headphones app. Custom sound control

Love what you hear

- Detailed, expansive sound with rich powerful bass
- Perfectly tuned 13 mm neodymium driver
- Refined geometric design. Comfortable in-ear fit
- Dual mics for crystal clear calls. Mono mode

Ready for your day. Or night

- Charging case. Get up to 24 hours of play time
- Rock-solid connectivity. Integrated earbud controls
- Integrated with the Google Assistant
- IPX4 splash- and sweat-resistant



reddot winner 2020

PHILIPS

In-ear true wireless headphones
13mm drivers/closed-back Bluetooth®, Black


Highlights

Hybrid Active Noise Canceling



When the song deserves your full attention, these true wireless headphones let you immerse without distraction. One external mic and one internal mic combine to filter out external noise. Awareness Mode lets you bring the world back in when you need to.

Detailed, expansive sound

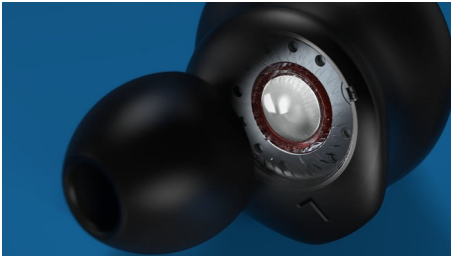

Perfectly tuned 13 mm drivers deliver powerful bass and thrilling clarity for every track. If you take an earbud out, the music pauses. Put the earbud back in, and the music starts up again.

Compact charging case



The charging case can be charged wirelessly, or via USB-C. A fully charged case gives you an

extra 18 hours play time. The headphones will play for 6 hours from a single charge (5 hours with ANC). Charge them for 15 minutes to get 1 extra hour.

Refined geometric design



The circular earbud housing boasts a tactile quality and is designed to subtly catch the light, creating an elegant, understated look. The oval-shaped acoustic tube sits comfortably and securely in your ear and maximizes passive noise isolation.

Mono mode



Two mics in each earbud focus on the sound of your voice, dramatically reducing noise from the world around you. If you're in a quieter place and don't need to block out noise while you're speaking, mono mode lets you use just one earbud to talk.

Philips Headphones app

Enhance the bass. Tone down the treble. The Philips Headphones app puts you in charge of the music you're listening to. Adjust levels yourself or choose from preset sound styles.

TAT8505BK/00

You can also switch between preset ANC modes with a single tap.

Rock-solid connectivity



Your headphones are ready to pair the instant you take them out of the charging case. Once they're paired, they remember the last device they were paired with. Touch controls on each earbud make it easy to control music, calls, and volume.

Google Assistant

Simply tap the touch controls on the left earbud to wake the Google Assistant, or any other voice assistant. The fully integrated Google Assistant lets you do more completely hands-free. Have notifications read to you, ask to play music-and more.



Specifications

Sound

- Impedance: 16 Ohm
- Speaker diameter: 13 mm
- Sensitivity: 108 dB
- Frequency range: 20 - 20 000 Hz
- Maximum power input: 5 mW
- Diaphragm: PET
- Magnet type: NdFeB

Connectivity

- Bluetooth version: 5.0
- Bluetooth profiles: AVRCP, A2DP, HFP, AAC, Streaming Format: SBC
- Maximum range: Up to 10 m

Convenience

- Call Management: Answer/End Call, Call on Hold, Microphone mute, Reject Call, Switch between 2 calls

Design

- Color: Black

Power

- Music play time: 6+18 hr
- Battery type: Li-Polymer
- Talk time: 6 hr
- Standby time: 200 hr
- Charging time: 1.5 hr
- Rechargeable

Accessories

- USB cable: USB-C cable
- Ear caps: 3 sizes
- Quick Start Guide

Inner Carton

- Gross weight: 0.842 kg
- GTIN: 2 48 95229 10842 8
- Inner carton (L x W x H): 18 x 10.5 x 16.7 cm
- Nett weight: 0.291 kg
- Number of consumer packagings: 3
- Tare weight: 0.551 kg

Outer Carton

- Number of consumer packagings: 24
- Outer carton (L x W x H): 44.8 x 37.7 x 19.6 cm
- Gross weight: 7.592 kg
- Tare weight: 5.264 kg
- GTIN: 1 48 95229 10842 1
- Nett weight: 2.328 kg

Product dimensions

- Product dimensions (W x H x D):
7.2 x 4.4 x 3.6 cm
- Weight: 0.073 kg

Packaging dimensions

- Packaging dimensions (W x H x D):
9.5 x 17.5 x 5.5 cm
- Gross weight: 0.249 kg
- Nett weight: 0.097 kg
- Tare weight: 0.152 kg
- EAN: 48 95229 10842 4
- Number of products included: 1
- Type of shelf placement: Both

UPC

- UPC: 8 40063 20153 8



Issue date 2022-10-16

Version: 8.2.4

12 NC: 8670 001 66786
EAN: 48 95229 10842 4

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com