




Philips 8000 series  
In-ear true wireless  
headphones

13mm drivers/closed-back  
Bluetooth®  
Black

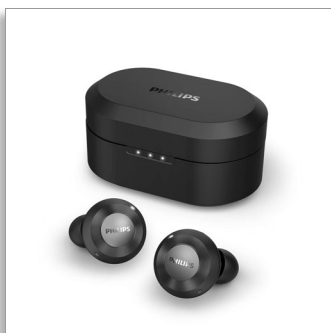

TAT8505BK

## Love what you hear. Love how they look

Sink into rich, detailed sound-or tune into the world around you. These refined true wireless headphones boast Active Noise Canceling and Awareness Mode for control over what you hear. The sophisticated circular design makes a statement.

### Hear what you want

- Awareness Mode. Let the world in when you need to
- Hybrid Active Noise Canceling. Focus where you want it
- IR sensor. Music pauses when you take an earphone out
- Philips Headphones app. Custom sound control

### Ready for your day. Or night

- Charging case. Get up to 24 hours of play time
- Rock-solid connectivity. Integrated earbud controls
- Integrated with the Google Assistant
- IPX4 splash- and sweat-resistant

### Love what you hear

- Detailed, expansive sound with rich powerful bass
- Refined geometric design. Comfortable in-ear fit
- Dual mics for crystal clear calls. Mono mode
- Perfectly tuned 13 mm neodymium driver

# PHILIPS

In-ear true wireless headphones  
13mm drivers/closed-back Bluetooth®, Black

TAT8505BK/00

# Highlights

## Hybrid Active Noise Canceling



When the song deserves your full attention, these true wireless headphones let you immerse without distraction. One external mic and one internal mic combine to filter out external noise. Awareness Mode lets you bring the world back in when you need to.

## Detailed, expansive sound



Perfectly tuned 13 mm drivers deliver powerful bass and thrilling clarity for every track. If you take an earbud out, the music pauses. Put the earbud back in, and the music starts up again.

## Compact charging case



The charging case can be charged wirelessly, or via USB-C. A fully charged case gives you an extra 18 hours play time. The headphones will


play for 6 hours from a single charge (5 hours with ANC). Charge them for 15 minutes to get 1 extra hour.

## Refined geometric design



The circular earbud housing boasts a tactile quality and is designed to subtly catch the light, creating an elegant, understated look. The oval-shaped acoustic tube sits comfortably and securely in your ear and maximizes passive noise isolation.

## Mono mode

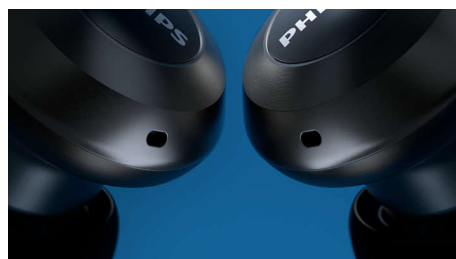

Two mics in each earbud focus on the sound of your voice, dramatically reducing noise from the world around you. If you're in a quieter place and don't need to block out noise while you're speaking, mono mode lets you use just one earbud to talk.

## Philips Headphones app

Enhance the bass. Tone down the treble. The Philips Headphones app puts you in charge of the music you're listening to. Adjust levels yourself or choose from preset sound styles. You can also switch between preset ANC modes with a single tap.

## Rock-solid connectivity



Your headphones are ready to pair the instant you take them out of the charging case. Once they're paired, they remember the last device they were paired with. Touch controls on each earbud make it easy to control music, calls, and volume.

## Google Assistant

Simply tap the touch controls on the left earbud to wake the Google Assistant, or any other voice assistant. The fully integrated Google Assistant lets you do more completely hands-free. Have notifications read to you, ask to play music-and more.

## Awareness Mode.

Awareness Mode. Let the world in when you need to

## IPX4

The small charging case couldn't be more convenient, and these true wireless headphones are also resistant to splashing from any direction. They won't mind a little sweat, and you don't need to worry about getting caught out in the rain.

## IR sensor.

IR sensor. Music pauses when you take an earphone out

## Perfectly tuned 13 mm driver

Perfectly tuned 13 mm neodymium driver



# Specifications

## Sound

- Frequency range: 20 - 20 000 Hz
- Speaker diameter: 13 mm
- Diaphragm: PET
- Impedance: 16 Ohm
- Magnet type: NdFeB
- Maximum power input: 5 mW
- Sensitivity: 108 dB

## Connectivity

- Bluetooth version: 5.0
- Bluetooth profiles: AVRCP, A2DP, HFP, AAC, Streaming Format: SBC
- Maximum range: Up to 10 m

## Outer Carton

- Length: 44.8 cm
- Number of consumer packagings: 24
- Width: 37.7 cm
- Gross weight: 7.592 kg
- Height: 19.6 cm
- GTIN: 1 48 95229 10842 1
- Nett weight: 2.328 kg
- Tare weight: 5.264 kg

## Convenience

- Call Management: Answer/End Call, Call on Hold, Microphone mute, Reject Call, Switch between 2 calls

## Inner Carton

- Length: 18 cm
- Number of consumer packagings: 3
- Width: 10.5 cm
- Height: 16.7 cm
- Nett weight: 0.291 kg
- Gross weight: 0.842 kg

- Tare weight: 0.551 kg
- GTIN: 2 48 95229 10842 8

## Power

- Battery type: Li-Polymer
- Rechargeable
- Music play time: 6+18 hour(s)
- Standby time: 200 hr
- Talk time: 6 hr
- Charging time: 1.5 hour(s)

## Packaging dimensions

- Height: 17.5 cm
- Type of shelf placement: Both
- Width: 9.5 cm
- Depth: 5.5 cm
- Number of products included: 1
- EAN: 48 95229 10842 4
- Gross weight: 0.249 kg
- Nett weight: 0.097 kg
- Tare weight: 0.152 kg

## Product dimensions

- Height: 4.4 cm
- Width: 7.2 cm
- Depth: 3.6 cm
- Weight: 0.073 kg

## Accessories

- Quick Start Guide
- USB cable: USB-C cable
- Ear caps: 3 sizes

## Design

- Color: Black

## UPC

- UPC: 8 40063 20153 8



Issue date 2024-04-26

Version: 8.2.4

EAN: 48 95229 10842 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)