



Philips  
wireless portable speaker

Bluetooth®  
Rechargeable battery  
2 W

BT50G

## Big sound that fits in a fist

Live life with music streamed wirelessly from one compact, round and easy-to-carry speaker. Bright colours help you pick one that fits your style and a built-in rechargeable battery keeps music pumping wherever and whenever you take it.

### Impressive sound

- Advanced audio performance with a compact design
- Anti-clipping function for loud, distortion-free music

### Designed for grab and go

- Built-in rechargeable battery for music playback anywhere

### Simplicity in use


- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth

**PHILIPS**

wireless portable speaker  
Bluetooth® Rechargeable battery, 2 W


# Highlights

## Wireless music streaming

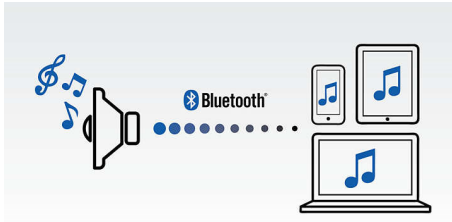

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

## Anti-clipping function

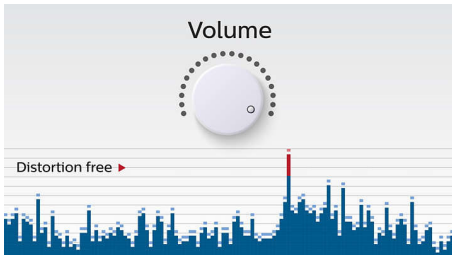

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery

is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

## Audio-in



Audio-in for easy connection to almost any electronic device

BT50G/00

## Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of tangled power cords and the inconvenient search for an electrical socket. Enjoy great music with the freedom of portability now.

## Advanced audio performance

Advanced audio performance with a compact design

# Specifications

## Sound

- Output power (RMS): 2 W
- Sound System: Mono

## Design and finishing

- Colour: Grey

## Loudspeakers

- Speaker driver: 1 x 1.5"

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- USB charging

## Compatibility

- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with

Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3

- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 6 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

## Dimensions

- Product dimensions (WxDxH): 6.1 x 6.1 x 7.6 cm
- Weight incl. Packaging: 0.2 kg
- Packaging dimensions (WxDxH): 8.1 x 9.5 x 14 cm
- Product weight: 0.09 kg



Issue date 2024-03-24

Version: 3.0.9

EAN: 48 95185 60796 2

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)