



Philips  
Portable DVD Player

18 cm/7" LCD

PD7001B



## Movies that travel with you

Enjoy your movies anytime, anywhere! The portable PD7001B DVD player featuring an 18 cm/7" LCD display lets you indulge in the pleasure of enjoying DVD movies, MP3-CD/CD music and JPEG photos on the go.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 17.8 cm (7") TFT colour LCD display in 16:9 widescreen format
- Built-in stereo speakers

### Extra touches for your convenience

- Full Resume on Power Loss
- Few buttons for simple and easy control
- Car adaptor included

# PHILIPS

# Highlights

## MP3-CD, CD and CD-RW playback




MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## View JPEG from picture disc



Play JPEG photos that are saved on your disc. Relive your favourite moments with family and friends anytime you want!

## DVD, DVD+/-RW, (S)VCD, CD

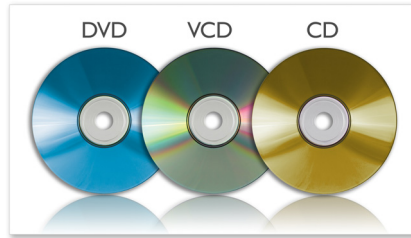

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## Power Resume

The DVD-Video player remembers where you last stopped watching both if it is powered off directly and if the power supply is discontinued. If you did not change to another disc, your player will resume play where you last stopped the movie just by reloading the disc—making your life a lot easier!

## DivX Certified

With DivX<sup>®</sup> support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified<sup>®</sup> Philips device.

# Specifications

## Product dimensions

- Product dimensions (W x H x D): 20.2 x 4 x 16.4 cm
- Weight: 0.57 kg

## Picture/Display

- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w) x 234(H) x 3(RGB)
- Display screen type: LCD TFT

## Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 5 mW RMS (earphone)
- Signal to noise ratio: >80 dB (line out), >76 dB (earphone), >62 dB (built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Zoom, Resume Playback from Stop
- Video disc playback system: PAL, NTSC
- Compression formats: MPEG4, Divx

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9 V, 0.8 A
- Headphone jack: 3.5 mm Stereo Headphone
- AV output: Composite (CVBS) x 1

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adapter: DC 9 V, 0.8 A, 110-240 v, 50/60 Hz
- User Manual: English
- Car kit: cigarette outlet adapter, 12VDC

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 2 hrs\*

## Outer Carton

- Outer carton (L x W x H): 24 x 22.5 x 27 cm
- Net weight: 2.19 kg
- Gross weight: 3.09 kg
- Tare weight: 0.9 kg
- GTIN: 1 87 12581 68721 9
- Number of consumer packages: 3

## Packaging dimensions

- Packaging dimensions (W x H x D): 23 x 25.5 x 7 cm
- Net weight: 0.73 kg
- Gross weight: 0.96 kg
- Tare weight: 0.23 kg
- EAN: 87 12581 68721 2
- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying



Issue date 2016-04-29

Version: 2.0.5

12 NC: 8670 001 02797  
EAN: 08 71258 16872 12

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

\* Battery life varies by use and settings.

\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.