

Philips Clock Radio

Bluetooth® FM, Digital tuning USB port for charging Dual alarm



AJT4400B

# Enjoy wireless music and charge your smartphone

Wake up the right way with dual alarms for you and your partner, with FM tuning presets so you can both wake to your favorite radio shows, or even a wakeup buzzer. Use the included USB port to charge any mobile device.

# Enrich your sound experience

• Wireless music streaming via Bluetooth

### Start the day your way

- Wake up to your favorite radio tune or a buzzer
- Repeat alarm for additional snooze
- Dual alarm to wake you and your partner at different times
- · Gentle wake for a pleasant wake up experience
- · FM digital tuning with presets

### Easy to use

- Battery back-up ensures memory of time during power failure
- · Adjustable display brightness for comfort viewing
- USB port to charge any mobile device
- · Built-in microphone for hands-free phone calls
- Sleep timer for easy falling asleep to your favorite music



AJT4400B/37

# Clock Radio Bluetooth® FM, Digital tuning, USB port for charging, Dual alarm

# Highlights

### Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetoothenabled speaker.

### Wake up to radio or a buzzer



Wake up to sounds from your favorite radio station or a buzzer. Simply set the alarm on your Philips Clock radio to wake you with the radio station you last listened to or choose to wake up with a buzzer sound. When the wake up time is reached, your Philips Clock radio will automatically turn on that radio station or trigger the buzzer to sound.

### **Repeat alarm**



To counter oversleeping, the Philips Clock radio has a snooze feature. Should the alarm

ring and you wish to continue sleeping a bit longer, simply press the Repeat Alarm button once and go back to sleep. Nine minutes later the alarm will ring again. You can continue to press the Repeat Alarm button every nine minutes until you turn off the alarm altogether.

## **Dual alarm**



The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

### Gentle wake




Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

### **Battery back-up**

Battery back-up ensures memory of time during power failure

# Adjustable display brightness

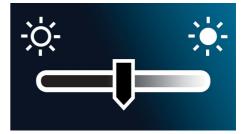

The Philips radio's playing time can easily be controlled by setting the preferred number of minutes on the digital timer. It automatically counts down the time and turns off the radio at the end of the session.

### **Built-in microphone**

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

### FM digital tuning with presets



Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.









# Specifications

### Clock

- Type: Digital
- Display: LED
- Time format: 24H, 12H

# Alarm

- No. of alarms: 2
- Alarm source: Buzzer, FM radio
- Snooze (repeat alarm): Yes, 9mins
- 24 hours alarm reset
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

### **Tuner/Reception/Transmission**

- Tuner bands: FM
- FM frequency range: 87.5 108 MHz
- No. of preset stations: 20 FM
- Antenna: FM antenna

### Sound

- Sound system: mono
- Output power (RMS): 2W
- Volume Control: digital

#### Power

- Power type: AC Input
- AC power input: 100-240V, 50/60 Hz
- Standby power consumption: < 1W
- · Battery type: AA
- Number of batteries: 2 (For time & alarm backup only)

### **Dimensions**

- Packaging type: D-box
- Product dimensions (WxDxH): 129 x 104 x 105 mm
- Packaging dimensions (WxDxH): 133 x 114 x 138
- mm • Product weight: 0.5 kg

### **Accessories**

- Quick start guide Warranty: Warranty leaflet

### **Bluetooth® wireless technology**

- Profiles: A2DP, AVRCP, HFP
- Range: 10M (free space)

### Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

## Connectivity

- Microphone: Built-in microphone
- USB charging

#### Convenience

- Speakerphone talk handsfree
- Volume control: Rotary

### **USB** Charging

• 5V, 1A • Yes



12 NC: 8670 001 28025 UPC: 8 89446 00168 6

Issue date 2015-09-20

Version: 3.0.3

or their respective owners.

All Rights reserved.

© 2015 Koninklijke Philips N.V.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V.

www.philips.com

4400B/37