



Philips
Soundbar speaker

Virtual surround

Integrated subwoofer
2 HDMI In and HDMI out ARC
Bluetooth®

HTL3120

Powerful sound for any TV

with Integrated subwoofer

Unleash the full sound potential of all your media devices. With its integrated subwoofer and orientation sensor, it gives you the freedom to place the soundbar just the way you like it.

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- Connect to HDMI x 2 for great picture and sound quality
- Enjoy MP3/WMA music directly from your portable USB devices
- Wireless music streaming via Bluetooth

Designed for simplicity

- Flexible placement on the wall or tabletop
- Great Sound built in for true simplicity without clutter


Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- 120 W RMS power delivers great sound for movies and music
- Bass Reflex speakers deliver a powerful, deeper bass
- Dolby Digital and DTS for great surround sound
- Dual 3" driver to deliver deep bass

PHILIPS

Highlights

Virtual Surround Sound

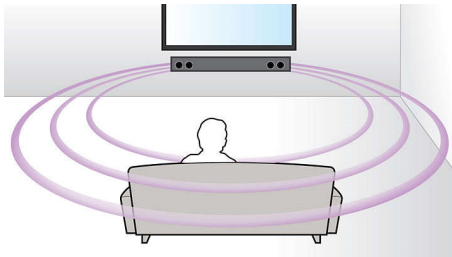


Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

HDMI x 2

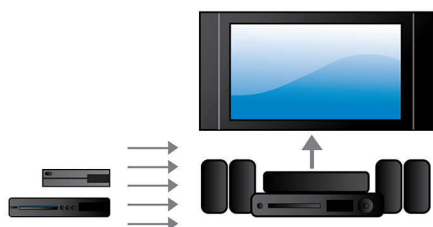

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our

player's audio HDMI x 2 output to the connection in your non-3D AV receiver.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Bluetooth




Bluetooth is a short-range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth-enabled devices, so you can play your favourite music from any smartphone, tablet or laptop, including the iPod or iPhone, with a Bluetooth-enabled speaker.

120 W RMS power

120 W RMS power delivers great sound for movies and music


Bass Reflex System

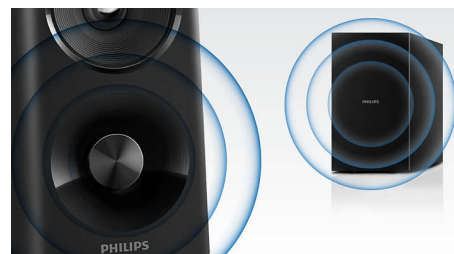

A chamber behind the speaker driver channels air to the acoustically tuned vents built into the


speaker, giving the bass notes a more punchy, realistic sound.

Dolby Digital and DTS

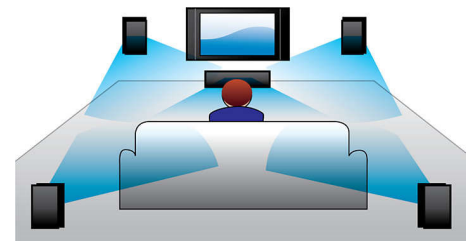

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

Dual 3" driver

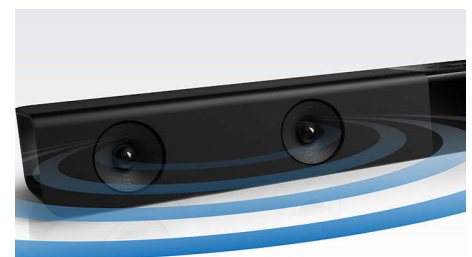

Dual 3" driver to deliver deep bass

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Specifications

Sound

- Sound Enhancement: Audio sync, Auto Volume Leveller, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Speaker output power: 2 x 60 W
- Total Power RMS @ 30% THD: 120 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 2 x 2" Full range woofers
- Speaker Frequency Range: 55 - 18k Hz
- Speaker Impedance: 3 ohm
- Tweeter Impedance: 12 ohm

Connectivity

- Front/Side connections: Audio in, USB
- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth

Outer Carton

- EAN: 87 12581 66795 5
- Length: 109 cm
- Number of consumer packages: 1
- Width: 13.5 cm
- Gross weight: 5.1 kg
- Height: 18 cm
- Net weight: 3.9 kg
- Tare weight: 1.2 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power consumption: 25 W
- Power supply: 110-240V, 50 Hz
- Standby power consumption: < 0.5 W

Packaging dimensions

- Height: 18 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 109 cm
- Depth: 13.5 cm
- Number of products included: 1
- EAN: 87 12581 66795 5
- Gross weight: 5.1 kg
- Net weight: 3.9 kg
- Tare weight: 1.2 kg

Product dimensions

- Height: 9.4 cm
- Width: 99.5 cm
- Depth: 10.25 cm
- Weight: 3.5 kg

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 995 x 91 x 104 mm
- Weight incl. Packaging: 4 kg
- Main Unit Weight: 3.5 kg
- Packaging (W x H x D): 1094 x 180 x 135 mm

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

