

Philips  
DVD-Player



DVP3350



# Enjoy it all — from DVD or USB

With Hi-Speed USB 2.0 Link

???? DVD ???Philips DVD ?????????????

## Brings audio and video to life

- 12-bit/108 MHz video processing for sharp, natural images
- 192 kHz/24-bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimised image quality
- Screen Fit for optimal viewing every time

## Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- Media Copy transfers photos & music to USB flash drives

## Легко использовать

- One-touch MP3 creation directly from CDs onto USB sticks

## Plays all your movies and music


- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- DivX Certified for standard playback of DivX videos

**PHILIPS**

sense and simplicity


# Highlights

## Plays it all

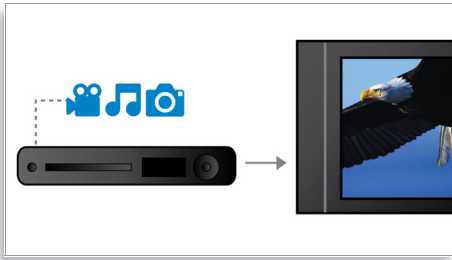


Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

## Progressive Scan

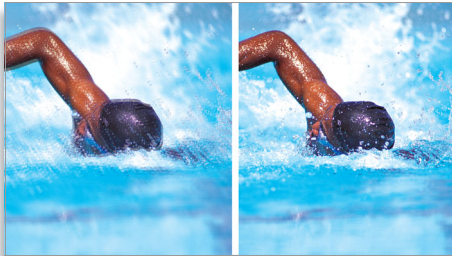


Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## One-touch MP3 creation

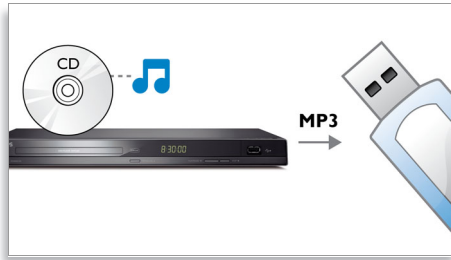

Convert the contents of your favourite CDs to MP3 files on your Philips product and store them directly on a thumb drive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC and even while the CD is playing.


## Hi-Speed USB 2.0 Link

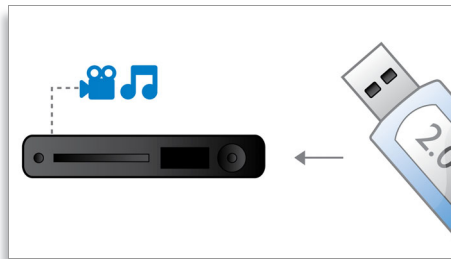

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug


in your USB device, select the movie, music or photo and play away.

## Media Copy

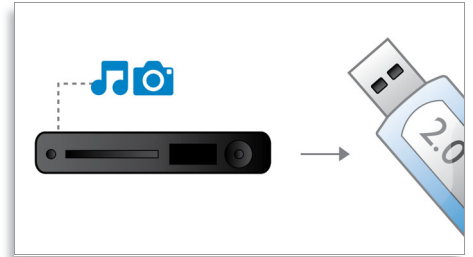

Share your photos and music with family and friends in your living room — and elsewhere. Simply copy the files onto your USB thumb drive and carry your favourites with you wherever you go.

## Screen Fit

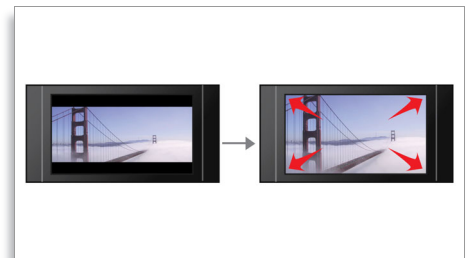

Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen



# Specifications

## Görüntü/Ekran

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Ljud

- D/A converter: 24-bit, 192 kHz
- Kmitočtová charakteristika: 30-20,000 Hz
- Signal to noise ratio: > 100 dB
- Distortion and Noise (1 kHz): > 85 dB
- Crosstalk (1 kHz): > 100 dB
- Dynamic Range (1 kHz): > 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow, Slideshow with MP3 playback

## Multimedia Applications

- Playback Formats: DivX, JPEG Still pictures, MP3
- Multimedia connections: USB memory class device

## Anslutningar

- Rear Connections: Analogue audio Left/Right out, Component Video out Progressive, Composite video (CVBS) output, Digital coaxial out, Scart
- Front/Side connections: USB

## Функции управления

- Child Protection: Child Lock, Parental Control
- Ekran Menüü (OSD) Dilleri: İngilizce, Almanca, Felemenkçe, Danish, Finnish, Fransızca, İtalyanca, Norwegian, Portekizce, İspanyolca, Turkish, Swedish, Polish

## Leistung

- Güç tüketimi: < 10 W
- Virtualhde: 50 Hz, 230 V
- Spotřeba energie v pohotovostním režimu: < 1 W

## Tillbehör

- Included accessories: Duas pilhas AAA, Remote Control, World Wide Warranty leaflet, User Manual, Quick start guide

## Размеры

- Packaging dimensions (W x H x D): 480 x 80 x 282 mm
- Set dimensions (W x H x D): 360 x 37 x 209 mm
- Вес устройства: 1.3 kg
- Weight incl. Packaging: 2.4 kg



Issue date 2010-02-03

Version: 2.0.7

12 NC: 8670 000 48857  
EAN: 87 12581 45988 8

© 2010 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)