



Philips  
DVD micro music system

Bluetooth®  
DVD



**BTD5210**

## Rich and powerful sound

Enrich music and movies with this Philips DVD micro music system. Set your music free with wireless music streaming via Bluetooth, and hear it in greater detail and with more powerful bass thanks to the bass reflex system.

### Enrich your sound experience

- Bass Reflex Speaker System delivers a powerful, deeper bass
- 70 W RMS maximum output power

### Easy to use

- Motorised CD loader for convenient access
- FM digital tuning to preset up to 20 stations


### Enjoy your favourite movies and music

- HDMI 1080p upscales to high definition for sharper pictures
- Karaoke for endless singing entertainment at home
- Play DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD
- USB Direct for easy MP3 music playback
- Bluetooth wireless music streaming from your music devices
- HDMI ARC to access all the sound from your TV

# PHILIPS

# Highlights

## Bluetooth wireless streaming

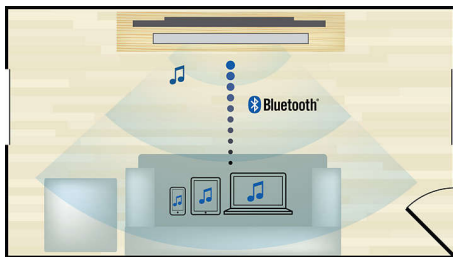

Bluetooth wireless music streaming from your music devices

## HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

## HDMI ARC

HDMI ARC to access all the sound from your TV

## PlayDVD,VCD,MP3-CD,CD(RW)&Pict



The Philips player is compatible with most DVD and CD discs available on the market. DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD - all of them can play on the player. SVCD stands for "Super VideoCD". The quality of a SVCD is much better than a VCD, with a much sharper picture than a VCD, because of the

higher resolution. CD(RW) is a shorthand term for a CD drive that can accept the common rewritable CD format.

## Karaoke for endless singing



Karaoke for endless singing entertainment at home

## USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

## Preset up to 20 stations



Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, then press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your

favourite radio stations without having to manually tune the frequencies each time.

## Motorised CD loader

A motorised sliding front door adds even more panache to the already sleek design of this system. The stylish yet functional door housing the disc slides up and down vertically in a smooth motion at the touch of a button whenever you feel like changing your music selection. Just sit back and enjoy the dynamic sound performance while watching the disc play through the transparent window.

## 70 W RMS maximum output power

70 W RMS maximum output power

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

# Specifications

## Sound

- Sound Enhancement: Digital Sound Control
- Sound System: Dolby Digital
- Maximum output power (RMS): 70 W

## Loudspeakers

- Main Speaker: 2-way
- Speaker drivers: Dome Tweeter with 4.5" woofer

## Connectivity

- Audio Connections: Analogue Audio In (L/R), RCA Aux in
- Microphone: Microphone socket
- USB: USB host
- Bluetooth profiles: A2DP
- Audio/Video output: HDMI out
- Video Output - Analogue: Composite CVBS (yellow cinch)

## Tuner/Reception/Transmission

- Antenna: FM antenna (75 ohm)
- Auto digital tuning
- Tuner Enhancements: Auto Store
- Tuner Bands: FM Stereo
- Station presets: 20
- RDS: Programme Type, Station Name

## Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Indications: DIM mode

## Power

- Power supply: 110-240V, 50/60 Hz

## Accessories

- Included accessories: Composite video cable (Y), AC Power Cord, FM antenna
- Remote control: Yes, with battery
- User Manual: Multi-lingual

## Dimensions

- Gross weight: 6.5 kg
- Net weight: 6 kg
- Main speaker depth: 210 mm
- Main speaker width: 160 mm
- Main unit depth: 240 mm
- Main unit height: 121 mm
- Main unit width: 200 mm
- Packaging height: 288 mm
- Packaging width: 512 mm
- Packaging depth: 278 mm
- Main speaker height: 235 mm

## Audio Playback

- Disc Playback Modes: Repeat/one/all/programme, Fast Forward/Reverse, Next/Previous Track Search
- Playback Media: MP3-CD, CD, CD-R, CD-RW
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Repeat, Stop

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: Picture CD, CD-R/RW, DVD+R/+RW
- Picture Enhancement: Slideshow with MP3 playback

## Video Playback

- Playback Media: DivX, DVD-Video, Picture CD, Video CD/SVCD, DVD+R/+RW, DVD-R/-RW
- Disc Playback Modes: A-B Repeat, Angle, PBC, Slow Motion, Zoom, Parental control, Disc Menu, Fast Reverse, Fast Forward, OSD, Resume Playback from Stop
- Video Enhancement: Progressive Scan, Video Upscaling
- DVD Region.: 2



Issue date 2024-03-24

Version: 3.0.3

EAN: 48 95185 61172 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)