



Philips  
Car audio video system

17.8 cm (7")  
Bluetooth  
DVD

CED1700



## Seamless music and video enjoyment on the road

Philips CED1700 with a 17.8cm/7" WVGA(800x480px) display for video & photo playback is the ultimate entertainment system for your car. Enjoy movies & music from multiple sources, and never miss a call with the built-in Bluetooth® receiver.

### Enrich your AV entertainment experience

- 17.8 cm (7") high density (800x480 pixels) LCD display
- Play DVD, DVD+/-R, DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- USB Direct and SDHC card slots for music and video playback
- AV-IN for portable video and music playback

### Superb performance with full features

- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- Rear-view camera mode for backing up safety
- Dual video outputs for entertainment in rear seats

### Design that blends into your car

- 17.8 cm (7") motorized color widescreen with a touch panel
- Graphical user interface for easy navigation
- Perfect-fit 2.0 DIN chassis design

# PHILIPS

Car audio video system  
17.8 cm (7") Bluetooth, DVD

# Highlights

## DBB Dynamic Bass Boost




Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

## Super anti-shock protection

Super anti-shock protection for smooth music enjoyment

## USB Direct and SDHC card slots

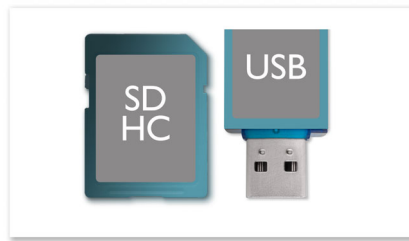

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music, videos and photos via the built-in USB Direct and SDHC card slots.

## Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving and you

CED1700/00

don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also conveniently stream your music files from your phone to your car entertainment system.

## 17.8 cm (7") HD LCD display



The high resolution (800 x 480 pixel) color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints.



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 7"
- Resolution: 800(W) x 480(H) x 3(RGB)
- Aspect ratio: Widescreen
- Brightness: 400 cd/m<sup>2</sup>
- Contrast ratio (typical): 400
- Effective viewing area: 157.2 x 82.32mm
- Pixel pitch: 0.1965(W) x 0.1715(H)
- Key illumination: Blue

## Video Playback

- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, DVD+RW, Video CD, SVCD, Picture CD
- Disc Playback Modes: A-B Repeat, Chapter repeat, Disc Menu, Fast Backward, Fast Forward, OSD, PBC, Repeat, Resume Playback from Stop, Search forward/reverse, Slow Backward, Slow Forward, Still Picture, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: DivX 4.x, DivX 5.x, DivX 6.0, MPEG4

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD, USB flash drive, SD Card
- Compression format: Dolby Digital, MP3, WMA, WMA9
- Disc Playback Modes: Fast Forward/Backward, Introscan, Next/Previous Album Search, Next/Previous Track Search
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320kbps and variable bit rate
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

## Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18(FM), 12(AM)
- RDS: Station Name, Station Information, Program

Type, News

## Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: Dynamic Bass Boost
- Output power (MAX): MOSFET 50Wx4 Channels
- Output power (RMS): 24Wx4 channels (4 ohms, 10% T.H.D.)

## Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- Video Output - Analog: Composite video out
- Preamp output: 2 pairs RCA(L/R)
- Sub-woofer preamp output: x1 (With gain control)
- AV input: Composite (CVBS) x1
- Bluetooth profiles: A2DP, AVRCP, Handsfree
- Bluetooth version: 2.0
- Navigation ready: Yes (Navigation box sold separately)
- Parking camera input: Yes (Switched on automatically in car reverse)

## Security/Anti-theft

- Display blackout: 10/20 sec selectable

## Accessories

- Remote control: Slim remote with battery
- User Manual: English, Brazilian Portuguese, Spanish, Simplified Chinese, Traditional Chinese
- Quick start guide: English, Traditional Chinese, Simplified Chinese, Brazilian Portuguese, Spanish

## Power

- Power supply: 12V DC

## Dimensions

- Product dimensions (W x H x D): 178 x 100 x 185.4 mm
- Chassis: 2 Din



Issue date 2014-02-13

Version: 2.0.2

12 NC: 8670 000 65144  
EAN: 69 23410 70284 2

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)