



Philips
Soundbar 3.1.2 with
wireless subwoofer

720W max. Wireless subwoofer
Dolby Atmos. Cinema Experience
Play-Fi. Home Sound Made Easy
Connects with voice assistants



TAB8907

Breathtaking cinema sound at home

This incredible 3.1.2 channel soundbar with wirelessly connecting subwoofer bring you a revolutionary home cinema experience. Dedicated center-channel speakers provide great vocal clarity and Dolby Atmos delivers immersive surround sound.

Easy control. Distinctive looks.

- Two angled speakers for wider sound
- Connects to your favorite voice assistant-enabled devices
- Easily connect to your favorite sources
- HDMI 4K pass through for Ultra HD Audio

Unpack. Connect. Enjoy.

- Philips Wireless Home System. Home sound made easy
- Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in
- DTS Play-Fi. Multi-room audio setup
- HDMI eARC. Enjoy the high-quality and latest audio formats

The sound you want for the content you love


- DTS Play Fi Home Theatre. Wireless surround sound
- Stadium EQ Mode. Bring the stadium home
- 3.1.2 channels. 720W max power output. Rich, powerful sound
- Dolby Atmos. Immersive cinematic sound at home

PHILIPS

Soundbar 3.1.2 with wireless subwoofer
 720W max. Wireless subwoofer Dolby Atmos. Cinema Experience, Play-Fi. Home Sound Made Easy,
 Connects with voice assistants

Highlights

3.1.2 channels. 720W max power

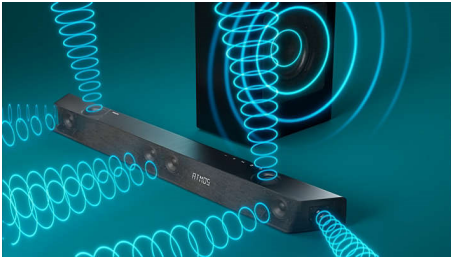

This soundbar brings max 720W (360W RMS at 10% THD) of powerful and rich sound to everything you watch. 3.1.2 channels fill any room with spellbinding soundtracks, thunderous effects, and crystal-clear dialogue. The wireless subwoofer adds impact to every explosion and every beat.

Dolby Atmos




Increase the drama no matter what you watch. This soundbar's up-firing speakers give you the full Dolby Atmos experience. Your favorite movies and shows will sound breathtakingly realistic as sound flows above and around you.

Wider soundstage




Widen the sound! Two extra tweeter speakers at either end of the soundbar broaden the audio to give you a clear separation of instruments. Pick them out easily and hear every instrument in the orchestra like you're really in the hall!

Stadium EQ Mode

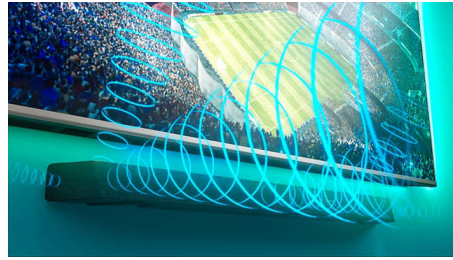


Experience the excitement of live sports, right there in your living room. Stadium EQ Mode immerses you in ambient crowd noise, just like you were sitting in the stadium! Be thrilled by every crucial moment and still hear crystal-clear commentary.

Philips Wireless Home System

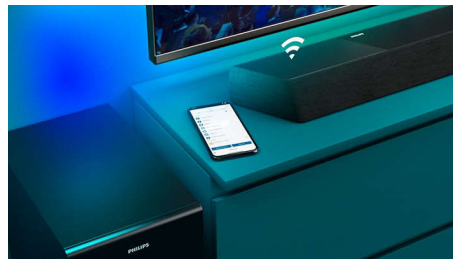

This Play-Fi-compatible soundbar gives perfect home-theater sound. Connect the soundbar to any external and smart devices in your home. DTS Play-Fi connectivity and the Philips Sound App let you play your sounds throughout your home Wi-Fi network.

DTS Play Fi Home Theatre

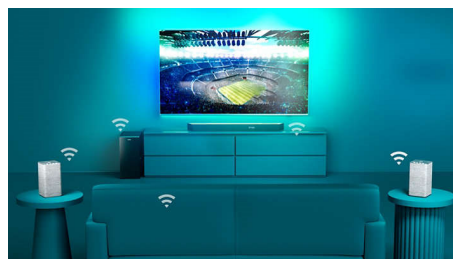

This Play-Fi-compatible soundbar gives perfect home-theater sound. It streams perfectly synced, high-quality audio between any compatible speakers, TVs and soundbars, creates a true surround-sound that elevate your home audio experience.

DTS Play-Fi. Multi-room audio

Easy Play-Fi compatibility makes this soundbar the star of your multi-room setup. You can sync Play-Fi-compatible speakers for multi-room audio, or even create a true surround-sound that flows above and around you.

HDMI eARC

Lose nothing from the mix when you're immersed in the drama. This soundbar is compatible with HDMI eARC, a high-speed connection that lets you experience the full effect of advanced audio formats like Dolby Atmos.

All your favorite sources

Easily connect to your favorite sources

HDMI 4K pass through

HDMI 4K pass through for Ultra HD Audio

Spotify Connect. Bluetooth.

Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in

Connect with voice assistants



Ask Alexa-enabled devices, or any speaker that works with the Google Assistant, to play music through the soundbar. Prefer Siri? This soundbar works with Apple AirPlay 2, so you can ask her too. Turn the music up. Skip tracks. All completely hands-free.



Soundbar 3.1.2 with wireless subwoofer

720W max. Wireless subwoofer Dolby Atmos. Cinema Experience, Play-Fi. Home Sound Made Easy, Connects with voice assistants

Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Audio sync
- Equalizer settings: Movie, Music, Voice, Stadium, Custom
- Total harmonic distortion: 10%
- Speaker system output power: 720W max / 360W RMS
- Surround mode: UPMIX, Standard, AI

Loudspeakers

- Subwoofer freq range: 35-150 Hz
- Subwoofer type: Active, Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Number of sound channels: 3.1.2
- Number of woofers: 1
- Woofer diameter: 6.5"
- Up-firing speakers: 2 full range (L+R)
- Soundbar freq range: 150-20k Hz
- Soundbar impedance: 8x 8 ohm
- Center drivers: 2 full range
- Front drivers: 2 full range (L+R), 2 tweeters (L+R)
- External subwoofer enclosure: Bass reflex

Connectivity

- Bluetooth: Receiver
- Bluetooth version: 5.3
- Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
- EasyLink (HDMI-CEC)
- Aux in: 3.5mm
- USB playback
- Optical input x 1
- HDMI content protection: HDCP 1.4/2.3
- HDMI Out (eARC/ARC) x 1
- WiFi: 2.4GHz/5GHz, IEEE 802.11 a/b/g/n/ac
- HDMI IN x 1
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker technology: DTS Play-Fi Multi-room, DTS Play-Fi Home theatre
- Smart Home: Built-in Chromecast, Spotify Connect, Works with Alexa, Works with Apple AirPlay 2, Works with OK Google
- Wireless speaker connection: Subwoofer

Supported Audio Formats

- HDMI ARC/eARC: Dolby Atmos, Dolby Digital, Dolby Digital plus, Dolby MAT, Dolby TrueHD, LPCM 2ch
- Play-Fi: AIFF, FLAC, MP3, MPEG4 AAC, MPEG4 M4A, WAV
- HDMI IN1: Dolby Atmos, Dolby Digital, Dolby Digital plus, Dolby MAT, Dolby TrueHD, LPCM 2ch

- Bluetooth: SBC
- USB: MP3, WAV, FLAC
- Optical: Dolby Digital, LPCM 2ch

Outer Carton

- Length: 109 cm
- Number of consumer packagings: 2
- Length: 42.9 inch
- Width: 60 cm
- Gross weight: 26.2 kg
- Height: 25 cm
- GTIN: 1 08 40063 20258 7
- Width: 23.6 inch
- Height: 9.8 inch
- Nett weight: 18 kg
- Gross weight: 57.761 lb
- Nett weight: 39.683 lb
- Tare weight: 8.2 kg
- Tare weight: 18.078 lb

Convenience

- Remote Control
- Display type: 5-digit 14-segment LED display
- Night mode: No

Compatibility

- Smartphone/tablet APP control

Power

- Main unit power supply: 100-240V AC, 50/60 Hz
- Subwoofer power supply: 100-240V AC, 50/60 Hz
- Subwoofer standby power: < 0.5 W
- Main unit standby power: < 0.5 W
- Auto standby

Packaging dimensions

- Height: 22.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 105 cm
- Depth: 45 cm
- Height: 8.9 inch
- Number of products included: 1
- Width: 41.3 inch
- Gross weight: 12.2 kg
- Depth: 17.7 inch
- Nett weight: 9 kg
- Gross weight: 26.896 lb
- Nett weight: 19.841 lb
- Tare weight: 3.2 kg
- Tare weight: 7.055 lb
- UPC: 8 40063 20258 0

Accessories

- Included accessories: Remote Control (with

battery), Power cord, Wall mount bracket, Quick start guide, World Wide Warranty leaflet

Design


- Color: Black
- Wall mountable

Dimensions

- Main Unit (W x H x D): 940 x 65 x 106 mm
- Main Unit Weight: 3 kg
- Subwoofer (W x H x D): 190 x 410 x 309 mm
- Subwoofer Weight: 6 kg

Video

- 3D pass-through
- Video Enhancement: Dolby Vision, HDR10, HDR10+, HLG, 4K Video Pass-through

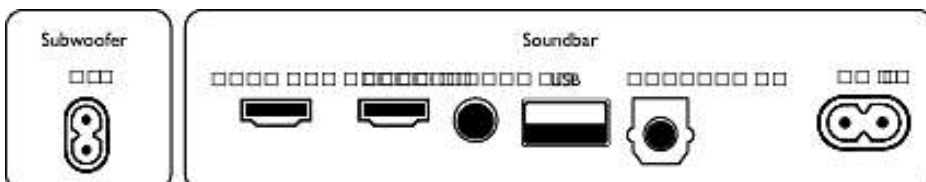

Issue date 2024-04-13

Version: 5.0.1

UPC: 8 40063 20258 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

