




Philips GoGear  
MP3 video player with  
FullSound™

**ViBE**

8GB\*

**GoGear**

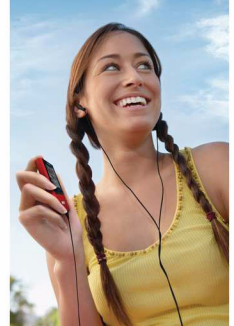

**SA2VBE08SC**

## Superior sound experience

Small size, big entertainment

The superbly small and sturdy GoGear Vibe hits the right note with Philips FullSound™ for an enhanced sound experience and Songbird for cool music exploration and synchronization. Plus, enjoy great entertainment with comfy earphones.

### Superb quality sound

- Fullsound™ to bring your MP3 music to life
- Soft rubber earbuds for comfortable listening

### Complements your life

- Audible.com features digital audiobooks and more
- 1.5" Full color display for easy navigation and album art
- Aluminum finish for robustness and durability
- FM radio with RDS and 20 presets for more music options
- Voice recording to take notes or record anything, anytime

### Easy and intuitive


- Philips Songbird: one simple program to discover, play, sync
- Smart Shuffle to listen to what you like most first
- Easy and intuitive user interface with album art display
- Folder view to organize and view media files like on your PC

**PHILIPS**

sense and simplicity


# Highlights

## FullSound™

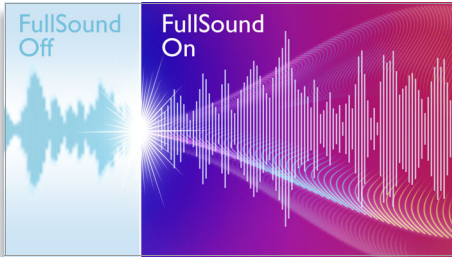

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.

## Philips Songbird

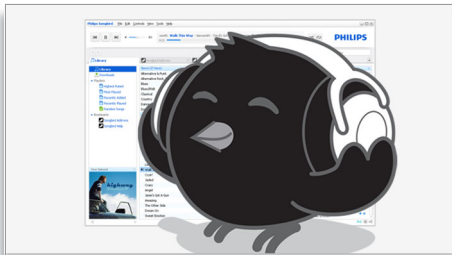

One simple, easy-to-use program that comes with your GoGear player, Philips Songbird lets you discover and play all your media, and sync it seamlessly with your Philips GoGear. Its intuitive and powerful music management features let you discover new artists and music styles directly in the program through music and media stores, services and websites. Play your own library and media from the internet and seamlessly sync all of it from your PC to your Philips GoGear.

## Audible



Audible.com is your destination for the widest selection of digital audiobooks, magazines, radio shows, stand-up comedy, and more available for download. Enjoy books in the car, at the gym, or around the house. Authors and icons read their own works, and famous actors narrate your favorite titles. At Audible.com you can browse and sample over 75,000 selections, including the latest best sellers and timeless classics.

## 3.8 cm/1.5" Full color display



3.8 cm (1.5") full color screen allows you to navigate easily within the control menu or the music files of your GoGear player. Plus, you can flip through your photo collection while enjoying your music on the go.

## Aluminum finish



Aluminum finish for robustness and durability

## Soft rubber earbuds


Soft rubber earbuds let you enjoy your music in comfort. A soft rubber cap encapsulates each earbud, and gently adjusts to the shape and size of your ear. It provides a soft cushion that makes listening through painful headphones a thing of the past.

## FM radio with RDS/ 20 presets



RDS (Radio Data System) is a communications protocol standard that allows digital information to be transmitted over FM radio broadcasts. RDS-enabled FM radio receivers can display this useful information that includes station identity, program details and song title and artist, etc. At anytime, you can store a desired station as a preset channel on your GoGear player. With 20 preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

## Smart Shuffle

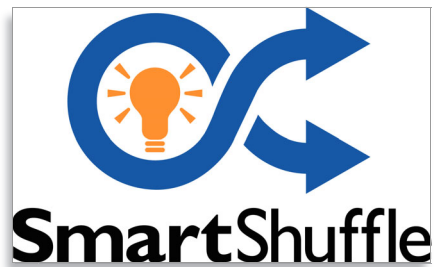

Smart Shuffle to listen to what you like most first

# Specifications

## Picture/Display

- Backlight
- Type: LCD
- Diagonal screen size (inch): 1.5 inch
- Resolution: 128 x 128
- Diagonal screen size (cm): 3.81 cm

## Sound

- Equalizer customizable
- Equalizer settings: Funk, Hip Hop, Jazz, Rock, Techno, Classical
- Frequency response: 20 - 18 000 Hz
- Signal to noise ratio: > 84 dB
- Channel separation: 45 dB
- Sound Enhancement: FullSound
- Output power (RMS): 2 x 2.4 mW

## Audio Playback

- Compression format: MP3, WAV, WMA, FLAC, APE
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: 5-320 kbps
- WMA sample rates: 8, 11.025, 16, 22.050, 32, 44.1, 48 kHz
- MP3 sample rates: 16, 32, 48, 11.025, 22.050, 8 kHz
- Digital Rights Management: Windows Media DRM for Portable Devices, Supports download & subscription music services

## Still Picture Playback

- Picture Compression Format: JPEG, BMP
- Slide show

## Storage Media

- Built-in memory type: NAND Flash
- Mass storage class compliant
- Built-in memory capacity: 8 GB
- Music memory capacity, MP3: Up to 1800 tracks\*

## Connectivity

- Headphone: 3.5 mm
- USB: USB 2.0

## Convenience

- Dedicated volume controls
- Function: Keypad lock
- Superscroll
- Firmware upgradeable
- Battery charging indication: On user interface

- Charge & play: when connected to PC
- Customizable volume limit

## Accessories

- Headphones: AY3832
- USB cable: AY3930
- Quick start guide

## Software

- Philips Songbird

## Green Specifications

- Lead-free soldered product
- Certified green product: pending

## System Requirements

- PC OS: Windows XP (SP3) / Windows Vista / Windows 7
- Internet connection: Yes (for access to updated support documents, manuals, future firmware and PC software upgrades)
- USB: Free USB port

## Power

- Battery capacity: 240 mAh
- Battery Type: LI-Polymer
- Playtime on internal battery: Up to 24 hours audio or 4 hours video
- Rechargeable: Yes, via USB

## Dimensions

- Packaging type: D-box
- Product dimensions (WxDxH): 66.8 x 11.5 x 44.0 mm
- Product weight: 0.038 kg
- D-box dimensions (WxDxH): 110 x 30 x 120 mm

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Station presets: 20

## Video Playback

- MJPEG (.mp4): 128x128 pixels, 30 fps, 512 kbps

## Audio Capturing

- Built-in microphone: mono
- Voice recording

## Partners

- 7 digital
- Audible



Issue date 2011-06-07

Version: 1.0.2

12 NC: 8670 000 68964  
UPC: 6 09585 19899 9

© 2011 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Storage capacity based on 4 minutes per song and 64 kbps WMA or 128 kbps MP3 encoding.

\* Actual transfer speed may vary based on your operating system and software configuration.

\* 1GB = 1 billion bytes; available storage capacity will be less.