



Philips
docking station for iPod/
iPhone/iPad

with Lightning connector
for iPod/iPhone/iPad
USB port for charging
8 W, FM, Dual alarm

AJ7050D

Wake up to great music

with this iPod/iPhone/iPad docking station

Play and charge your iPod/iPhone/iPad via Lightning connector, and get rich and clear sound. This chic alarm clock radio features an extra USB port that allow you to charge an additional device at once and wakes you in time

Enrich your sound experience

- Fast charging and play music via Lightning connector
- Neodymium speaker driver for rich and clear sound
- 8 W RMS total output power
- FM digital tuning with presets

Easy to use

- Auto clock synchronisation with iPod/iPhone/iPad when docked
- Extra USB for charging an additional smartphone or tablet
- Time and alarm backup to wake up on time even with power cut
- Audio-in for easy portable music playback

Start the day your way

- Wake up to your iPod/iPhone/iPad music or radio tunes
- Dual alarm to wake you and your partner at different times
- Weekday/weekend alarm setting to complement your lifestyle

PHILIPS

docking station for iPod/iPhone/iPad
with Lightning connector for iPod/iPhone/iPad, USB port for charging, 8 W, FM, Dual alarm

AJ7050D/12

Highlights

Play and charge via Lightning




Enjoy your favourite music while charging your iPod/iPhone/iPad via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while it's playing, so you don't have to worry about the battery running out.

Neodymium speaker driver

Neodymium speaker driver for rich and clear sound

8 W RMS

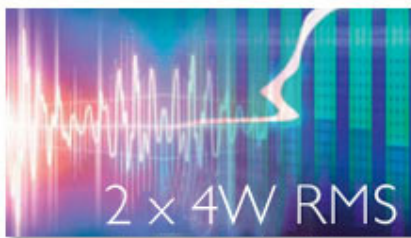

This system has a 8W RMS total output power. RMS refers to Root Mean Square, which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

FM digital tuning with presets



Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.

Wake up to iPod/iPhone/iPad/FM

Wake up to the music that you love the most. Select your favourite radio station or soothing tunes from your iPod/iPhone/iPad and make a difference to your mornings. The clock starts to play your selection softly, with gradual increases in volume, until it reaches the volume level of your choice. Now you can control how you wake up and start your day right every single time.

Auto clock synchronisation



When connected and docked, this docking system will automatically synchronise the clock with your iPod/iPhone/iPad within a few seconds. With this convenient feature, you do not need to set the time manually.

Additional USB

Extra USB for charging an additional smartphone or tablet

Weekday/weekend alarm




Designed with modern day lifestyles in mind, this clock radio has a dual alarm feature, allowing you to set different alarm times for weekdays and weekends or even vary the alarm settings for couples. The alarm settings can be tailored for the same alarm times for the entire week from Monday to Sunday. Or you can set the alarm for an early start on weekdays from Monday to Friday, and lazy lie-ins for Saturday and Sundays. Whichever you choose, this convenient feature saves you from the hassle of fiddling with different alarm times every single night.

AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.



docking station for iPod/iPhone/iPad
with Lightning connector for iPod/iPhone/iPad, USB port for charging, 8 W, FM, Dual alarm

Specifications

iPad compatibility

- Compatible with: iPad with Retina display, iPad mini

iPhone compatibility

- Compatible with: iPhone 5

iPod compatibility

- Compatible with: iPod touch 5th generation, iPod nano 7th generation

Audio Playback

- Cradle playback mode: Charging iPhone, Charging iPod, Fast forward and reverse, Play and Pause, Next and Previous track

Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: 87.5-108 MHz
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna

Clock

- Type: Digital
- Time format: 12 H, 24 H

Alarm

- No. of alarms: 2
- Alarm source: Dock, FM radio, Buzzer
- 24-hour alarm reset
- Snooze (repeat alarm): Yes, 9 mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

Convenience

- Display Type: LCD
- Backlight colour: White
- Display Enhancements: Brightness Control

Sound

- Sound Enhancement: Digital Sound Control, Dynamic Bass Boost
- Sound System: Stereo
- Output power (RMS): 8 W
- Volume control: up/down

Loudspeakers

- Built-in speakers: 2
- Main Speaker: Bass Reflex Speaker System

Connectivity

- Audio in (3.5 mm)
- USB: USB 2.0 x 1

USB Charging

- Yes
- 5 V, 2.1 A

Power

- Mains power: 100-240 V, 50/60 Hz
- Power type: AC input
- Backup battery: AA (not included)
- Number of batteries: 2

Dimensions

- Product dimensions (WxDxH): 263 x 163 x 135 mm
- Packaging dimensions (WxDxH): 319 x 227 x 185 mm
- Weight: 1.13 kg
- Weight incl. Packaging: 2.1 kg

Accessories

- Quick start guide
- World Wide Warranty leaflet



Issue date 2016-10-04

Version: 2.3.10

12 NC: 8670 000 71506
EAN: 08 71258 15796 16

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com