



Philips
Professional DJ
headphones with mic

50mm drivers/ closed-back

Over-ear
Supra-aural cushions
Full folding



A5PROI

Professional DJ Headphones

in collaboration with Armin van Buuren

5-time World's Best DJ winner, Armin van Buuren collaborated with Philips to bring you the A5-PRO headphones. Backed by his experience, the A5 is engineered to meet the highest standards and demands of international DJs and industry pros.

For DJs and audio professionals

- Source-accurate sound reproduction
- 50mm drivers engineered for 3500mW power handling
- Superior sound isolation for use in loud environments
- Closed-back architecture with isolating supra-aural cushions

Comfortable for long sessions

- 90 degree swivel ear-shells for DJ monitoring
- Detachable, replaceable and comfortable ear cushions
- Soft, comfortable headband cushioning

Functional and durable

- In-line control and mic switches you between music and calls
- Folds into a compact form for easy storing and carrying
- Aluminum-hinged alloy steel headband for enhanced durability

Ideal DJ accessories

- 3 sizes of replaceable cushions to suit different use

PHILIPS

Professional DJ headphones with mic
50mm drivers/ closed-back Over-ear, Supra-aural cushions, Full folding

A5PROI/00

Highlights

50mm drivers handling 3500mW




High powered 50mm neodymium drivers are engineered for 3500mW power handling – no matter what the source is. Sound delivery is clear, dynamic and distortion-free even at high volumes or with high audio input power.

90 degree swivel ear-shells



Designed with the professional DJ in mind, the earpieces on these headphones can each rotate 90° – for convenient one-ear listening while track mixing. The swivel can also be put to good use even in more casual listening, when temporary attention has to be paid to outside sounds.

Aluminum hinge construction

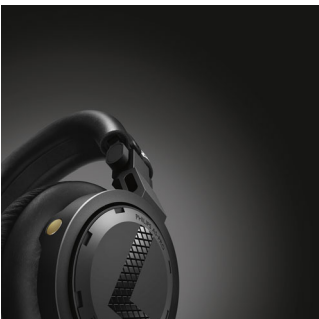

The Philips A5-PRO combines robust construction with exceptional fit. With its hard

anodized-finish and sturdy yet lightweight aluminum structure, it is the perfect companion to withstand any active DJ environment.

Closed-back architecture

Closed-back system blocks out ambient noise.

Comfortable ear cushions



The earphone materials are carefully selected to ensure both long-wearing comfort and enhanced sound performance. Deluxe breathable ear pads are designed for optimal ergonomic fit as well as to seal in bass sounds while keeping out ambient noise.

Folds into compact form



Designed to give you the best experience on the go, your DJ headphones can be folded away for perfect portability and easy storage. Smart design and careful selection of components, like well-built hinges, allow the headphone parts to be maneuvered with ease.

Soft, comfortable headband



The soft-cushioned headband provides long-wearing comfort.

Source-accurate sound

The sound reproduction stays true to the original and lets you get the most out of your music.

Superior sound isolation

Soft sealing cushions isolate your ears from the outside world, so you can focus on the beat without distraction.

Replaceable cushions



Bayonet mount cushions easily twist and click into place with the same secure mechanism of a camera lens. The soft ear cushions provide long-wearing comfort and come in three sizes to suit any preference and for use in different audio environments.

Specifications

Sound

- Acoustic system: closed
- Frequency response: 10 – 24,000 Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 3500mW
- Sensitivity: 105 dB
- Speaker diameter: 50 mm
- Diaphragm: PET

Connectivity

- Cable Connection: one-sided
- Cable length: 1.3 m – 4.7 m
- Finishing of connector: gold-plated
- Type of cable: Coiled Cable

Accessories

- Adaptor plug: 3.5 - 6.3 mm
- Coiled cable
- Headset cable

Packaging dimensions

- EAN: 69 23410 73251 1

- Packaging dimensions (W x H x D):
19.5 x 24 x 11 cm
- Gross weight: 0.838 kg
- Nett weight: 0.53 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.308 kg
- Type of shelf placement: Both

Outer Carton

- Gross weight: 1.92 kg
- GTIN: 1 69 23410 73251 8
- Outer carton (L x W x H): 23.2 x 20.4 x 26 cm
- Nett weight: 1.06 kg
- Number of consumer packagings: 2
- Tare weight: 0.86 kg

Product dimensions

- Product dimensions (W x H x D):
17.5 x 19.5 x 9 cm
- Weight: 0.405 kg



Issue date 2014-06-06

Version: 5.1.3

12 NC: 8670 001 17683
EAN: 69 23410 73251 1

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com