

Philips 3000 series
DVD player



DVP3618



Enjoy it all - from DVD or USB

With 5.1 audio and stereo output

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Bring audio and video to life

- 5.1 channel audio output for surround sound
- 12-bit/108MHz video processing for sharp and natural images
- Progressive Scan component video for optimized image quality
- Screen Fit for optimal viewing every time

Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos


Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

PHILIPS


Highlights

5.1 channel audio output

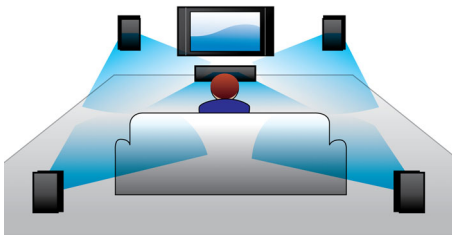

5.1 channel audio output for surround sound

Plays it all

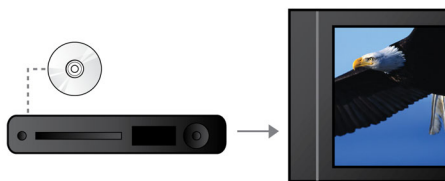

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.


ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get


smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

USB Media Link

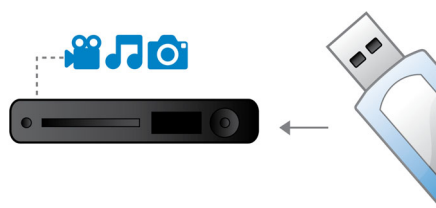

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Progressive Scan

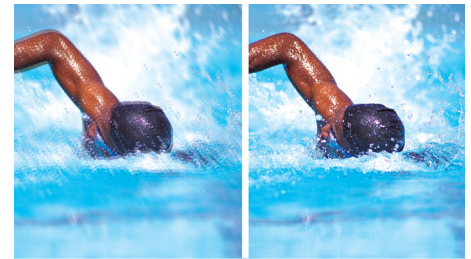

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Screen Fit



Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Crosstalk (1kHz): 100 dB
- Distortion and Noise (1kHz): 85 dB
- Dynamic Range (1kHz): 90 dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital

Video Playback

- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3, WMA, PCM

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow with MP3 playback, Zoom

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, mpeg, mpg

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Component Video out Progressive

Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Hindi

Power

- Power consumption: < 10 W
- Standby power consumption: < 1W
- Power supply: 110-240V, 50/60 Hz

Accessories

- Included accessories: AAA Battery (x1), Audio/Video cable, Power cord, Quick start guide, Remote Control, User Manual, Warranty Leaflet, World Wide Warranty leaflet

Dimensions

- Product (W x H x D): 310 x 37 x 203 mm
- Packaging (W x H x D): 360 x 82 x 290 mm

Multimedia Applications

- Multimedia connections: USB memory class device



Issue date 2017-04-04

Version: 1.2.2

12 NC: 8670 000 88655
EAN: 87 12581 64006 4

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com