



Philips Philips Fidelio
SoundBar
Wireless surround cinema
speakers

4.1 CH wireless surround sound

Bluetooth®
2 HDMI In & HDMI out ARC
Aluminium



HTL9100

Cinematic surround sound, wirelessly

with detachable speakers

HTL9100 is Philips' first soundbar with real surround sound from wireless detachable speakers. Enjoy the freedom of casual and temporary placement of the surround speakers only when you need.

Designed to enhance your living space

- Minimalistic chic design to suit a modern decor
- Orientation sensor ensures the best sound in any placement
- Orientation sensor ensures the best sound in any placement

Connect and enjoy all your entertainment

- Connect to HDMI x 2 for great picture and sound quality
- Wireless music streaming via Bluetooth

Richer sound for watching TV and movies

- Surround on Demand - detachable wireless surround speakers
- Virtual Surround Sound for a realistic movie experience
- Dolby Digital and Pro Logic II surround sound
- Wireless subwoofer for clutter free placement


PHILIPS
Fidelio

Highlights

Minimalistic chic design


Minimalistic chic design to suit a modern decor

Virtual Surround Sound

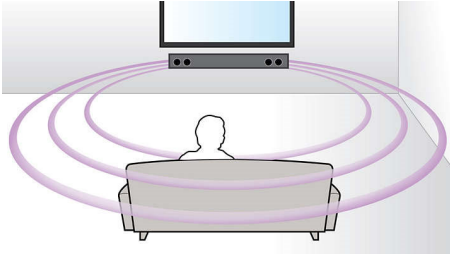

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

HDMI x 2

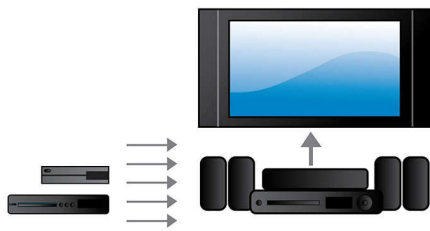

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio HDMI x 2 output to the connection in your non-3D AV receiver.


Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for


easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Dolby Digital and Pro Logic II

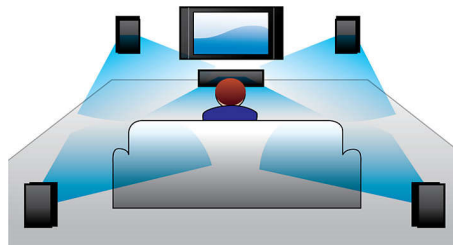

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Surround on Demand

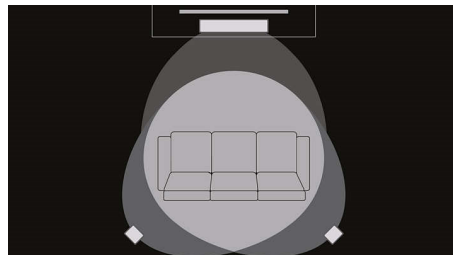


Submerge your senses in superb surround sound whenever you want it. Simply detach the wireless surround speakers from the main Soundbar unit and place them at the rear of the room to get the full 5.1 surround sound experience with your games and movies. When the action is over, reattach the speakers to use your stylish Soundbar for music and TV shows. Using proprietary wireless audio technology and with surround speakers that operate on a unique frequency, there is no network interference. The result is a completely wireless surround system with lossless audio quality for both music and movies

Wireless subwoofer


Wireless subwoofer for clutter free placement

Orientation sensor

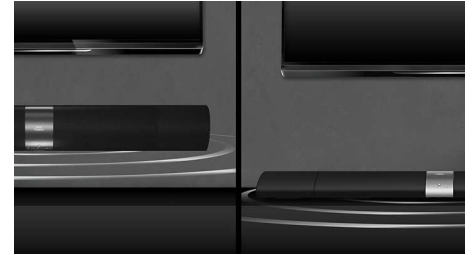

The quality of your sound experience is determined by how the soundbar is positioned in a room. Luckily, this system comes with a smart auto-orientation sensor that instantly optimizes audio quality once it detects whether your soundbar is placed horizontally or vertically. So, whether you choose to sit your soundbar on a shelf or mount it on a wall, you can be sure you'll always have a superb audio experience.

Orientation sensor

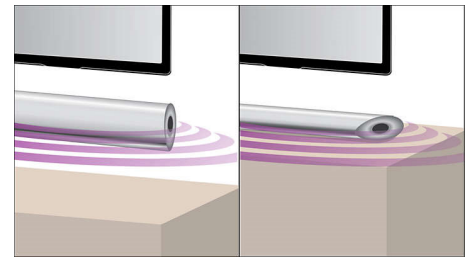

The quality of your sound experience is determined by how the soundbar is positioned in a room. Luckily, this system comes with a smart auto-orientation sensor that instantly optimizes audio quality once it detects whether your soundbar is placed horizontally or vertically. So, whether you choose to sit your soundbar on a shelf or mount it on a wall, you can be sure you'll always have a superb audio experience.

Wireless surround cinema speakers
4.1 CH wireless surround sound Bluetooth®, 2 HDMI In & HDMI out ARC, Aluminium

Specifications

Sound

- Sound Enhancement: Double Bass Sound, Night Mode, Treble and Bass Control, Surround on demand
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Subwoofer output power: 90
- Speaker output power: 120
- Total Power RMS @ 30% THD: 210 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 20-150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Wireless subwoofer
- Drivers per Surround speaker: 1 x 2.5" Full range woofer
- Subwoofer impedance: 4 ohm
- Speaker Impedance: 8 ohm

Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2
- iPod/iPhone: via 3.5mm Audio In
- Side Connections: Audio In (3.5mm)

Outer Carton

- EAN: 48 95185 60143 4
- Length: 76.5 cm
- Number of consumer packagings: 1
- Width: 26 cm
- Gross weight: 13.54 kg
- Height: 37.1 cm
- Nett weight: 9.4 kg
- Tare weight: 4.14 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power supply: 110-240V, 50Hz
- Standby power consumption: <math><0.5\text{ W}</math>

Packaging dimensions

- Height: 37.1 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 76.5 cm
- Depth: 26 cm
- Number of products included: 1
- EAN: 48 95185 60143 4
- Gross weight: 13.54 kg
- Nett weight: 9.4 kg
- Tare weight: 4.14 kg

Product dimensions

- Height: 7.17 cm
- Width: 103.4 cm
- Depth: 15.55 cm
- Weight: 3.84 kg

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 1035 x 70 x 156 mm
- Weight incl. Packaging: 16 kg
- Main Unit Weight: 4.18 kg
- Packaging (W x H x D): 765 x 260 x 371 mm
- Subwoofer (W x H x D): 200 x 510 X 200 mm
- Subwoofer Weight: 5 kg

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

Issue date 2024-04-13

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Version: 2.0.2

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

EAN: 48 95185 60143 4

www.philips.com

