



Philips Fidelio  
Primo wireless docking  
speaker

with AirPlay



DS9100W

## Experience true fidelity

Obsessed with sound

Philips Fidelio Primo is the gateway to everything you hold precious about music. It delivers pure and authentic sound. Equipped with AirPlay, this speaker unleashes your music from iPod Touch, iPhone, iPad and iTunes - wirelessly.

### Peerless sound quality

- Audiophile-quality tweeter for full fidelity sound
- SoundCurve for superb crystal-clear sound
- Pure digital processing for pure signal through audio chain
- FullSound enhances sound detail for rich and powerful sound
- Bass-reflex design for deep, tight bass reproduction
- 100 W RMS total output power

### Exquisite design and finishing

- Premium design in natural wood, fabric and metal

### Advanced versatility

- Stream music with AirPlay wireless technology
- Dock your iPod/iPhone/iPad to charge and play music directly

### Intuitive control

- SoundStudio app for complete control of audio settings
- Proximity sensor to activate backlit control panel

**PHILIPS**  
Fidelio

Primo wireless docking speaker  
with AirPlay


# Highlights

## Audiophile-quality tweeter



A two-way system with a ring radiator tweeter, used in most high-end audiophile applications. The diaphragm is free from spurious resonance, achieving a frequency response of up to 40 KHz. Coupled with great dynamics and low distortion, this technology allows the finest music nuances to be revealed in its full fidelity.

## SoundCurve

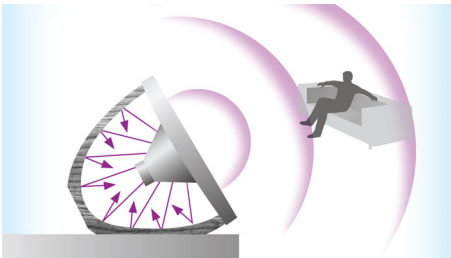


The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning-looking speakers.

## Pure digital processing



Most docking speakers use the analogue output of your iPod, iPhone or iPad, then converts it back to digital, resulting in some additional noise and loss of detail. By using the digital output of your player, the speaker maintains the integrity of the music signal, resulting in higher signal to noise and better resolution.

## FullSound™

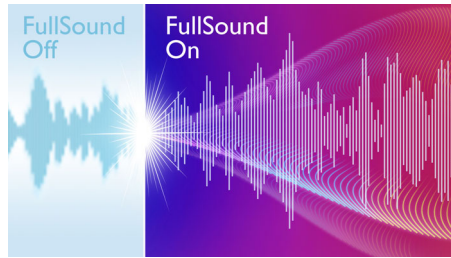

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analysed and optimised to let you experience music with great detail and warmth.

## Bass-reflex design



Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled

DS9100W/10


bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimising air turbulence that may cause distortion.

## AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Make your favourite tunes follow you into whichever room you go.

## SoundStudio App

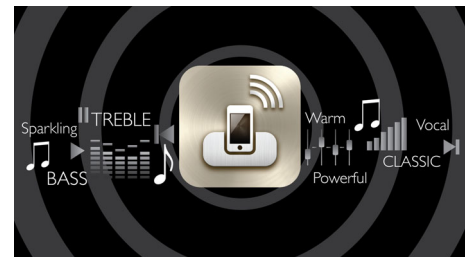

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favourite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.



# Specifications

## Compatibility

- Compatible with: all iPod, iPhone and iPad

## iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

## Loudspeakers

- Speaker drivers: 2 x 1.25" / 32 mm tweeter, 2 x 4" / 10 cm midwoofer
- Output power (RMS): 100 W

## Accessories

- Included accessories: Remote Control, 3.5 mm stereo line-in cable, AC Power Cord, Quick start guide, Warranty certificate, World Wide

Warranty leaflet

## Connectivity

- Dock connector
- AirPlay
- Aux in

## Dimensions

- Product dimensions (WxDxH): 562 x 216 x 214 mm
- Packaging dimensions (WxDxH): 619 x 276 x 276 mm
- Product weight: 6.5 kg
- Weight incl. Packaging: 9.6 kg

## Power

- Power supply: 100 - 240 V AC, 50/60 Hz



Issue date 2014-09-26

Version: 1.0.4

12 NC: 8670 000 88721  
EAN: 08 71258 16401 63

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)