
# Quick Start Guide




## What's in the Box?

You should find these items upon opening the box.



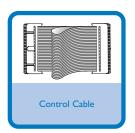

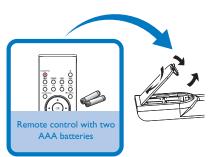












### Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

- Connect the speaker cables.
- Connect the FM antenna.
- Connect the control cable.
- Connect the composite video cable to a TV.
- Connect the power cords of the system and TV.

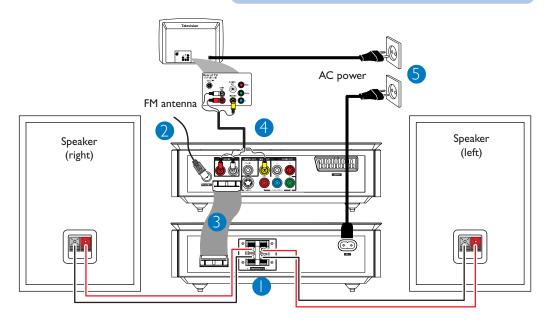




# Setting up the TV



Press SOURCE (DISC on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.








In standby mode, press and hold **CLOCK** on the remote.

When the hour digits flash, turn **VOLUME-/+** on the system or press **VOL +/-** on the remote to set the hours.

Press CLOCK again and the minute digits flash. Then turn VOLUME-/+ on the system or press VOL +/- on the remote to set the minutes.

Press **CLOCK** again to confirm the time setting.

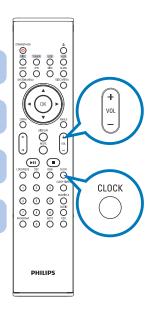


# Setting DVD menu options

#### **IMPORTANT!**

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press SYSTEM MENU on the remote to exit the system menu and then DISC and "1" to exit progressive scan.

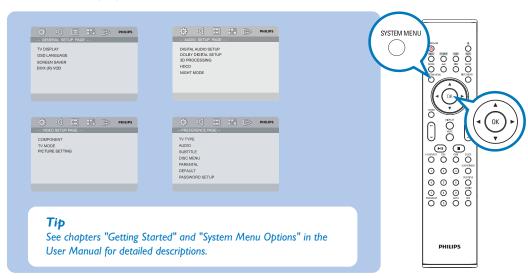



# Playing a disc



Press OPEN •CLOSE ( a on the remote control) to open the disc tray and load in a disc, then press the same button again to close the disc tray.

→ Make sure the label side of the disc is facing up.



Playback will start automatically. If not press > 11.



To stop playback, press PRESET-/■ (■ on the remote).

## Programming and tuning to radio stations



Press SOURCE (TUNER on the remote) to select tuner source.



Press PROGRAM on the remote for more than two seconds to program all available stations in order of waveband.

3

Press PRESET+/- (◀ / ▶ on the remote) until the desired preset station is displayed.

## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).



Insert the USB device's USB plug into the socket on the set.



Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.



Play the USB's audio files as you do with the albums/tracks on a CD,

## Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).
- Then select the desired function (►II, ►I, ►I for example).

