




Philips  
In.Sight wireless HD baby  
monitor

Watch from anywhere

Hear & speak  
Night vision  
For iPhone, iPad

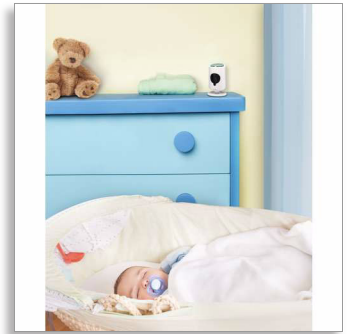

B120

# Always close to your baby

Watch from anywhere on your iPhone/iPad

The Philips In.Sight wireless HD baby monitor lets you watch and listen to your baby from your iPhone/iPad. Watch in crystal clear HD quality, and with night vision you can even watch your baby in the dark.

## Stay close to your baby wherever you are

- Wi-Fi baby monitor for placement anywhere in your home
- Watch your baby on your iPhone via Wi-Fi/3G/4G LTE
- HD video quality for crystal clear viewing
- Night vision mode to see baby clearly in the dark

## Stay reassured with alerts and notifications

- Hear your baby continuously even when phone is locked
- Phone alerts when monitor detects noise/motion
- Parents talk to baby via iPhone/iPad
- Real-time monitoring with temperature and humidity sensor
- Parents to share monitors

## Easy, safe and secure

- Easy set-up of Wi-Fi baby monitor via QR code
- Video encrypted for secure connection
- PVC-BFR-free power cables and monitor



**PHILIPS**

# Highlights


## Continuous audio streaming

The In.Sight wireless HD baby monitor streams audio continuously, even when your iPhone or iPad is locked or when you are docking or charging your iPhone or iPad.

## Easy set-up via QR code

Set-up is simple with the app. The app will generate a QR code for your home Wi-Fi settings. With the QR code, the monitor will automatically pair with your Wi-Fi network, easily and instantly.

## Encrypted direct networking

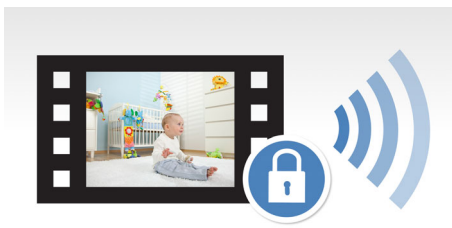

The In.Sight wireless monitor uses highly secure encryption to provide you with privacy at all times. The In.Sight wireless monitor uses a unique encryption key each time it makes a connection, providing you with a highly secure connection each time you look at your loved ones.

## HD video quality



In.Sight wireless HD baby monitors allow you to watch your baby in vivid detail. View videos in high-definition 720p quality. The "720" refers to the number of horizontal lines of resolution on the screen. The "p" stands for progressive scan or the sequential appearance of the lines in each frame. With

720p resolution, videos are sharper and more true to life.

## Parents talk via iPhone/iPad




With the In.Sight wireless HD baby monitor, you can talk to your baby any time you want. Simply press "talk" on your iPhone or iPad and sing her a nursery rhyme. Watch as she falls asleep to your soothing voice.

## Multi-user mode

Share monitors with your spouse, family, friends and even your baby sitters. The app lets you share each monitor with two other users so that they also have access to live videos and sound via their smartphones. You can even upgrade the app to share the monitor with up to 10 users.

## Night vision mode

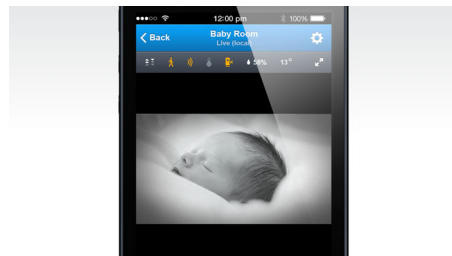

Night vision mode allows you to see your baby's lovely face in the dark. Infrared light goes on for the monitor to capture clear black-and-white video when it is dark. Night vision mode switches on and off automatically, or you can adjust it manually.

## Noise and motion alerts

It's impossible to predict when something might happen to your baby. The In.Sight wireless HD baby monitor keeps watching

with adjustable noise and motion detection. You will be alerted any time noise or motion is detected. Automatically receive push notifications on your iPhone or iPad when the monitor detects motion or noise.

## Temperature and humidity sensor

Temperature and humidity sensors on the In.Sight wireless HD baby monitor show temperature and humidity levels on your iPhone or iPad. The humidity sensor measures the humidity level, detecting dry air that may irritate baby's throat, for instance. The app will even alert you when the temperature is too high/low.

## PVC and BFR-free

The In.Sight wireless HD baby monitor is free from brominated flame retardant (BFR) and polyvinyl chloride (PVC). It adheres to the stringent safety standards for infant utensils and is absolutely baby-proof, safe and eco-friendly.

## CES 2013 Innovations Awards



Honoree in the Tech For A Better World  
Philips In.Sight wireless baby monitor is simply the

ideal nursery accessory for the smartphone generation. It gives full reassurance to young parents that they can easily monitor their baby via their iPhone or iPad. Ingeniously simple, it takes only a matter of minutes to set up via QR code. With 720p HD video quality, parents can always see their baby in clear detail. Night vision mode monitors baby when it is dark. With continuous audio feature parents can always listen to their baby even when their iPhone or iPad is locked.



# Specifications

## Lens and Sensor

- Sensor: 720p HD video image sensor
- Aperture: F2.8
- Digital zoom: 2 x digital
- Focus mode: Fixed
- Ambient light sensor: Yes, day/night mode
- Night mode: Infra-Red
- IR control: via App
- IR range: 4 metres

## Video Quality

- HD/VGA/QVGA streaming
- Resolution: HD (1280 x 720p) at 30 fps
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

## Features

- Wi-Fi: 802.11 a/b/n
- Motion detection
- Noise detection
- Direction adjustable base
- LED indicator
- Reset button
- Screw holes: Yes, 1
- Temperature measurement: -10 – 50°C
- Humidity measurement: 20 – 90%

## Software

- Installation: via App
- Automatic App update
- Web browser support

- System supported: iOS4.3 or above
- iPad compatibility: iPad 2, New iPad, iPad with Retina display, iPad mini
- iPhone compatibility: iPhone 4, iPhone 4S, iPhone 5
- iPod compatibility: iPod Touch 4th generation and up

## Accessories included

- Extra wall mount
- USB power adapter
- USB cable: Yes, 2.5 m
- Screws/wall anchors: 1
- Quick Start Guide

## Input and Output

- Audio: 2-way, parent talk back
- Microphone: Highly sensitive, Mono
- Built-in speaker
- USB: Mini-USB port

## Minimum Requirements

- Windows: Windows 7, Internet Explorer 9.0, Chrome 20.0, Firefox
- MAC: MACINTOSH 10.6, Safari 5.1.7, Chrome 21.0, Firefox

## Dimensions

- Packaging dimensions (W x H x D): 158 x 160 x 70 mm
- Product dimensions (W x H x D): 66.2 x 104 x 66.2 mm



Issue date 2014-10-15

Version: 5.1.1

12 NC: 8670 000 98275  
EAN: 87 12581 66950 8

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Viewing live video over your home Wi-Fi network using the In.Sight wireless home monitor is free and unrestricted. Viewing live video remotely (either over an external Wi-Fi network or 3G network) is also free for unlimited sessions, but subject to a limit of 5 minutes per session.

\* Longer remote viewing session times and other premium features are available for purchase from the App. These conditions are subject to change.