




Philips
Alarm Clock radio for
iPod/iPhone

with Lightning connector
for iPod/iPhone
FM, dual alarm
4 W

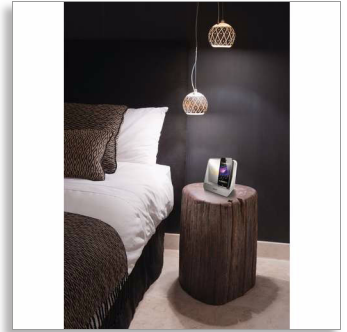

AJ5305D

Wake up to great sound from your iPod/iPhone

Start your day with Philips clock radio and docking station. The free Philips App offers better waking and radio experiences, while the set's 4WRMS power delivers powerfully clear sound. Simply dock your iPod/iPhone, even while it is in its case.

Enrich your sound experience

- 4 W RMS total output power
- FM digital tuning with presets
- Fast charging and play music via Lightning connector

Easy to use

- Free HomeStudio app for enhanced wake-up and radio experiences
- Adjustable display brightness for comfortable viewing
- Auto sync time via iPod/iPhone dock with Lightning connector
- Audio-in for easy portable music playback

Start the day your way

- Rise to radio or iPod/iPhone music via Lightning connector
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant waking experience
- Sleep timer helps you to drop off to your favourite music

PHILIPS

Highlights

Free HomeStudio app



There's no better way to wake up or listen to the radio than with the free Philips HomeStudio app. Simply download the app from the Apple App Store to enjoy a host of exciting features. Advanced alarm set up, for example, gives you greater flexibility in alarm settings - including alarm volume, duration, date and sound. You also get better user interface when you listen to the radio, with easy-to-use station preset functions.

4 W RMS total output power

RMS refers to Root Mean Square, which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

FM digital tuning with presets



Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the

station that you want to preset, press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.

Play and charge via Lightning



Enjoy your favourite music while charging your iPod/iPhone via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while it's playing, so you don't have to worry about the battery running out.

Auto sync time

Auto sync time via iPod/iPhone dock with Lightning connector


Adjustable display brightness

Adjustable display brightness allows you to customise the display to your needs.

Rise to radio or iPod/iPhone

Rise to radio or iPod/iPhone music via Lightning connector

Dual alarm

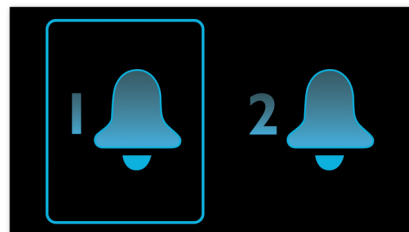

The Philips audio system comes with two alarm times. Set one alarm time to wake you


up and the other time to wake up your partner.

Gentle wake



Start your day the right way by waking up gently to a gradually increasing alarm volume. Normal alarm sounds with a pre-set volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favourite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

Sleep timer

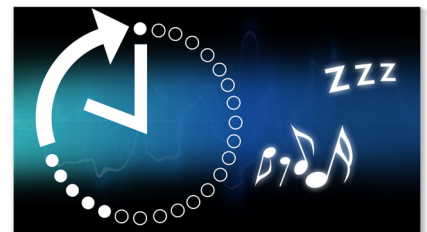

Sleep timer lets you decide how long you want to listen to music, or a radio station of your choice, before falling asleep. Simply set a time limit (up to 1 hour) and choose a radio station to listen to while you drift off to sleep. The Philips radio set will continue to play for the selected duration and then automatically switch to a power-efficient and silent stand-by mode. Sleep Timer lets you fall asleep to your favourite radio DJ without counting sheep or worrying about wasting power



Specifications

iPhone compatibility

- Compatible with: iPhone 5

iPod compatibility

- Compatible with: iPod touch 5th generation, iPod nano 7th generation

iPod/iPhone App

- App name: HomeStudio, Free download from App store
- iOS requirement: iOS 4.3 or later
- Alarm: multiple alarms, sleep timer
- Clock: analogue display, digital display
- 5-day weather forecast
- Playback: playback controls, album/track navigation
- Radio: FM radio, preset, scan, tune

Audio Playback

- Playback mode: Charging iPhone, Charging iPod

Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: 87.5-108 MHz
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna

Clock

- Type: Digital
- Time format: 12 H, 24 H

Alarm

- No. of alarms: 2
- Alarm source: Buzzer, Dock, FM radio
- 24-hour alarm reset

- Snooze (repeat alarm): Yes, 9 mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

Convenience

- Display type: LED display
- Backlight colour: Amber
- Display Enhancements: Brightness Control
- Display brightness: High/ Mid/ Low

Sound

- Sound System: Stereo
- Output power (RMS): 4 W
- Volume control: up/down

Loudspeakers

- Built-in speakers: 2

Connectivity

- Audio in (3.5 mm)

Power

- Mains power: 100-240 V, 50/60 Hz
- Power type: AC input, 5.9V, 2A

Dimensions

- Product dimensions (WxDxH): 155 x 144 x 92 mm
- Packaging dimensions (WxDxH): 215 x 106 x 177 mm
- Weight: 0.52 kg
- Weight incl. Packaging: 0.85 kg

Accessories

- AC/DC adapter
- Quick start guide
- World Wide Warranty leaflet



Issue date 2014-08-30

Version: 3.0.3

12 NC: 8670 001 01646
EAN: 08 71258 16825 38

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com