

# PHILIPS

## Cordless phone with answering machine

30 min answering machine

4.6 cm / 1.8" TFT colour display

Handset speakerphone

D6351W



## Bold sophistication

Exquisite design meets high performance in the Philips D635 Cordless Phone, featuring a large full-colour display, answering machine, privacy settings, baby monitor and much more. HQ-Sound ensures stunning sound reproduction for clear conversations

### Eco-conscious product

- Low radiation (ECO and ECO+ modes) and power consumption

### Exceptional sound

- Freestanding handset with a speaker for easy hands-free calls
- HQ-Sound: high quality acoustic engineering for superb sound
- MySound profiles to match your sound preference

### Experience true convenience

- Black list, anonymous call, silence mode, call barring
- Specific ringtone can be assigned to an identified contact
- Three-field entries for assigning 3 numbers to one contact
- High contrast, 4.6 cm (1.8"), TFT colour display
- Baby monitor alerts you when baby needs your attention
- Up to 18 hours of talk time on a single charge
- Caller ID – so you always know who is calling\*
- Up to 30 minutes of messages on your answering machine

# Highlights

## 4.6 cm (1.8") TFT colour display

High contrast, 4.6 cm (1.8"), TFT colour display

## Baby monitor function

Receive an alert when your baby needs you. Just place the DECT handset in the baby's room and receive an alert on your base or on another DECT phone (i.e. another landline number) or mobile phone (when you're out) when the baby starts to cry.

## Caller ID\*




Sometimes it's good to know who's calling before you answer. And our Caller ID lets you keep track of who's on the other end of the line.

## Eco-conscious model with ECO+



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated, the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation, the radiation drops to zero.

## Extended privacy settings

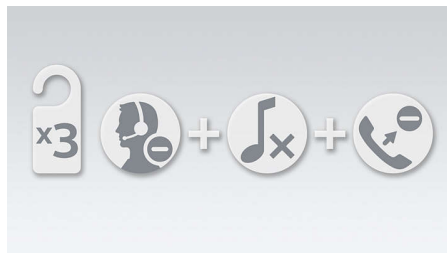


Black list restricts receiving calls from specific numbers or starting with certain digits, keeping unwanted calls away — you can block 4 sets of numbers. Anonymous call restricts incoming calls with hidden numbers, which are sometimes used by telemarketers. You can also set the phone to not ring so that you are not disturbed. With silence mode, you can disable the ringtone at specific times to enjoy peace and quiet. Thanks to call barring, you can avoid being surprised by expensive phone bills by blocking calls to specific numbers that start with certain digits (for example, pay-per-call numbers).

## Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.


## HQ-Sound

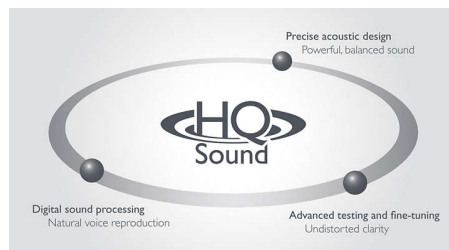

Philips cordless phones with HQ-Sound build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products

and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high-quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

## MySound profiles

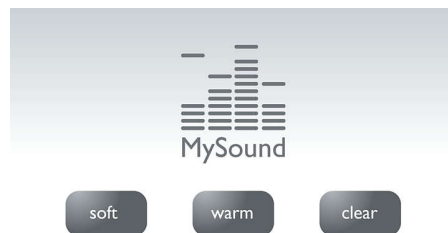

Sound perception is subjective, and everyone has their own listening preference. MySound brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear—to make voices sound crisper and clearer; Soft—for friendly, softer tones; Warm—to make voices sound welcoming and warm.

## Three-field phonebook entries



These days most people have multiple contact numbers. Our contact list makes it easier for you to manage your phone contacts. Simply save three phone numbers for up to 100 contacts with a choice of three different field names for home, work and mobile.

# Highlights

## Up to 18 hours talk time



Up to 18 hours of talk time on a single charge

## Up to 30 min. recording

With 30 minutes' recording time on your answering machine, you'll never miss an important message.

## VIP ringtones

Specific ringtone can be assigned to an identified contact

# Specifications

## Sound

**Sound Profile:** MySound  
**Volume control on handset**  
**Ringtones on handset:** 10 Polyphonic / High-quality ringtones  
**HQ-Sound**

## Convenience

**Menu structure in the handset:** Icon Menu  
**Base Station keys:** Paging key, Volume control, Answering machine keys  
**Number of keys:** 22  
**Speakerphone — talk hands-free**  
**Personalisation:** Silent mode  
**Call Management:** Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls, Dialed calls  
**Call barring:** Restrict the phone from making specific outgoing calls  
**Backlit keypad:** White  
**Signal strength indicator:** 3 bar indicator  
**Battery level indicator:** 3 bar battery icon  
**Room monitoring**  
**Date/Time display**  
**Alarm Clock**  
**Event light on the handset**  
**Programmable hot keys:** Keys 1 to 9  
**Keypad lock**  
**Key tone on/off**  
**Auto Registration**  
**Auto hang up**  
**Illuminated keypad**  
**Enlarge dialling digit**  
**Up to 18 hrs talk time**  
**Up to 250 hrs standby time**  
**Charge time:** 8 hours  
**Line cord length:** 1.8 m  
**Power cord length:** 1.8 m  
**Range:** Open field <300 m; indoor <50 m  
**Family Notes**  
**Block callers/Blacklist\*:** Restrict the phone from ringing on specific incoming numbers  
**Event notifications:** for voice messages, missed calls and mute on  
**Non-slip grip:** Ripple  
**Visual ringer**

## Power

**Battery Capacity:** 650 mAh  
**Mains power:** AC 100-240 V ~50/60 Hz  
**Battery type:** AAA NiMH Rechargeable  
**Power Consumption:** <0.75 W

## Packaging dimensions

**Height:** 13.5 cm  
**Packaging type:** Carton  
**Type of shelf placement:** Laying  
**Width:** 18.4 cm  
**Depth:** 5.9 cm  
**Number of products included:** 1  
**EAN:** 69 51613 99946 2  
**Gross weight:** 0.39 kg  
**Nett weight:** 0.32 kg  
**Tare weight:** 0.07 kg

## Picture/Display

**Display size:** 4.6 cm/1.8"  
**Backlight colour:** White  
**Display type:** TFT colour 262K  
**Backlight:** Yes

## Answering Machine

**Recording time capacity:** up to 30 minutes  
**Pre-recorded OGM**  
**Answering machine control:** from base and handset  
**Loud speaker on base**  
**Message indication on base:** LED (Soft Amber)

## Memory Capacity

**Call log entries:** 50 entries  
**VIP Caller Identification**  
**Phonebook:** 100 names and numbers  
**Redial List Capacity:** Last 20 numbers  
**Phonebook store in the base**  
**Multiple phonebook entries:** up to 3 numbers

## Security

**Transmission encryption:** Yes

## SAR Value

**Philips handsets:** <0.1 W/kg

## Eco Design

**EcoMode:** automatic and manual  
**Eco+**

## Network Features

**Compatible:** GAP

