



Philips
5.1 Home theatre

420 W RMS power

DVD playback

HTS3276

Spectacular surround sound with deep powerful bass

High definition pictures and surround sound delivered by this system provide amazing home entertainment. Enjoy crisp pictures with 1080p HDMI upscaling, and playback from USB drives, portable media players and virtually any sort of disc.

Brings audio and video to life

- DTS, Dolby Digital and Pro Logic II surround sound
- Advanced Class D Amplifier for compact, powerful sound
- HDMI 1080p upscales to high definition for sharper pictures
- Karaoke scoring for fun and exciting song contests at home

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- Multiple digital inputs for quality sound from other sources

Easy to set up and use

- EasyLink controls all EasyLink products with a single remote

Plays all your movies and music


- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

PHILIPS

sense and simplicity

Highlights

DTS, DolbyDigital, ProLogic II

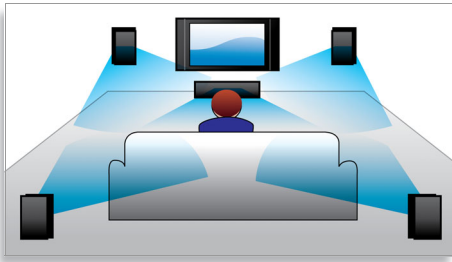

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Advanced Class D Amplifier



Advanced Class D Amplifier for compact, powerful sound


HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more

true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

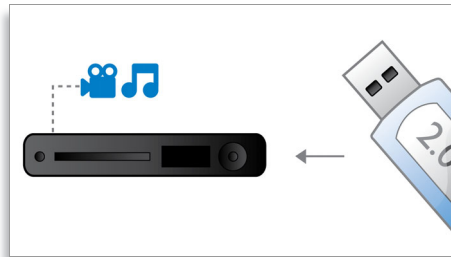

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your

singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

DivX Ultra Certified



With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling (720p, 1080i/p)

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 40-20,000 Hz
- Output power (RMS): 4 x 55 W, 2 x 100 W
- Signal to noise ratio: > 60 dB
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Total Power (RMS): 420 W
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Lounge, Rock, Sports

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, MPEG4, WMV
- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32-256 kbps and VBR
- Playback Media: DVD+R/+RW, DVD-R/-RW

Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive

Tuner/Reception/Transmission

- Tuner Bands: FM

Connectivity

- Front/Side connections: Hi-Speed USB, Microphone input 3.5 mm jack, MP3 Line-in
- Rear Connections: AUX in, Component Video output, Composite video (CVBS) output, Easy-Fit

speaker connectors, FM Antenna, HDMI output, Digital coaxial in, Digital optical out

Power

- Power consumption: 80 W
- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W

Loudspeakers

- Centre freq range: 150-20,000 Hz
- Centre speaker drivers: 3" full-range woofer
- Centre speaker impedance: 4 ohm
- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker freq range: 150-20,000 Hz
- Satellite speaker impedance: 8 ohm
- Subwoofer driver: 6.5" high-efficiency woofer
- Subwoofer type: Passive
- Subwoofer freq range: 40-150 Hz
- Subwoofer impedance: 4 ohm

Accessories

- Included accessories: 2 x AAA Batteries, CVBS video cable, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Dimensions

- Center speaker dimensions (W x H x D): 244 x 103 x 74 mm
- Centre Speaker Weight: 0.849 kg
- Front Speaker Depth: 264 mm
- Front Speaker Height: 1199 mm
- Front Speaker Weight: 3.6 kg
- Front Speaker Width: 262 mm
- Packaging dimensions (W x H x D): 962 x 409 x 444 mm
- Rear Speaker Depth: 71 mm
- Rear Speaker Height: 203 mm
- Rear Speaker Weight: 0.554 kg
- Rear Speaker Width: 103 mm
- Set dimensions (W x H x D): 360 x 57 x 331 mm
- Set weight: 2.87 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 4.703 kg
- Weight incl. Packaging: 20.7 kg



Issue date 2010-04-21

Version: 2.1.6

12 NC: 8670 000 48777
EAN: 87 12581 45936 9

© 2010 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com