

Philips  
Portable speaker

Green



SBA1610GRN

## Mobile speaker

Filling your world with rich, dynamic sound, Philips SBA1610 speakers come with a handy mobile stand that makes them incredibly easy to use.

### **Impressive sound**

- Class "D" Digital Amplifier for superb sound quality
- Neodymium speaker drivers deliver pure balanced sound
- 2W RMS total output power

### **Designed for grab and go**

- Music on the go
- Up to 8 hours music playback

### **Simplicity**

- Battery powered for portability
- Compatible with any media

**PHILIPS**  
sense and simplicity

Portable speaker  
Green

# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
16,3 x 4,9 x 5 cm
- Weight: 0,169 kg

## Compatible with

- Smartphones
- iPod
- iPhone
- Mp3 player

## Design and finishing

- Color: Green

## Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W

## Power

- Battery type: AAA

- Operating time on battery: 12 hr
- Number of batteries: 3

## Outer Carton

- Gross weight: 1,132 kg
- GTIN: 1 69 23410 71687 7
- Outer carton (L x W x H): 20 x 12,4 x 17,5 cm
- Nett weight: 0,804 kg
- Number of consumer packagings: 4
- Tare weight: 0,328 kg


## Packaging dimensions

- Packaging dimensions (W x H x D):  
8 x 19 x 5,6 cm
- EAN: 69 23410 71687 0
- Gross weight: 0,258 kg
- Nett weight: 0,201 kg
- Number of products included: 1
- Packaging type: Dummy
- Tare weight: 0,057 kg
- Type of shelf placement: Dummy

SBA1610GRN/00

# Highlights

## Class D Digital Amplifier

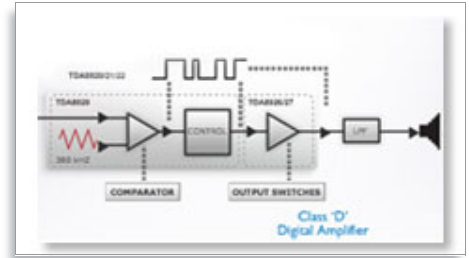

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.



Issue date 2013-02-12

Version: 2.0.8

12 NC: 8670 000 93223  
EAN: 69 23410 71687 0

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)