



Philips  
Soundbar Home theater

3D Blu-ray



HTB5150KD

## Powerful surround sound, no clutter

### Obsessed with Sound

Enjoy wide surround sound without the clutter. Philips SoundBar HTB5150KD/98 with Virtual Surround Sound incorporates a complete home theater system, including high definition Blu-ray disc Playback in a single unit!

#### Great listening experience

- 550W RMS power delivers great sound for movies and music
- Virtual Surround Sound for a realistic movie experience

#### Designed to enhance your cinema at home

- Wireless subwoofer for clutter free placement


#### Simply enjoy all your entertainment

- Dock included for convenient playback from your iPod/iPhone
- Built-in WiFi to enjoy your connected media wirelessly
- Karaoke for endless singing entertainment at home
- Smart TV Plus to enjoy online services & multimedia on TV
- Skype™ ready to make high quality video call easily
- Instant 2D to 3D conversion for a lifelike movie experience
- CinemaPerfect HD for clearer and sharper video playback
- Internet radio to enjoy the world of online radio channels
- Turn your Smartphone into a remote for Philips AV products

**PHILIPS**  
sense and simplicity

# Highlights

## Virtual Surround Sound

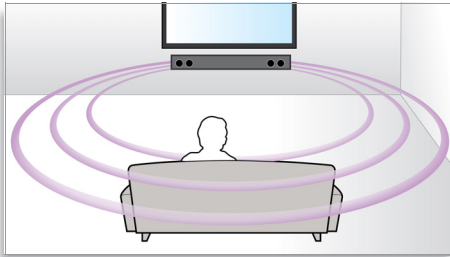

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## CinemaPerfect HD




Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved color processing, the engine produces sharp, deep images on screen.

## Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

## Internet radio

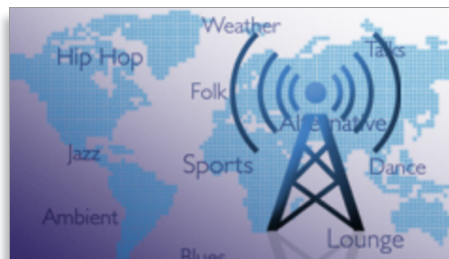

Internet radio is an audio broadcasting service that is transmitted via the Internet. Some internet stations are affiliated with a traditional (terrestrial) radio station or network while others are internet-only radio stations, which are independent and devote their broadcasts only to the World Wide Web. With Internet Radio, you can enjoy access to online radio stations from anywhere in the world and listen to a wide variety of genres, news, sports and entertainment updates, or connect to favourite or niche stations.

## Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

## Skype™ ready

Add a new dimension to your calls and contact your friends and relatives as if you are there. Simply plug in a selected\* Skype™ camera to your home theater or Blu-ray player and enjoy HD video and excellent sound quality from the comfort of your couch. Use your familiar list of Skype™ contacts from your current Skype™ account and start calling! Skype™ camera is sold separately.

## Smart TV Plus



Philips home theater & Blu-ray player with Smart TV Plus offer you an array of enhanced features, including Net TV, SimplyShare & MyRemote. Net TV brings a wide range of online information & entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music & movies stored on your PC from the comfort of your couch. You can also use your smartphone/tablet to control your home theater via Philips MyRemote app.

# Specifications

## Sound

- Equalizer settings: Gaming, MySound, Movie, Music, News, Original
- Sound Enhancement: Double Bass Sound, FullSound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Subwoofer output power: 250 W
- Surround speaker output power: 2 x 150 W
- Total Power RMS @ 30% THD: 550 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit, 2 Integrated center speakers, 4 Integrated surround speakers
- Speaker Drivers per side: 2 x 2.5" woofers, 2.5" woox
- Surround speaker freq range: 80 - 18k Hz
- Surround speaker impedance: 8 ohm
- Subwoofer type: Wireless subwoofer
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

## Connectivity

- Integrated Connections: Wi-Fi
- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2, iPod/iPhone Dock Jack, MIC In/Music iLink, USB, USB (For VOD/BD-LIVE only)
- iPod/iPhone: Dock included, via 3.5mm Music iLink
- Smart TV Plus: MyRemote App, Net TV, SimplyShare
- MyRemote App: MySound, SimplyShare, Virtual Remote

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Skype ready: Camera sold separately

## Tuner/Reception/Transmission

- Internet Radio
- Tuner Bands: FM
- Number of Preset Channels: 40

## Optical Playback Media

- Playable Discs: 3D Blu-ray, AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD

+R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, ra, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, flv, mkv, mp4, mpeg, mpg, wmv

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

## Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

## Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 60 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: 0.5 W

## Sustainability

- Packaging: Electronic User Manual

## Dimensions

- Main Unit (W x H x D): 1060 x 83.1 x 194.8 mm
- Main Unit Weight: 4.9 kg
- Subwoofer (W x H x D): 195 x 298 x 410 mm
- Subwoofer Weight: 7.2 kg
- Packaging (W x H x D): 1140 x 518 x 260 mm
- Weight incl. Packaging: 14.9 kg

## Accessories

- Compatible accessories: Designated Skype Camera\*, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, DCK3061 iPod/iPhone dock, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet



Issue date 2013-03-21

Version: 6.1.4

12 NC: 8670 000 90431  
EAN: 87 12581 64542 7

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Designated FreeTalk Skype camera <TALK-7191>, for details, please visit [www.freetalk.me/philips](http://www.freetalk.me/philips)