

Philips
DVD player



DVP4080

Small on space, big on picture quality

Be in total empowerment to enjoy sharp, crystal-clear picture and sound quality movies and music wherever and whenever you desire. It's your home entertainment - at your control.

Brings audio and video to life

- High quality outputs for analog and digital audio
- Progressive Scan component video for optimized image quality
- Smart Sound optimizes audio settings

Plays all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

Fits any space, any lifestyle

- Compact design that fits anywhere

PHILIPS
sense and simplicity

Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling, 3/2 - 2/2 motion pull down

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 65 dB
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD-R/CD-RW, CD, DVD, DVD-R/-RW, DVD+R/+RW, Video CD/SVCD
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW
- MP3 bit rates: 32 - 256 kbps
- Compression format: MP3, WMA, PCM, Dolby Digital

Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-

- R/RW, Picture CD, Kodak Picture CD
- Picture compression format: JPEG
- Picture enhancement: Rotate, Zoom, Slideshow, Flip photos

Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, ComponentVideo out Progressive

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Malay, Korean, Simplified Chinese, Thai, Traditional Chinese

Power

- Power consumption: < 10 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.8 W

Accessories

- Included Accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, World Wide Warranty leaflet, Power cord, User Manual

Dimensions

- Set dimensions (W x H x D): 226 x 48 x 209 mm




Highlights

Plays it all


Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theater system - in the comfort of your living room.

Progressive Scan

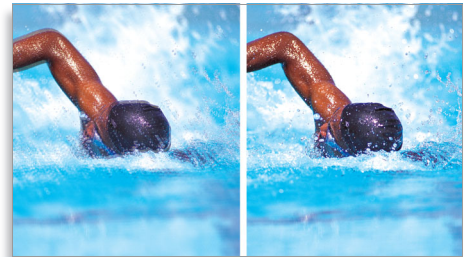

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Smart Sound

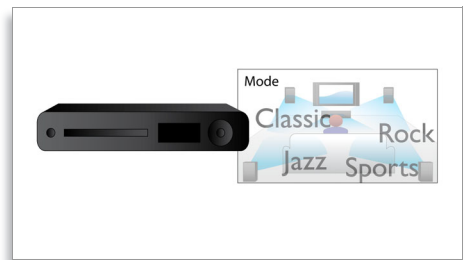

Smart Sound provides the optimal sound settings for ultra bass, bass, treble and balance so that you can get the best entertainment experience.



Issue date 2009-06-11

Version: 1.1.7

12 NC: 8670 000 28506
EAN: 87 12581 32591 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com