

Philips
5.1 3D Blu-ray Home
theater

Crystal Clear Sound

Wireless rear speakers
Built-in WiFi, Bluetooth & NFC
1000W



HTB5550G

1000W Powerful cinematic surround sound

with wireless rear speaker

Enrich music and movies, with this Philips home theater . With a 15mm soft-dome, horn-loaded tweeter, audio has never sounded more distortion-free. With a powerful 3 x stronger "Ribbed" Bass Reflex system for ultra-lifelike low notes.

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- Crystal Clear Sound for super clarity and realism
- Dolby TrueHD and DTS-HD for high fidelity surround sound

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Built-in WiFi to enjoy your connected media wirelessly
- Bluetooth wireless music streaming from your music devices
- Karaoke for endless singing entertainment at home

Designed to enhance your cinema at home


- Unleash your Miracast™- certified device content on your TV
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Wireless rear speakers for fewer wires across your room
- Touch panel for intuitive playback and volume control



PHILIPS

Highlights

Crystal Clear Sound

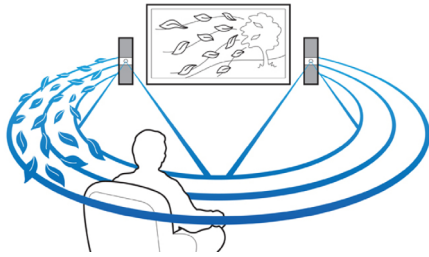

Crystal Clear Sound for super clarity and realism

1000W RMS power



1000W RMS power delivers great sound for movies and music


Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of


content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Built-in WiFi

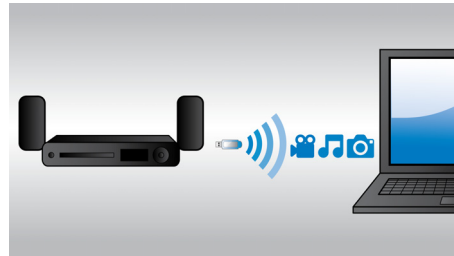

Thanks to built-in WiFi, by simply connecting your home theater directly to your home network, you can experience a rich selection of popular online services. You can enjoy some of the best websites offering movies, pictures, infotainment and other online contents tailored to fit your TV screen.

Bluetooth wireless streaming

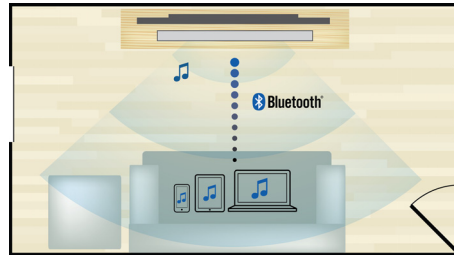

Bluetooth wireless music streaming from your music devices

Karaoke for endless singing




Karaoke for endless singing entertainment at home

Miracast™



Miracast™ is a peer-to-peer wireless screencasting standard formed via Wi-Fi Direct connections. Simplified user interface likes screen-mirroring the portable device screen to bigger screen via Miracast™ certified device, no limit by pre-build codec for decoding.

NFC technology

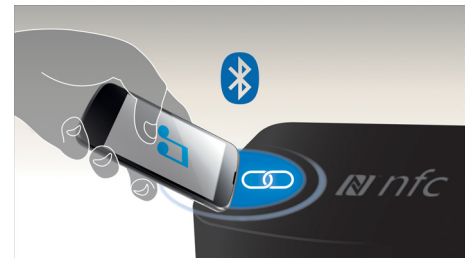

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.



MIRACAST



Specifications

Sound

- Total Power RMS @ 10% THD: 1000 W
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD Master Audio
- Sound Enhancement: Auto Volume Leveller, Dolby Digital Prologic II, Double Bass Sound, FullSound, Night Mode, Treble and Bass Control
- Center speaker output power: 166 W
- Satellite speaker output power: 4 x 166 W
- Subwoofer output power: 166 W

Loudspeakers

- Center speaker freq range: 150-20k Hz
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker impedance: 3 ohm
- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Satellite speaker freq range: 150-20k Hz
- Satellite speaker impedance: 3 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 8" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- Front Connections: Audio in, USB, Microphone In
- Rear Connections: Digital coaxial in, Digital optical in, Ethernet, HDMI 1.4 output (ARC), Easy-Fit Speaker Jacks
- Integrated Connections: Bluetooth, Wi-Fi, Miracast, NFC, Wireless rear audio

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Deep color
- Ease of Use: DLNA
- Online services: YouTube

Tuner/Reception/Transmission

- Tuner Bands: FM

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, Dolby Digital, DTS, FLAC
- MP3 bit rates: 8 - 320kbps

Video Playback

- Compression formats: AVCHD, MPEG1, MPEG2, MPEG4, DivX Plus HD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan

Karaoke Playback

- Standard functions: Mic volume control

Power

- Power consumption: 160 W
- Power supply: 220-240V
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 435 x 58 x 291 mm
- Center Speaker (W x H x D): 314 x 103 x 83 mm
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 1178 x 101 mm
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 100 x 192 x 125 mm
- Rear Speaker cable length: 6 m
- Subwoofer (W x H x D): 228 x 293 x 310 mm
- Subwoofer cable length: 3 m

Accessories

- Included accessories: FM antenna, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, Wireless rear audio receiver, 2 x AAA Batteries

Packaging dimensions

- EAN: 87 12581 71243 3
- Packaging dimensions (W x H x D): 93.6 x 39.2 x 37.6 cm
- Gross weight: 19.75 kg
- Nett weight: 17.36 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.39 kg
- Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 71243 3
- Gross weight: 19.75 kg
- Outer carton (L x W x H): 93.6 x 37.6 x 39.2 cm
- Nett weight: 17.36 kg
- Number of consumer packagings: 1
- Tare weight: 2.39 kg

Product dimensions

- Product dimensions (W x H x D): 43.5 x 5.8 x 28 cm
- Weight: 2.67 kg



Issue date 2015-08-25

Version: 3.0.4

12 NC: 8670 001 12198
EAN: 87 12581 71243 3

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.
* DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc. and are used under license.
* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.