




Philips  
Wireless speaker

### Bluetooth® and NFC

USB port for charging  
Built-in microphone for calls  
12W, Battery or AC operated

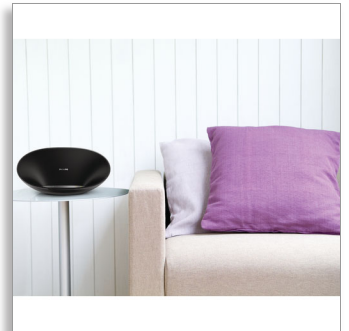

SB3350

## Sound that fits your home

Built to slip seamlessly into any lifestyle, the battery operated and NFC equipped SB3350 is combatable with all Bluetooth enabled devices for high quality music streaming.

### Crystal clear sound

- Wireless music streaming via Bluetooth
- DBB to preserve low tones for deep bass at any volume level
- Dynamic room-filling sound

### Advanced versatility

- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for speaker phone conversation
- Charge second mobile device via USB port
- Battery or AC power option for music enjoyment anywhere
- Audio-in for portable music playback

### Elegant and compact

- Compact design for any space, any lifestyle


# PHILIPS

## Wireless speaker

Bluetooth® and NFC USB port for charging, Built-in microphone for calls, 12W, Battery or AC operated


# Highlights

### NFC technology

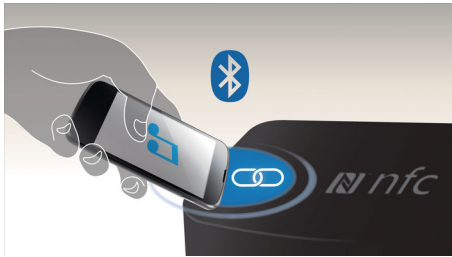

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

### Wireless music streaming

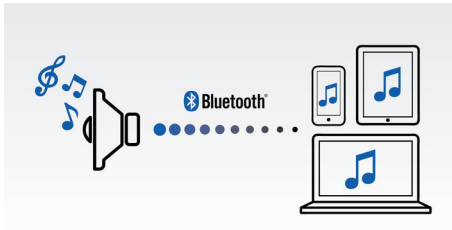


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

### Dynamic room-filling sound

With an advanced digital sound processing algorithm, two active speaker drivers and bass port,

this docking speaker fills your room with clear natural sound and deep powerful bass.

### USB for second device

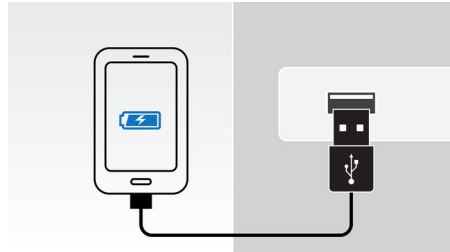

For added convenience, this speaker also boasts a USB port for charging a second mobile device even when your iPod/iPhone is docked.

### Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

SB3350/98

# Specifications

### Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5
- iPod touch: 3rd generation or later
- Android tablets & smartphones
- other Bluetooth-enabled device

### Sound

- Output power: 12 W RMS
- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: up/down

### Connectivity

- Bluetooth profiles: A2DP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

### Charging

- USB devices: 5V, 1A

### Dimensions

- Product dimensions (WxDxH): 274 x 143 x 136 mm
- Packaging dimensions (WxDxH): 350 x 140 x 186 mm

### Power

- Power supply: 100 - 240V AC, 50/60Hz
- Battery type: AA size (LR6)
- Number of batteries: 4
- Battery life time: 8 hr



Issue date 2020-07-08

Version: 1.0.2

12 NC: 8670 001 07693  
EAN: 87 12581 70003 4

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)