



Philips  
Micro music system

**Bluetooth®**

CD, USB, FM  
Desktop or wall-mount option  
20W max



**BTM2280W**

# Sound system that fits your home

Obsessed with sound

Let your portable music play on at home. This Philips micro music system comes with USB Direct and Audio in. Even with wireless music streaming via Bluetooth, it gives you fuss-free musical enjoyment.

#### **Enrich your sound experience**

- 20W RMS maximum output power
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Sound Control

#### **Enjoy your music from multiple sources**

- Wireless music streaming via Bluetooth
- USB Direct for easy MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- Audio-in for portable music playback
- Digital tuning with preset stations for extra convenience

#### **Design that blends into your interior**

- Wall-mountable option for flexible placement
- Compact design fits any space, any lifestyle

# PHILIPS

## Highlights

### Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

### Wall-mountable



The perfect combination of a slim and versatile design, your Philips audio system is cleverly designed to blend into your living space. The base of the audio system is a stand so the system can sit securely and nicely on any shelf or cabinet. When wall mounted you have all the same flexibility of the freestanding stand.

### USB Direct for easy MP3 music




Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

### Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

### Wireless music streaming

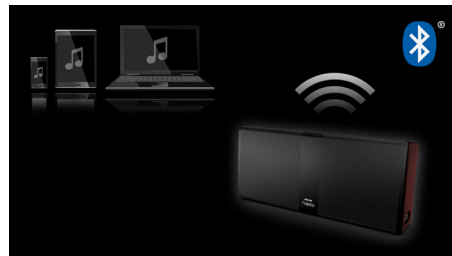

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## Specifications

### Sound

- Volume control: up/down
- Maximum output power (RMS): 20W
- Sound Enhancement: Digital Sound Control

### Loudspeakers

- No. of built-in speakers: 2
- Speaker drivers: 2.75" woofer
- Speaker types: bass reflex speaker system

### Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

### Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

### Connectivity

- Headphone: 3.5 mm
- USB: USB host
- Audio in (3.5mm)
- Bluetooth: Bluetooth V2.1, Yes
- Bluetooth profiles: A2DP

### Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Charging device: iPad, iPhone, iPod
- Display type: LED display
- Loader type: slot

### Accessories

- Included accessories: AC-DC Adapter, FM antenna
- Remote control: 21-key remote
- User Manual: Multi languages

### Dimensions

- Set dimensions (W x D): 420 x 99 mm
- Set height (with stand): 223 mm
- Packaging width: 460 mm
- Packaging height: 142 mm
- Packaging depth: 265 mm
- Gross weight: 4.2 kg
- Net weight: 3.3 kg

### Power

- Power supply: 110-240V, 50/60 Hz



Issue date 2014-06-13

Version: 1.0.3

12 NC: 8670 001 12959  
EAN: 87 12581 71449 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)