


Philips  
wireless portable speaker

Bluetooth  
Blue

BT150A

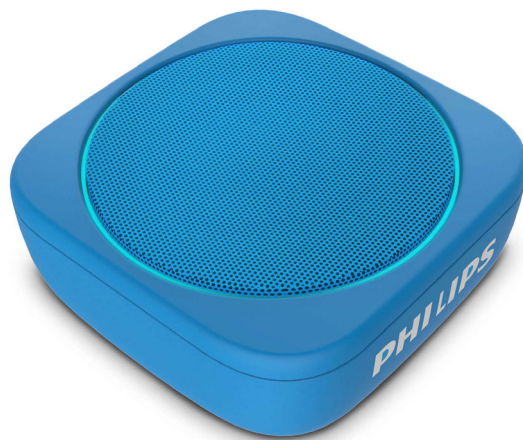

## Pool party. Shower party. Your party.

Wherever. Whenever. This waterproof Bluetooth speaker packs chunky bass into a tiny package and gives you surprisingly big sound. You get eight hours play time and audio-in. From the pool to the shower-make it your kind of party.

### **Bring the tunes. Anywhere.**

- Buttons on speaker for play and volume/skip tracks
- Finely knitted detachable carry strap
- Hang it from your bag, or on your bike. 9.5x9.5x3.8 cm
- LED lights around the speaker grille. Blue/random colors

### **Music or calls**

- Audio-in. Connect to almost any source
- Built-in mic. Take your calls via the speaker
- Up to 10 m wireless range

### **Turn it up. In the pool. In the shower.**

- 1.5" full-range speaker. A passive radiator boosts bass
- 8 hours play time. USB charging. Micro USB cable included
- Anti-clipping function. Play it loud without distortion
- Waterproof to 1 m for up to 30 minutes. IPX7-rated

# PHILIPS

# Specifications

## Sound

- Output power (RMS): 4W
- Sound System: Mono

## Design and finishing

- Color: Blue

## Connectivity

- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

## Convenience

- Display type: LED display (multi-color)
- Water resistance: IPX7

## Compatibility

- other Bluetooth-enabled device
- work with: up to iOS 10.2, Bluetooth 4.2 or below

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: up to 10 hour(s)

## Accessories

- Included accessories: Quick install guide, World Wide Warranty leaflet, carrying strap
- Cable: USB charging cable

## Dimensions

- Product dimensions (WxDxH): 9.5 x 9.5 x 3.95 cm
- Weight incl. Packaging: 0.3 kg
- Packaging dimensions (WxDxH): 11.5 x 5 x 15 cm
- Product weight: 0.21 kg

# Highlights

## Waterproof and ready to go

Poolside, lakeside, in the shower. This waterproof IPX7-rated speaker floats and can withstand being submerged in depths of up to 1 m for up to 30 minutes.

## 8 hrs play time. USB charging.

The battery gives you 8 hours play time from a full charge. Charging takes around 3 hours, and is easy via the included micro USB cable.

## Control your music

Control the music from buttons on the side of the speaker. Press for play and double-press the volume up/down buttons to skip tracks. The speaker grille has LED lights that glow a steady blue, or flash random colors.

## Crisp sound. Punchy bass.

The 1.5" full-range speaker delivers crisp, clear sound even when you play it loud. A passive radiator boosts the bass giving you that much more punch on the low-end tones.

## Built-in mic

Power on the speaker and it's ready to pair with your Bluetooth device. The wireless range is 10 m and the built-in mic lets you take calls out loud. When a call comes in, the music pauses automatically.

## Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.

## Anti-clipping function

Anti-Clipping lets you play music louder and keeps its high quality, even when the battery is low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

## Detachable carry strap

Finely knitted detachable carry strap

## Hang it from your bag

Hang it from your bag, or on your bike. 9.5x9.5x3.8 cm

## LED lights

LED lights around the speaker grille. Blue/random colors

## Up to 10 m wireless range

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wirelessly on this speaker easily.



Issue date 2024-03-24

Version: 2.0.3

EAN: 69 51613 99728 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)