




Philips  
Portable CD Player

AX2500

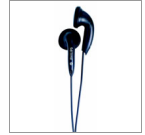

## Jogproof

With its conveniently round form and engaging translucent CD door design, the fun and vibrant AX2500 will liven up your music experience on the go. Enjoy smooth, skip-free music - anytime, anywhere.

### **Jogproof**

- 45-second ESP™

### **Enhanced bass performance**

- Dynamic Bass Boost for deep and dramatic sound

### **Enjoy all kinds of discs**

- Play CD, CD-R and CD-RW discs

# PHILIPS

# Specifications

## Sound

- D/A converter: 1-bit
- Frequency response: 20 - 20 000 Hz
- Signal to noise ratio: >82 dB
- Sound Enhancement: Dynamic Bass Boost
- Output Power: 2 x 4mW RMS
- Volume Control: digital
- Acoustic Feedback

## Audio Playback

- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: Fast Forward/Backward, Hold, Repeat Play, Resume Playback from stop, Shuffle Play, Scan
- Electronic Skip Protection(CD): 45

## Connectivity

- DC in: 4.0 mm, 4.5V, centre +
- Headphone: 3.5 mm

## Convenience

- Display Type: LCD
- Indications: battery status, Cd functions, DBB, ESP, time, track

## Accessories

- Headphones: AY3806 earphones
- Included accessories: User Manual

## Dimensions

- Master carton dimensions: 308 x 244 x 344 mm
- Master carton weight: 2.54 kg
- Master carton quantity: 5
- Packaging dimensions (W x H x D): 208 x 309 x 60 mm
- Packaging type: Clamshell
- Product dimensions (WxDxH): 140x140x27.5mm
- Product weight: 0.2 kg

## Power

- Battery type: AA, LR6, UM3
- Battery Playing Time CD: 15

# Highlights

## 45-second ESP™

Electronic Skip Protection is a convenient feature that ensures skip-free music even when your CD player is subjected to knocks and jolts while you're jogging or on the move. Devices with Electronic Skip Protection have an intelligent electronic buffer that adjusts both its contents and laser spin speeds automatically to guarantee uninterrupted music listening.

## Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2014-02-05

Version: 2.0.9

12 NC: 9073 101 02594  
EAN: 87 10895 96010 6

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Battery life varies by use and settings.