

Philips  
Wireless surround cinema  
speakers

4.1 CH wireless surround sound

Bluetooth® and NFC  
HDMI ARC

CSS5235Y



## Stereo to surround sound in seconds

with wireless detachable speakers

Bring the cinema home with the Philips wireless surround cinema speakers CSS5235Y, a stereo speaker set that transforms into a surround sound system in seconds. Enjoy incredible sound and built-in Bluetooth music streaming effortlessly.

### **Designed to enhance your living space**

- Minimalistic chic design to suit a modern decor
- Wireless subwoofer for clutter-free placement

### **Connect and enjoy all your entertainment**

- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI ARC to access all the sound from your TV


### **Richer sound for watching TV and movies**

- Surround on Demand — detachable wireless surround speakers
- Premium soft dome tweeters for Crystal Clear Sound
- Dolby Digital and Pro Logic II surround sound

# PHILIPS


# Highlights

## Surround on Demand

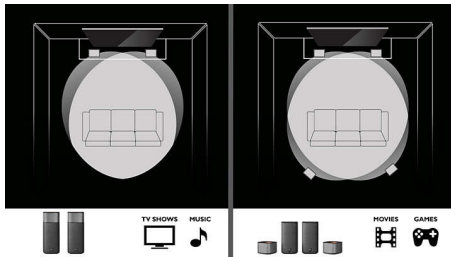

Submerge your listening senses in superb surround sound whenever you want it. Simply detach the wireless surround speakers from the left and right main speaker units and place them at the rear of the room to get a multi-channel surround sound experience with your games and movies. When the action is over, reattach the speakers for music and TV shows. Using proprietary wireless audio technology with surround speakers that operate on a unique frequency, there is no network interference. The result is a completely wireless surround system with lossless audio quality for music and movies.


## Premium soft dome tweeters

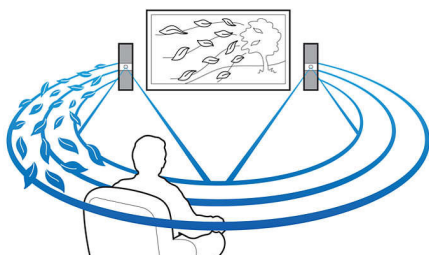

With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail the way it's meant to be heard and


as the artist or director intended! Crystal Clear Sound reproduces the sound source—whether it's an action film, a musical or a live performance—faithfully, precisely and without any distortion. Philips home theatres with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

## Bluetooth wireless streaming

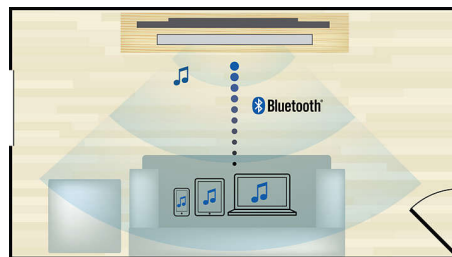

Bluetooth wireless music streaming from your music devices

## Dolby Digital and Pro Logic II

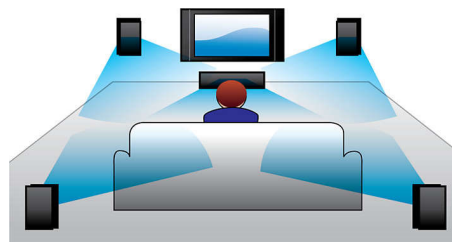


A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and

dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## HDMI ARC

HDMI ARC to access all the sound from your TV

## NFC technology

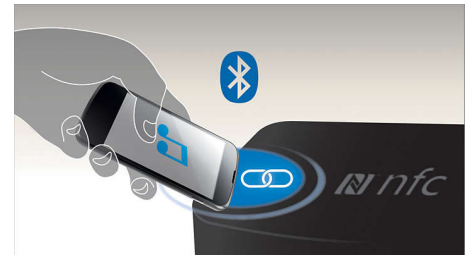

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Wireless subwoofer

Wireless subwoofer for clutter-free placement

## Minimalistic chic design

Minimalistic chic design to suit a modern decor

# Specifications

## Sound

- Sound Enhancement: Surround on demand, Night Mode, Treble and Bass Control, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital 5.1, DTS Digital Surround, Dolby pro-logic 2
- Subwoofer output power: 140 W
- Satellite speaker output power: 60 W
- Total Power RMS @ 10% THD: 200 W

## Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Satellite speaker freq range: 150-20K (-3 dB) Hz
- Satellite speaker impedance: 8 ohm
- Subwoofer freq range: 20-150 (-3 dB) Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Drivers per Satellite speaker: 1 x 1" Soft dome tweeter, 1 x 3" Full range woofer
- Drivers per Surround speaker: 1 x 2.5" Full range speaker
- Subwoofer impedance: 4 ohm
- System: 2.1/4.1 system

## Connectivity

- Rear Connections: Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC), Audio-in 3.5 mm jack
- Wireless connection: Bluetooth, Wireless subwoofer

## Outer Carton

- EAN: 69 25970 70608 7
- Length: 37 cm
- Number of consumer packages: 1
- Width: 29 cm
- Gross weight: 10.82 kg
- Height: 62 cm
- Net weight: 8.43 kg
- Tare weight: 2.39 kg

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type

## Power

- Power supply: 110-240V, 50 Hz
- Standby power consumption: <0.5 W

## Packaging dimensions

- Height: 62 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 37 cm
- Depth: 29 cm
- Number of products included: 1
- EAN: 69 25970 70608 7
- Gross weight: 10.82 kg
- Net weight: 8.43 kg
- Tare weight: 2.39 kg

## Product dimensions

- Height: 32.8 cm
- Width: 25.4 cm
- Depth: 25.4 cm
- Weight: 3.73 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

## Dimensions

- Main Unit (W x H x D): 128 X 328 X 128 mm (with detachable speakers) mm
- Subwoofer (W x H x D): 226 X 251 X 306 mm



Issue date 2024-04-13

Version: 2.0.3

EAN: 69 25970 70608 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)