

Philips  
Professional DJ  
headphones

50mm drivers/ closed-back

Over-ear  
Supra-aural cushions  
Full folding



A5PRO

## Professional DJ Headphones

in collaboration with Armin van Buuren

5-time World's Best DJ winner, Armin van Buuren collaborated with Philips to bring you the A5-PRO headphones. Backed by his experience, the A5 is engineered to meet the highest standards and demands of international DJs and industry pros.

### For DJs and audio professionals

- Source-accurate sound reproduction
- 50mm drivers engineered for 3500mW power handling
- Superior sound isolation for use in loud environments
- Closed-back architecture with isolating supra-aural cushions

### Comfortable for long sessions

- 90 degree swivel ear-shells for DJ monitoring
- Detachable, replaceable and comfortable ear cushions
- Soft, comfortable headband cushioning

### Functional and durable

- Folds into a compact form for easy storing and carrying
- 1.3m cable with coiled section extending to 4.7m
- Aluminum-hinged alloy steel headband for enhanced durability

### Ideal DJ accessories

- 3 sizes of replaceable cushions to suit different use

**PHILIPS**

Professional DJ headphones  
50mm drivers/ closed-back Over-ear, Supra-aural cushions, Full folding

A5PRO/00

## Highlights

### 50mm drivers handling 3500mW




High powered 50mm neodymium drivers are engineered for 3500mW power handling – no matter what the source is. Sound delivery is clear, dynamic and distortion-free even at high volumes or with high audio input power.

### 90 degree swivel ear-shells



Designed with the professional DJ in mind, the earpieces on these headphones can each rotate 90° – for convenient one-ear listening while track mixing. The swivel can also be put to good use even in more casual listening, when temporary attention has to be paid to outside sounds.

### Aluminum hinge construction

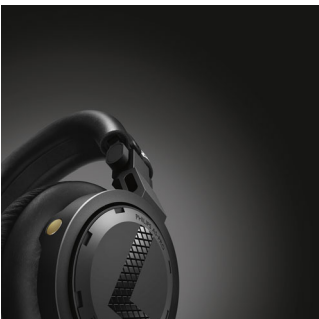


The Philips A5-PRO combines robust construction with exceptional fit. With its hard

anodized-finish and sturdy yet lightweight aluminum structure, it is the perfect companion to withstand any active DJ environment.

### Closed-back architecture

Closed-back system blocks out ambient noise.

### Coiled cable expands to 4.7m

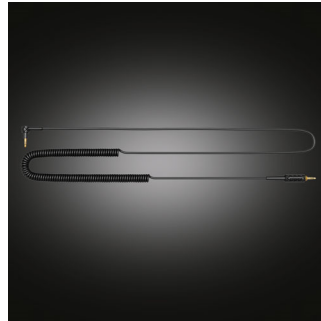

Enjoy greater freedom of movement with a 1.3m long cable with a coiled section that can extend to 4.7m. The coil also reduces the strain on parts caused by pulling, while providing extra extension without the tangled mess of cables.

### Comfortable ear cushions



The earphone materials are carefully selected to ensure both long-wearing comfort and enhanced sound performance. Deluxe breathable ear pads are designed for optimal ergonomic fit as well as to seal in bass sounds while keeping out ambient noise.

### Folds into compact form



Designed to give you the best experience on the go, your DJ headphones can be folded away for perfect portability and easy storage. Smart design and careful selection of components, like well-built hinges, allow the headphone parts to be maneuvered with ease.

### Soft, comfortable headband



The soft-cushioned headband provides long-wearing comfort.

### Source-accurate sound

The sound reproduction stays true to the original and lets you get the most out of your music.

### Superior sound isolation

Soft sealing cushions isolate your ears from the outside world, so you can focus on the beat without distraction.

# Specifications

## Sound

- Acoustic system: closed
- Frequency response: 10 – 24,000 Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 3500mW
- Sensitivity: 105 dB
- Speaker diameter: 50 mm
- Diaphragm: PET

## Connectivity

- Cable Connection: one-sided
- Cable length: 1.3 m – 4.7 m
- Finishing of connector: gold-plated
- Type of cable: Coiled Cable

## Packaging dimensions

- EAN: 69 23410 72875 0
- Packaging dimensions (W x H x D):  
19.5 x 24 x 11 cm
- Gross weight: 0.9942 kg
- Nett weight: 0.5182 kg

- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.476 kg
- Type of shelf placement: Both

## Outer Carton

- Gross weight: 2.254 kg
- GTIN: 1 69 23410 72875 7
- Outer carton (L x W x H): 23.2 x 20.4 x 26 cm
- Nett weight: 1.0364 kg
- Number of consumer packagings: 2
- Tare weight: 1.2176 kg

## Product dimensions

- Product dimensions (W x H x D):  
17.5 x 19.5 x 9 cm
- Weight: 0.405 kg

## Accessories

- Adaptor plug: 3.5 - 6.3 mm
- Coiled cable



Issue date 2014-10-15

Version: 7.1.3

12 NC: 8670 001 12574  
EAN: 06 92341 07287 50

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)