




Philips BeNear
Cordless phone

45 min answering machine
1.8" display/ white backlight
Speakerphone

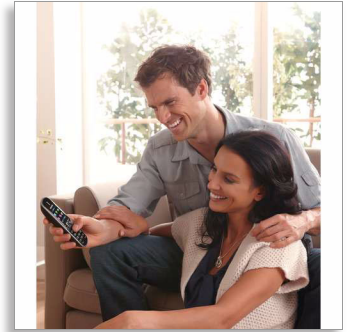

CD4961B

Bringing people closer

Bright display, exciting sound

This phone matches stunning sound quality with beautiful design and an inbuilt answering machine. The large, full-color display makes navigating easy and improves readability – not to mention making a stylish statement in your home.

Exceptional sound

- HQ-Sound: high quality acoustic engineering for superb sound
- MySound profiles to match your sound preference
- Full-duplex echo cancellation ensures a smooth conversation
- Optimized antenna layout for great reception in any room
- Handset speakerphone allows you to talk handsfree

As simple as ever

- High contrast, 4.6 cm (1.8") TFT color display
- Icon-based menu for easy navigation
- Up to 45 min. message on your answering machine
- Up to 20 hours of talk time
- Save up to 200 favorite contacts in your phonebook

Eco-conscious product

- 60% reduction of radiation when ECO mode is activated
- Low power consumption: < 0.55 W in stand-by mode

PHILIPS

Cordless phone
45 min answering machine 1.8" display/ white backlight, Speakerphone

CD4961B/51

Highlights

HQ-Sound




Philips cordless phones with HQ-Sound: build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything – high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

Full-duplex echo cancellation



Natural conversation does not involve taking turns – there is always some natural overlap. Now thanks to our full-duplex echo cancellation, you can hear perfectly, even if you are both talking at the same time.

MySound profiles

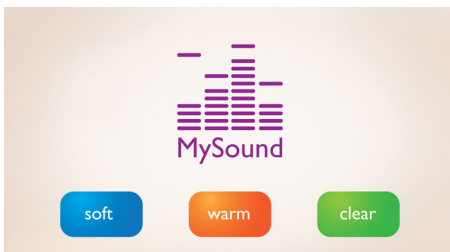

Sound perception is subjective, and everyone has their own listening preference. MySound

brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear – to make voices sound crisper and clearer; Soft – for friendly, softer tones; Warm – to make voices sound welcoming and warm.

Handset speakerphone




Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

200-name phone book



Always have the phone numbers of your loved ones available: Save up to 200 names in your phonebook.

4.6cm (1.8") TFT color display

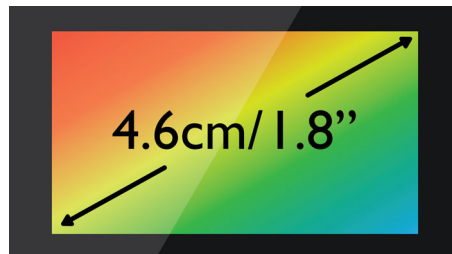

High contrast, 4.6 cm (1.8") TFT color display

Icon menu



With an easy-to-use, modern icon menu, you can find everything you need at a glance.

Up to 45 min. recording



With up to 45 minutes recording time, you'll never miss an important message.

Optimized antenna layout



Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

Specifications

Packaging dimensions

- Packaging dimensions (W x H x D): 18.5 x 13.6 x 9 cm
- Nett weight: 0.43 kg
- Gross weight: 0.545 kg
- Tare weight: 0.115 kg
- EAN: 87 12581 64377 5
- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying

Sound

- HQ-Sound
- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 polyphonic

Picture/Display

- Display size: 4.6cm / 1.8"
- Display type: TFT color 256K
- Backlight: Yes
- Backlight color: White

Answering Machine

- Recording time capacity: up to 45 minutes
- Pre-recorded OGM
- Message counter on base: Amber counter (2 x 7 segments)
- Answering machine control: from base & handset
- Loud speaker on base

Convenience

- Menu structure in the handset: Icon Menu
- Speakerphone - talk handsfree
- Personalization: Silence mode and Night mode
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 5- bar battery icon
- Intercom - multiple handsets
- Room monitoring
- Date / Time display

- Alarm Clock
- Event light on the handset
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting*, AOH/ Caller ID, Microphone mute, Missed Calls, Received Calls
- Key tone on/off
- Auto Registration
- Auto hang up
- Multi base capability: 1
- Multi handset capability: Up to 5
- Number of keys: 22
- Backlit keypad: White
- Enlarge dialing digit
- Base Station keys: Paging key
- Up to 20 hrs talk time
- Up to 300 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; in door <50m

Memory Capacity

- VIP Caller Identification
- Phonebook: 200 names and numbers
- Redial List Capacity: 20 entries
- Call log entries: 50 entries
- Phonebook store in the base

Power

- Battery capacity: 600 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz
- Power Consumption: < 0.55 W

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- EcoMode: automatic & manual



Issue date 2015-02-25

Version: 3.1.5

12 NC: 8670 000 89992
EAN: 87 12581 64377 5

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com